

creative sensation™ pro

Dress - Tips and Hints

Prepare and cut preferred pattern. Cut fabric for front piece much bigger around neckline so there is enough fabric for hooping. Embroider the cutwork. Cut all other pieces following pattern instructions. We prepared our fabric with INSPIRA™ Fuse N' Tear because we used a stretch fabric. Hoop fabric together with INSPIRA™ Tear-A-Way and embroider.

Tip: Make sure you have INSPIRA® Dissolve-A-Way Plus to put under embroidery after cutting the cutwork holes.

When embroidery is complete, cut your front piece. Mark darts and stitch them.

Tip: It may be necessary to adjust the placement of the darts as compared to the pattern, positioning them in areas with little or no embroidery. This will eliminate bulk and ensure smooth seams.

Stitch the dress together following your pattern instructions with lining and facing.

Tip: Overlock side seams separately and press seam allowances open. For certain fabrics you may choose to omit the overlock stitching.

Chose preferred length and a visible or blind hemming.