

ALL ABOUT the button sew-on foot

It's amazingly easy to sew on a button by machine. This special foot holds the button in place for stitching. And the retractable pin (1) provides for a longer thread shank for thicker buttons. Just move the lever (2), located on the side, forward to engage.

Begin by placing a 2-, 3-, or 4-hole button between the metal (3) and plastic (4) prongs. Select the pre-programmed button sewing stitch on your machine. If your sewing machine does not have such a stitch, lower the feed dogs and select a zigzag stitch and adjust the width to approximately 3mm. Be sure to check the width by turning the handwheel to check that the needle pierces the holes on the button. Sew the button in place.



TIP

When sewing on a 4-hole button, sew the front two holes first. Once completed, carefully slide the thread off the pin and move to the back two holes to continue sewing. The pre-programmed button sewing stitch will automatically lock the stitches when completed.

