




KANGAROO™
sewing furniture

ASSEMBLY INSTRUCTIONS

Bandicoot II

ITEM NO.: K8205 Teak
K8211 Ash White

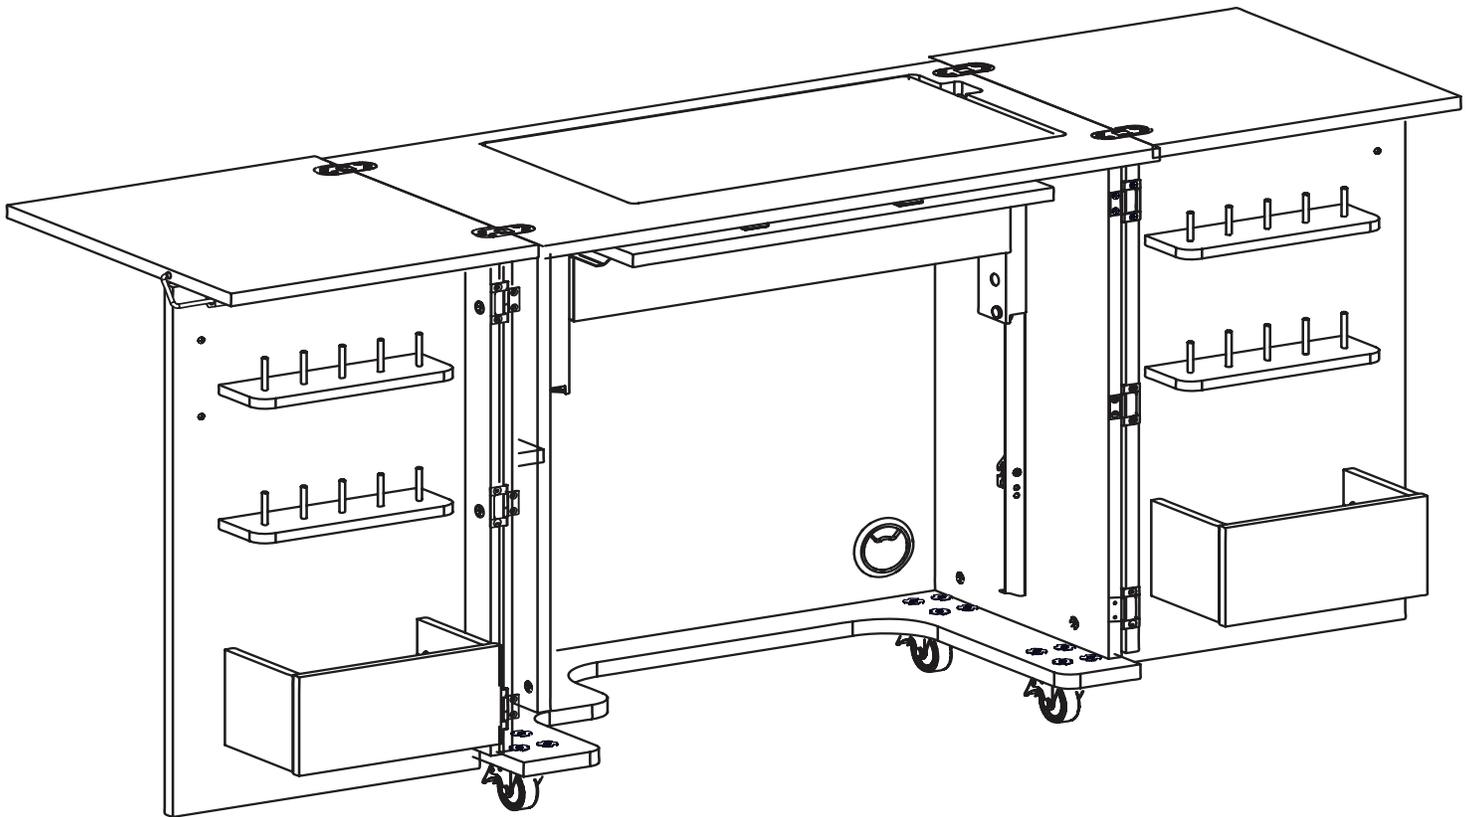

SEW IN COMFORT. SEW LONGER.™

Read the instructions carefully before starting. Please open and inspect the contents of boxes to see that all parts are included. You will need a Phillips head and a flat head screwdriver. A power screwdriver or cordless drill is preferable. Ensure that the Phillips head fits neatly and fully engages the screw to avoid damage to the screws. Make sure that you tighten all screws securely and tap wooden dowels all the way in.

Use and Care


Your cabinet normally requires a minimum amount of maintenance; however, the following points are worth noting:

Cleaning - To remove marks and enhance the surface, wipe with general purpose cleaner.



Caution - Do not use ammonia-based cleaning agents. Do not use harsh chemicals or abrasive cleansers. The surface can be wiped with a damp cloth but should be dried quickly.

Electrical and Hydraulic Lifts - Require annual lubrication.


Understanding How the Cam Fastener Works

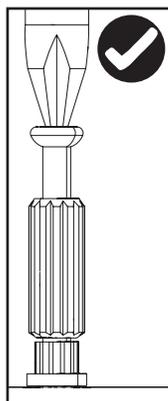


Screw cam bolts flush as illustrated.

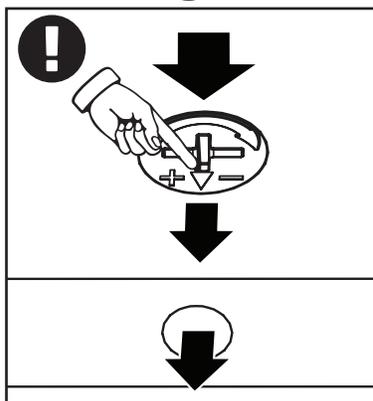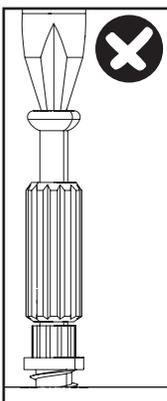

Press cam into hole until flush with surface. The arrow direction must be in the direction of the hole!

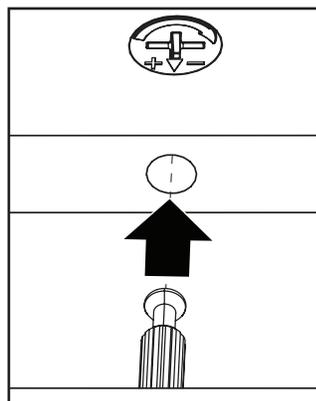


Insert bolt through pre-drilled hole in edge of panel.

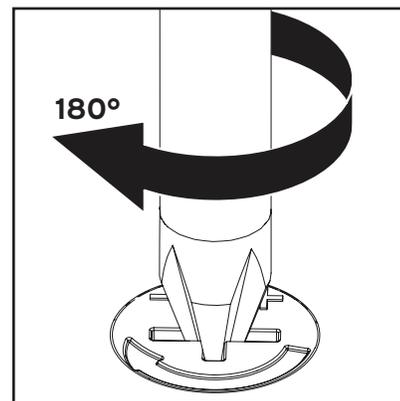

Turn clockwise to lock cam with bolt.


Parts List

ITEM	DESCRIPTION	QTY.	PACK.	ITEM	DESCRIPTION	QTY.	PACK.
A	Top Panel	1	1 of 2	V2	Right Door Panel	1	2 of 2
B	Right Leaf	1	1 of 2	O1	Left Door Edge Panel	1	2 of 2
C	Left Leaf	1	1 of 2	O2	Right Door Edge Panel	1	2 of 2
A4	Cover	1	1 of 2	F1	Door Shelf	4	2 of 2
G	Bottom Panel	1	1 of 2	L	Door Bin Front	2	2 of 2
D	Back Panel	1	2 of 2	L1	Door Bin Side	4	2 of 2
X	Left Side Panel	1	2 of 2	L2	Door Bin Bottom	2	2 of 2
Z	Right Side Panel	1	2 of 2	A3	Platform	1	2 of 2
Y	Partition	1	2 of 2		Hardware Box	1	2 of 2
F	Fixed Shelf	1	2 of 2		Lift & Rails	1	3 of 3
V1	Left Door Panel	1	2 of 2				

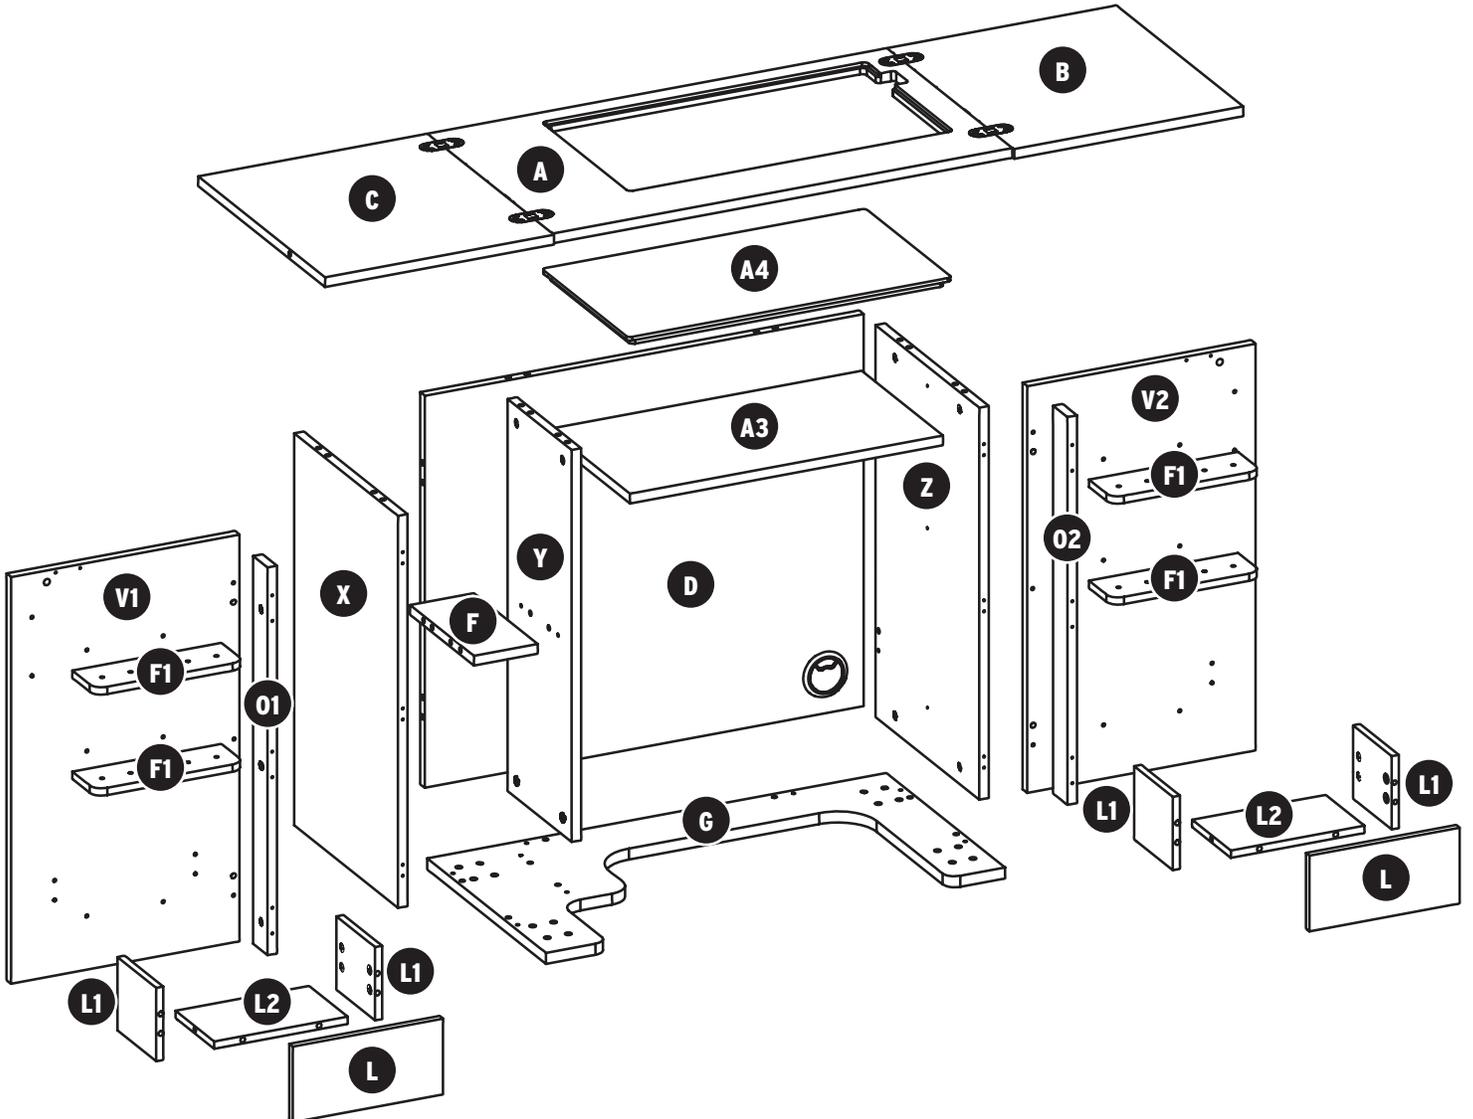

Parts List


ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
c1	6x35 Cam Bolt	30	s2	3x14 Screw	28
c3	6x25 Cam Bolt	36	h	Handle	2
d1	8x30 Dowel Pin	28	h2	Flush Hinge	6
d2	6x50 Dowel Pin	20	b2	4x20 Fix Bolt	4
c2	5/8" Cam Cover	66	b1	8x16 Fix Bolt	16
t2	Caster	4	s1	3.5x14 Screw	14
a	Wrench	1	m	Magnet, Catch Plate	2

 

c1 6x35 Cam Bolt **x30**



 c2 5/8" Cam Cover **x66**




c3 6x25 Cam Bolt **x36**



d1 8x30 Dowel Pin **x28**



 d2 6x50 Dowel Pin **x20**



b1 8x16 Fix Bolt **x16**



b2 4x20 Fix Bolt **x4**



s1 3.5x14 Screw **x14**




s2 3x14 Screw **x28**




h Handle **x2**




a Wrench **x1**

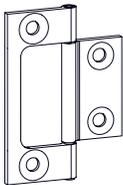


h2 Flush Hinge **x6**

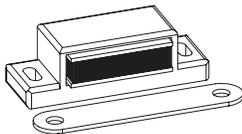

m Magnet **x2**
Catch plate **x2**

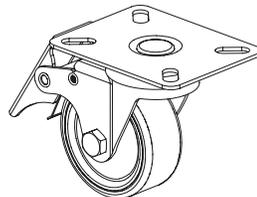

t2 Locking Plate Caster **x4**

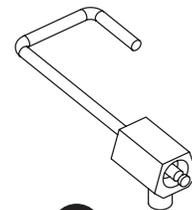

d Door Hook **x2**

Pre-installed parts



c5 Cam

c1



6x35 Cam Bolt **x14**

d1



 
8x30 Dowel Pin **x20**

s1



3.5x14 Screw **x4**


m







Magnet **x2**


Step 1. Preparation Panels A, D, X, Z, Y.

   1. Insert cam bolts **c1** into panels **A**, **X** and **Z**.
2. Insert dowel pins **d1** to panels **X**, **Z**, **Y** and **D**.
3. Attach the door magnet **m** to Top Panel **A** using **s1** screws.

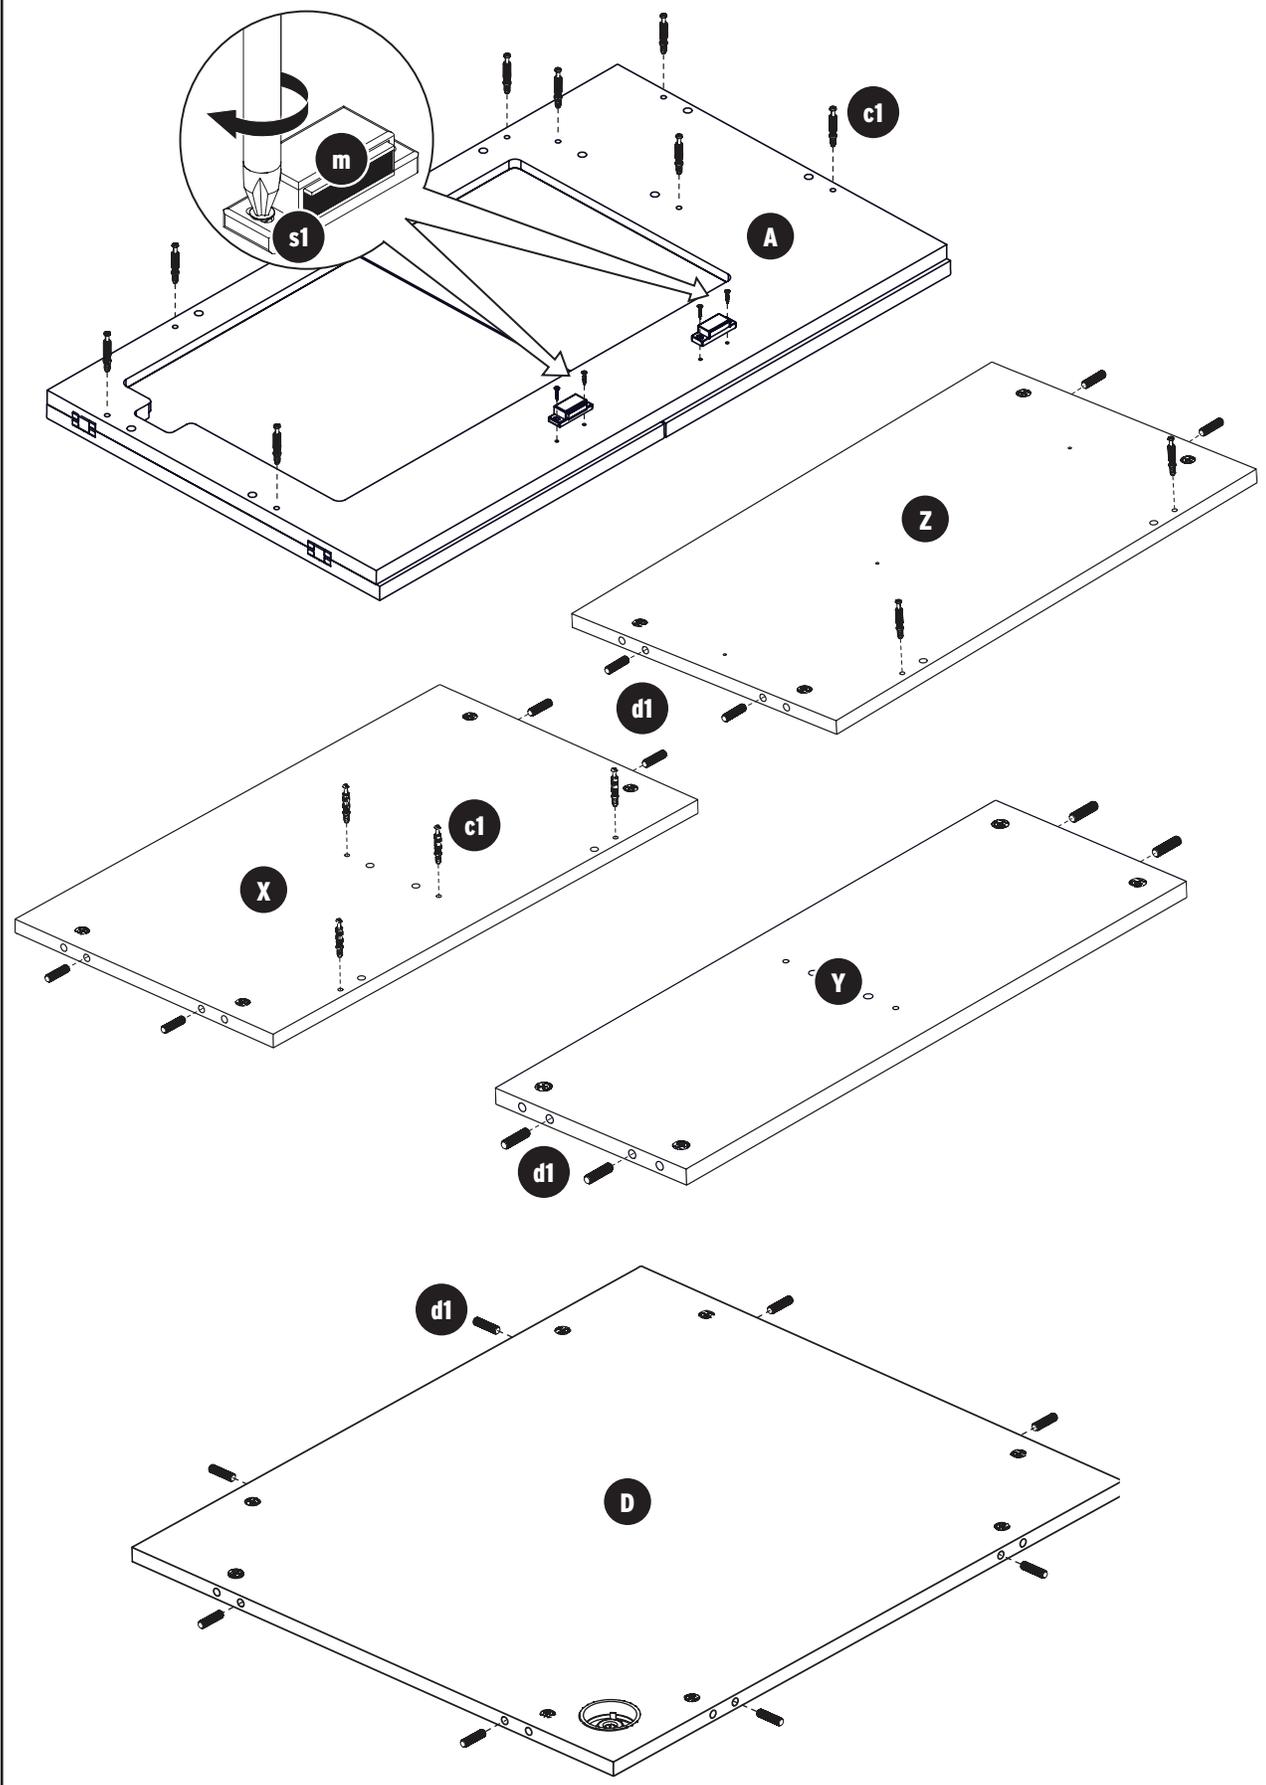


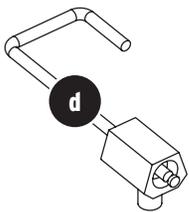c16x35 Cam Bolt **x6****c3**6x25 Cam Bolt **x36****d1**8x30 Dowel Pin **x8****d2**6x50 Dowel Pin **x20****s2**3x14 Screw **x4****m**Catch Plate **x2****d**Door Hook **x1****Step 2. Preparation Panels V1, V2, Lx2, L1x4, F, F1x4, O1 and O2.**


1. Insert cam bolts **c1** into panels **V1** and **V2**.
2. Insert dowel pins **d1** to panels **O1**, **O2**, and **F**.
3. Insert cam bolt **c3** into panels **V1**, **V2**, **L** and **L1**.
4. Insert Door Hook **d** to panels **V1** and **V2** using a hammer.
5. Fix magnet catch plate **m** to door **V1** and **V2** using **s2** screws.
6. Insert dowels **d2** into **F1** shelves.

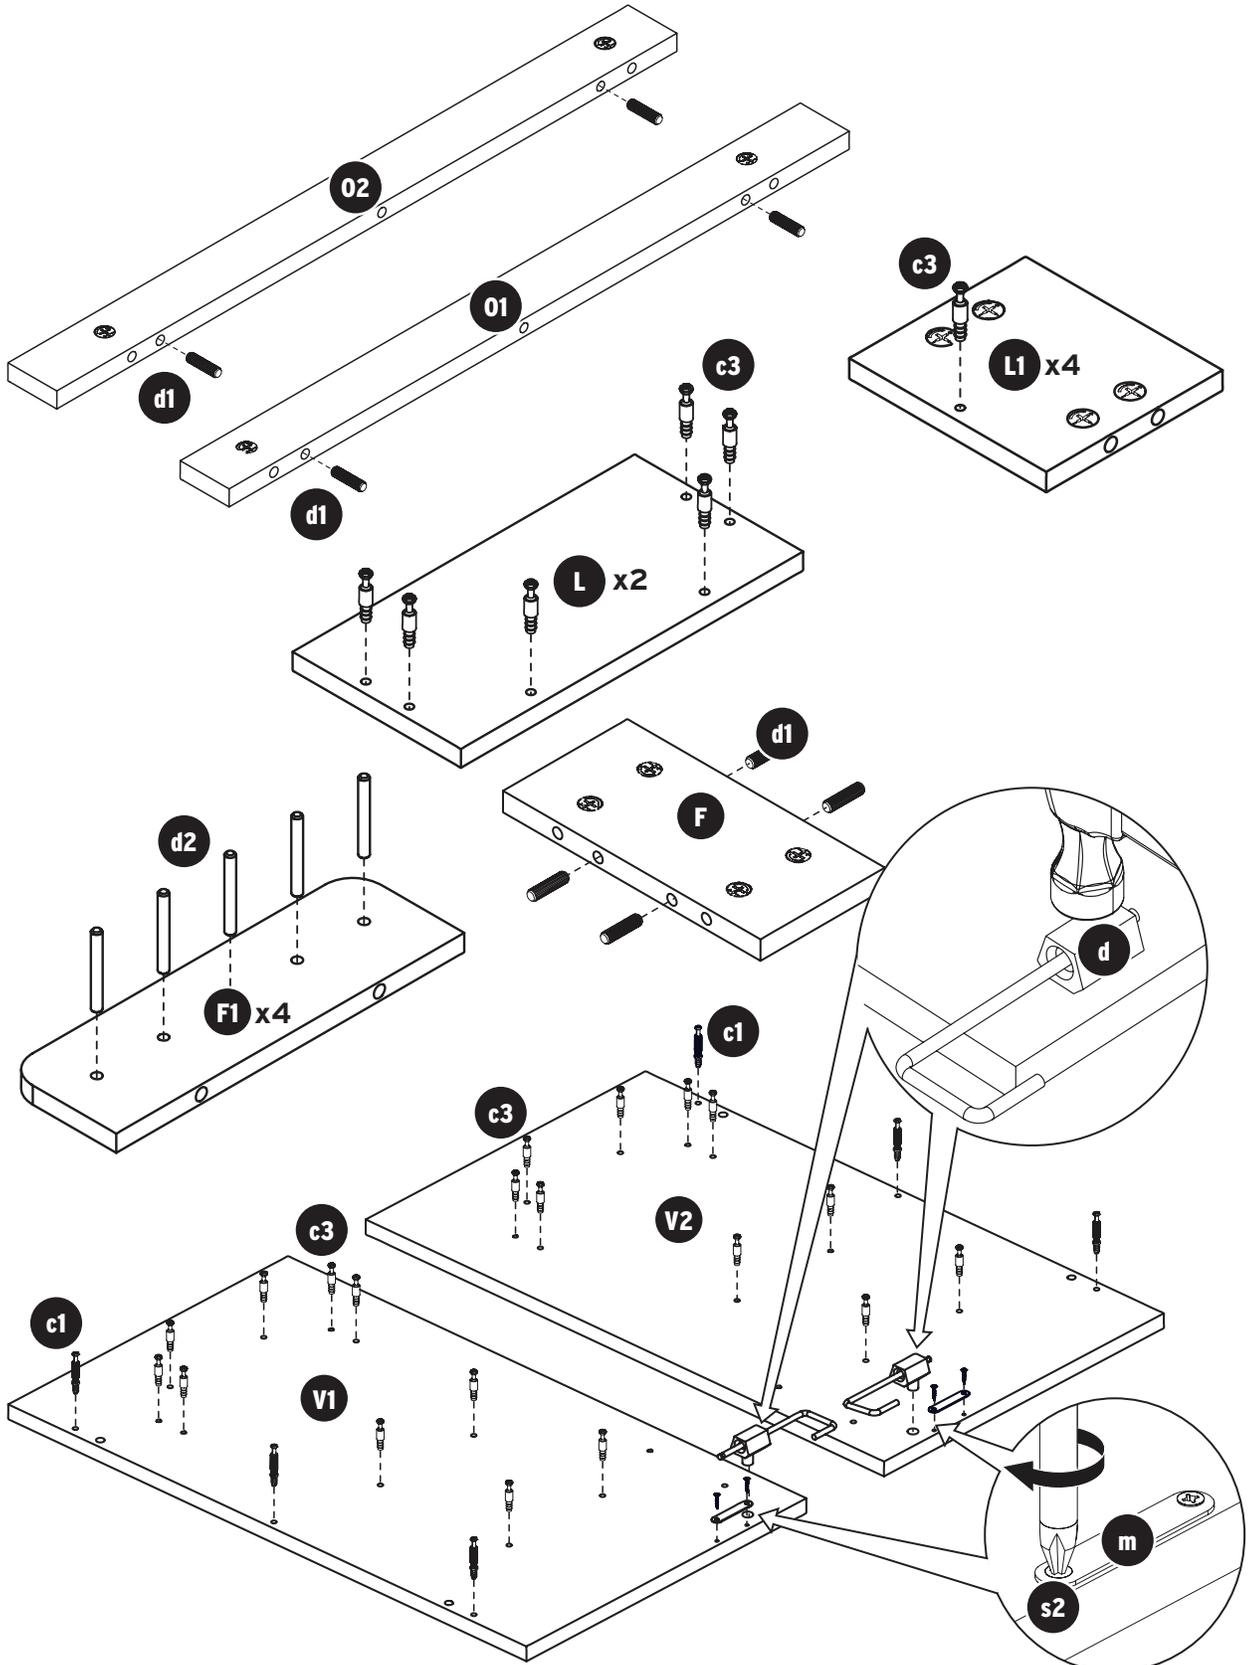

Step 3. Fix Lifter Rail (right) to Z panel with **s1** screws following predrilled holes as shown on the illustration below.

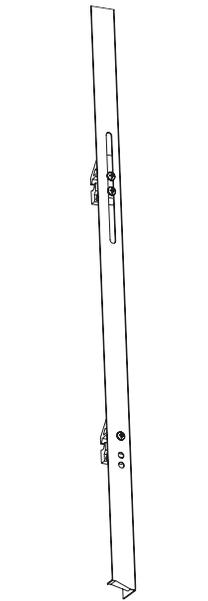


Lifter Rail (Right) **x1**

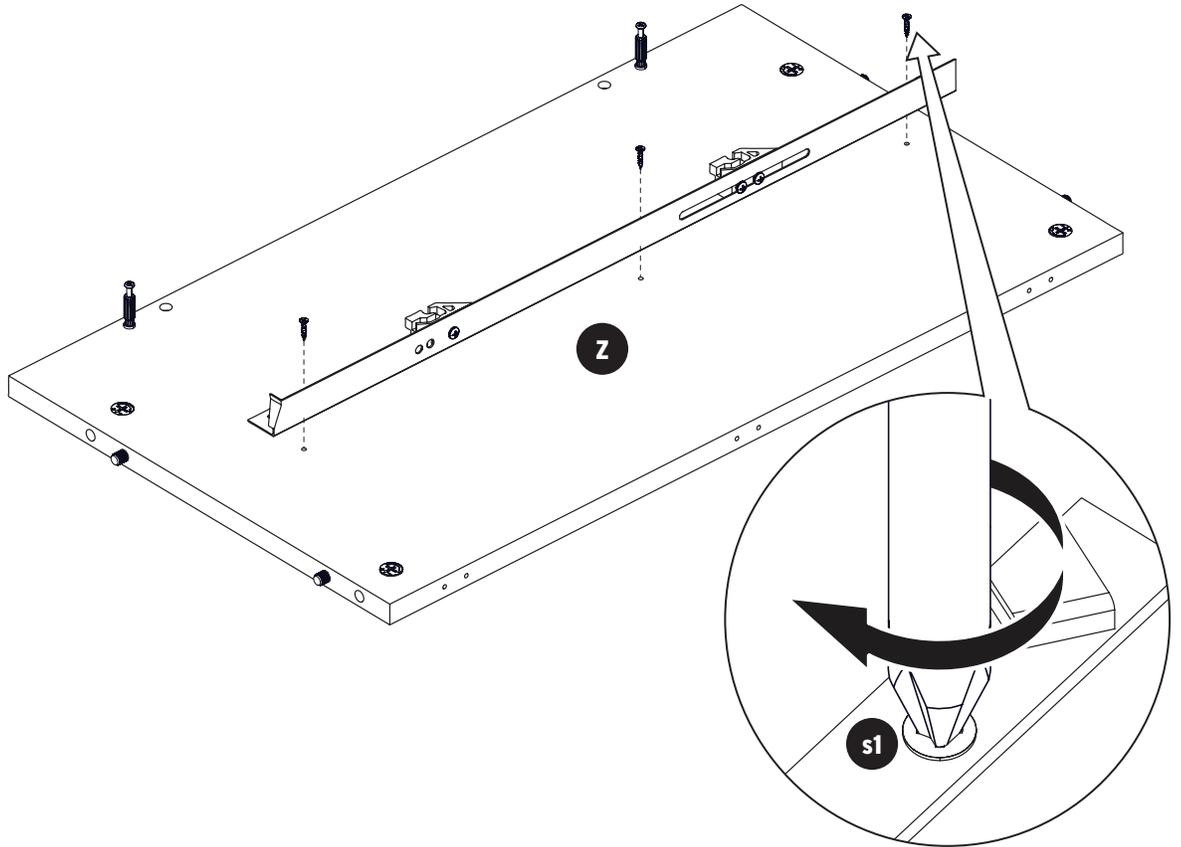


Step 4.

1. Fix Lifter Rail (Left) to Y panel with **s1** screws following predrilled holes as shown on the illustration below.
2. Turn panel Y over and insert cam bolts **c1**.

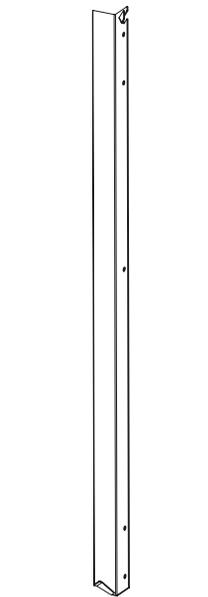

Lifter Rail (Left) **x1**

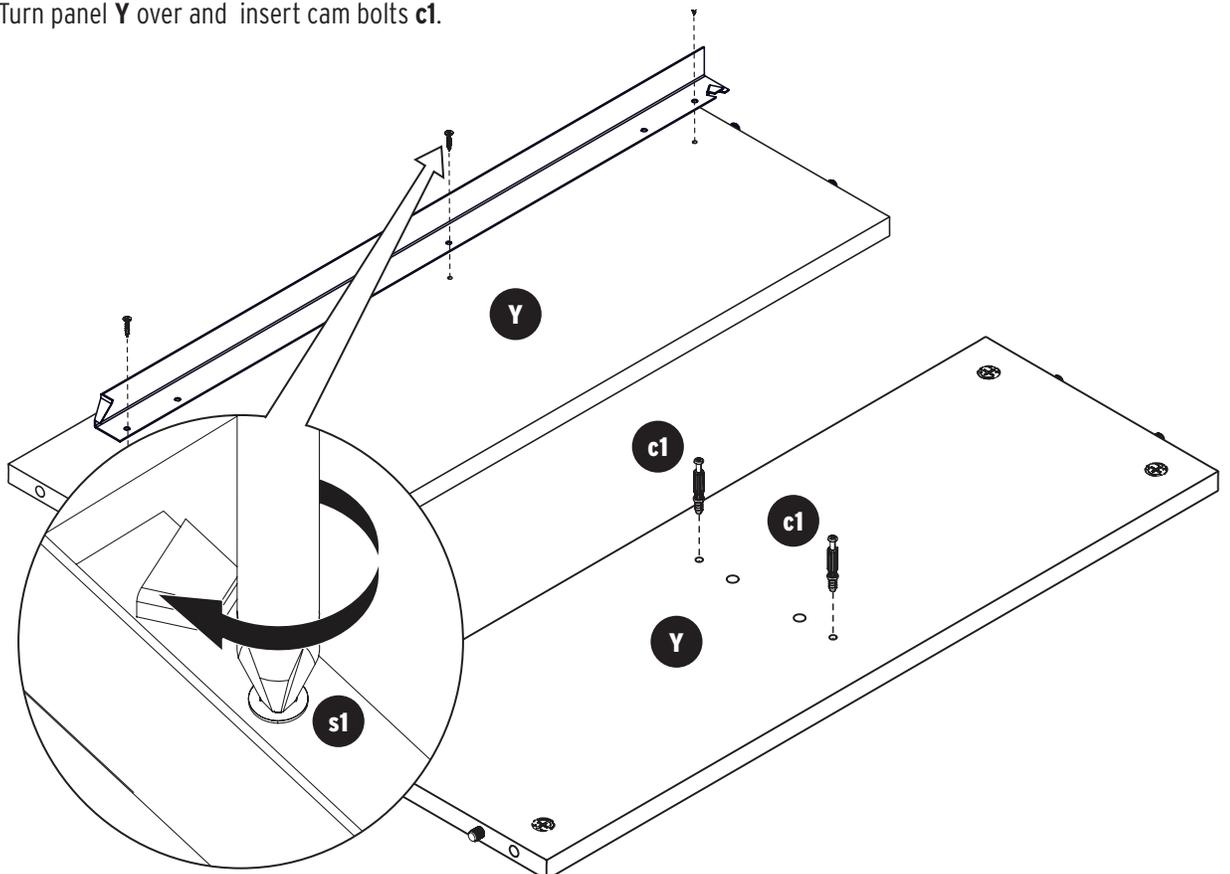


c2



5/8" Cam Cover **x4**

Step 5. Panels D, X, Z assembly.

Insert cam bolts **c1** on panels **X** and **Z** into cams on panel **D** and tighten in a clockwise direction. Apply cam covers **c2** over tightened cams.

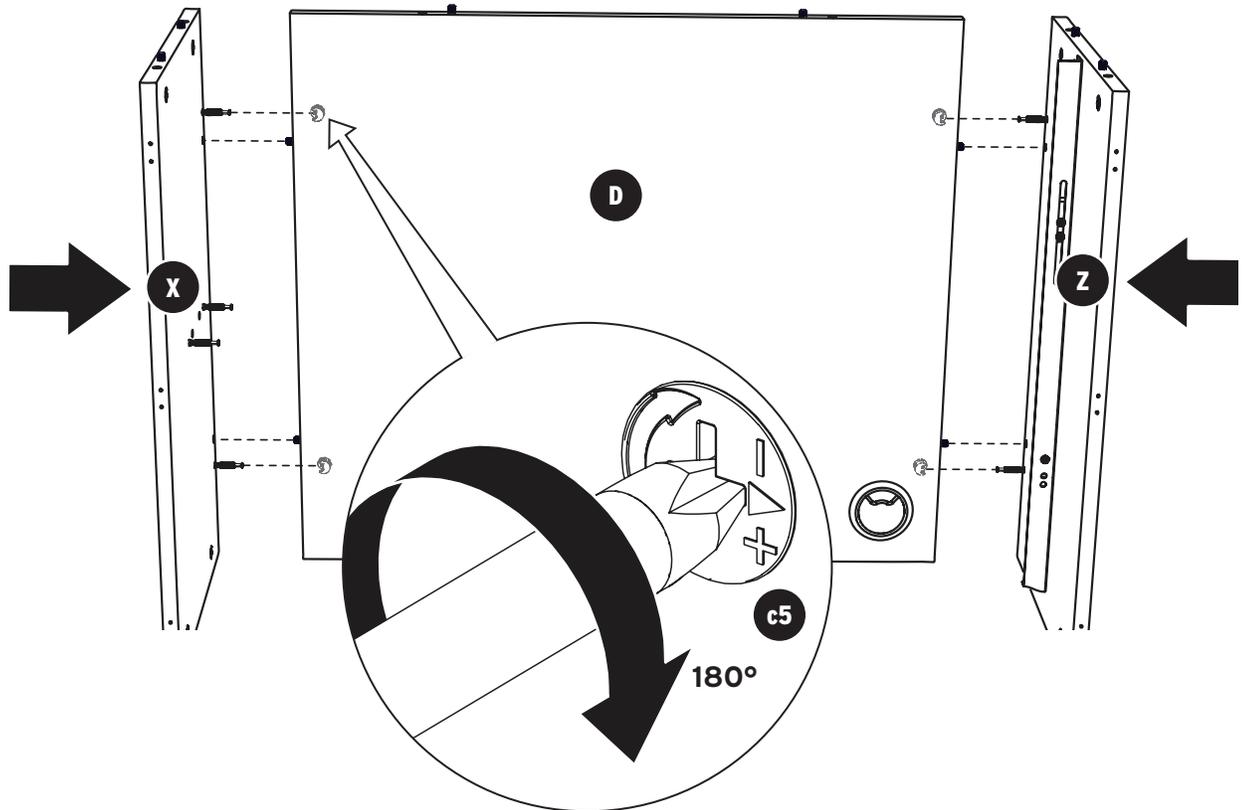


c2




5/8" Cam Cover **x4**


Step 6. Panel F and Y assembly.

 Insert cam bolts **c1** on panels **X** and **Y** into cams on panel **F** and tighten in a clockwise direction as illustrated below. Apply cam covers **c2** over tightened cams.

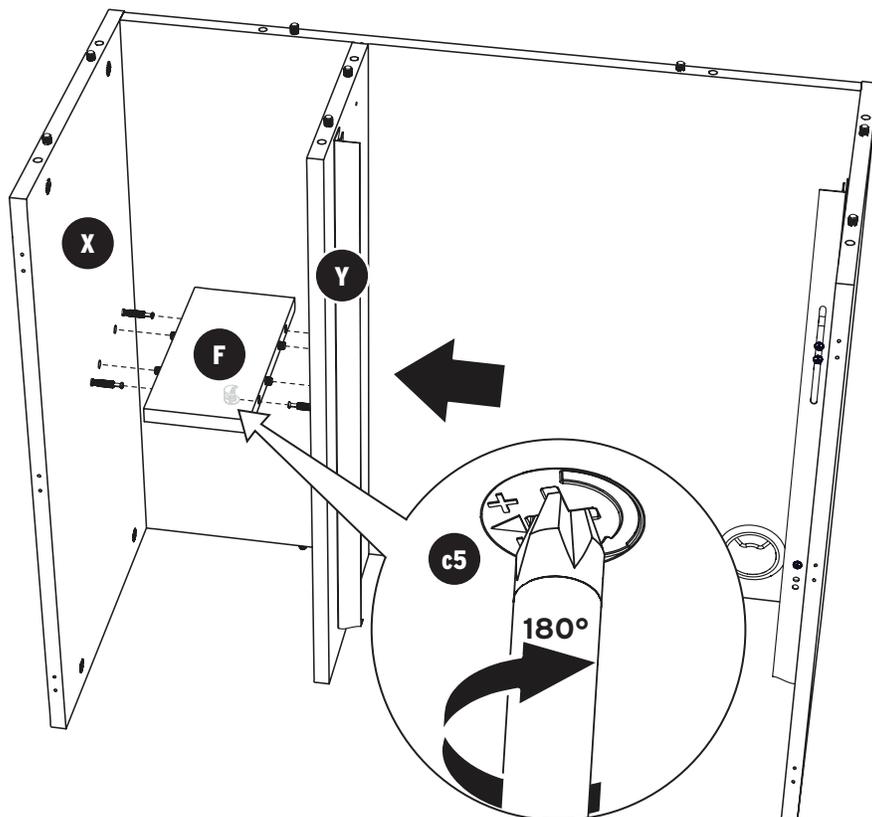



8x16 Fix Bolt **x16**

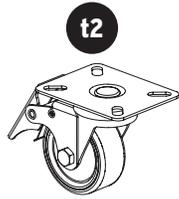

Locking Plate Caster **x4**




Wrench **x1**



6x35 Cam Bolt **x8**

Step 7. Panel G assembly.

1. Fix casters **t2** to panel **G** with bolts **b1** as illustrated below. Tighten with wrench **a**.
2. Turn panel over.
3. Install cam bolts **c1** into panel **G** as illustrated below.

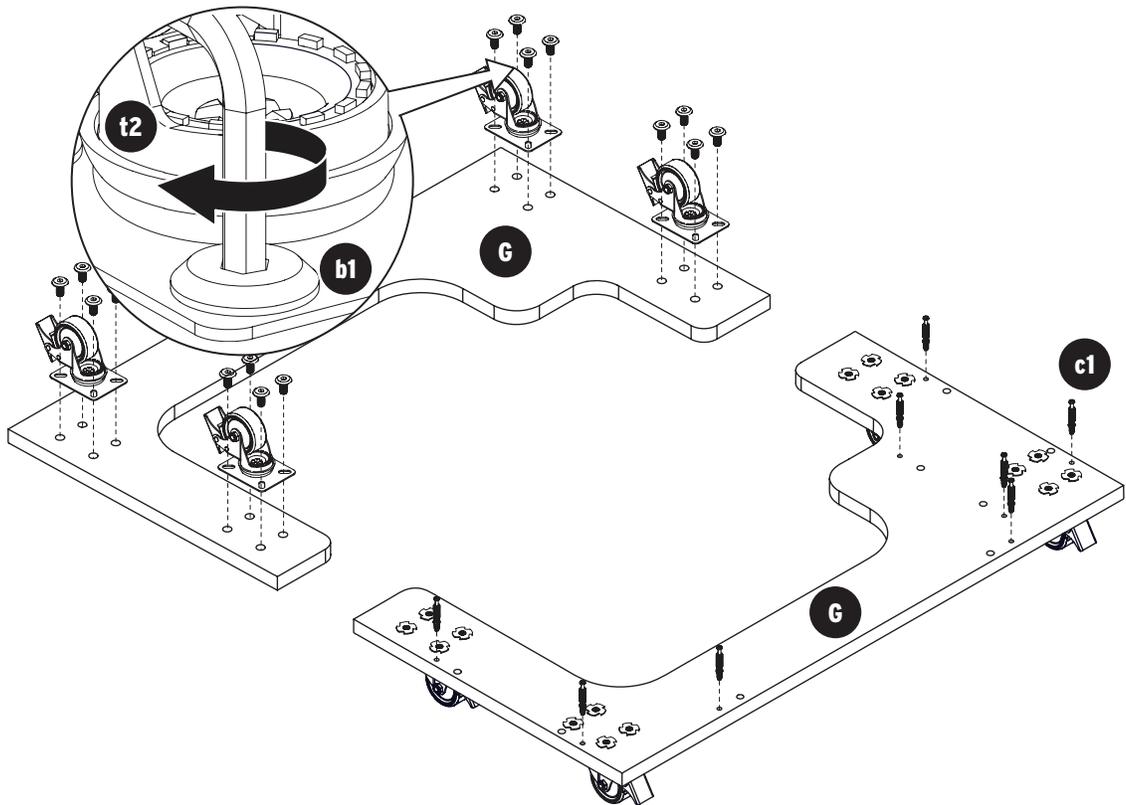


Step 8. Panel G assembly.

2 people should carefully turn cabinet over supporting panel Y which is attached to F and X but not to back panel D.


1. Insert cam bolts **c1** on panel **G** into cams on panels **X**, **Z**, **D** and **Y** and tighten in a clockwise direction as illustrated below. Apply cam covers **c2** over tightened cams.



5/8" Cam Cover **x6**

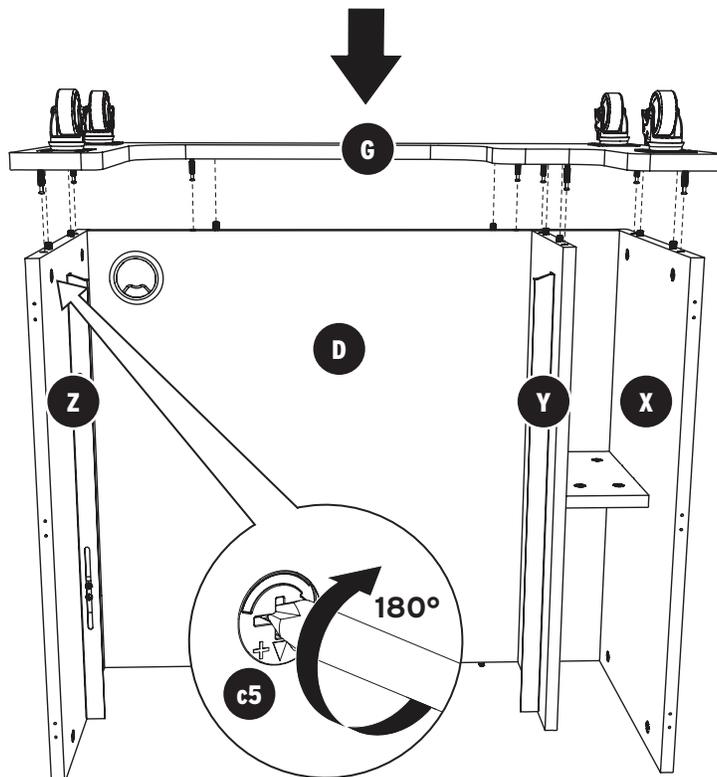

Step 9. Flip cabinet over.


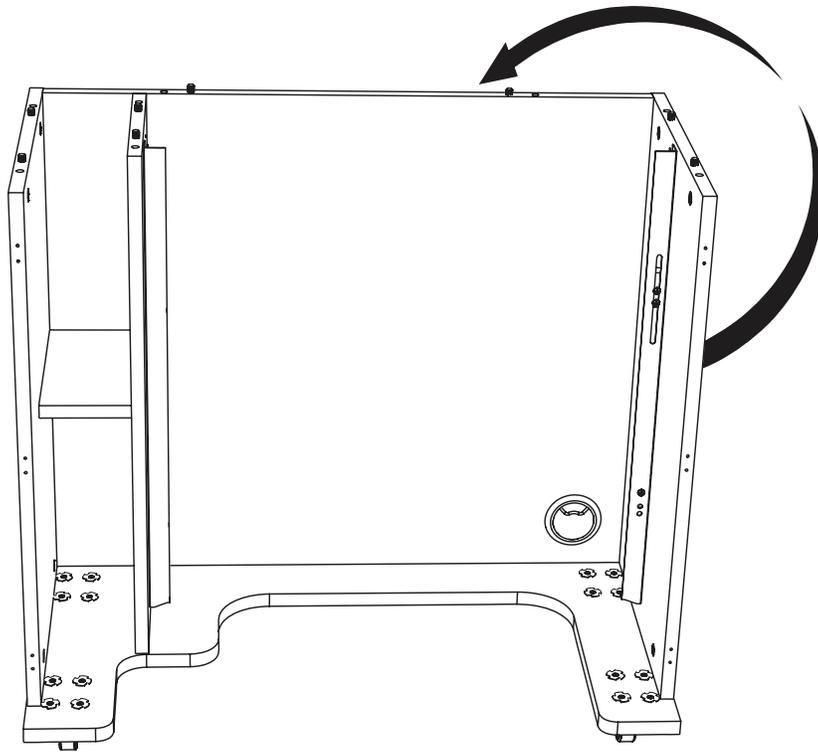


s1 
3.5x14 Screw **x4**

Step 10. Lifter Panel assembly.


Fix Lifter to **A3** panel with **s1** screws following predrilled holes as shown on the illustration below.

Note: Remove cable ties (do not remove wooden block).

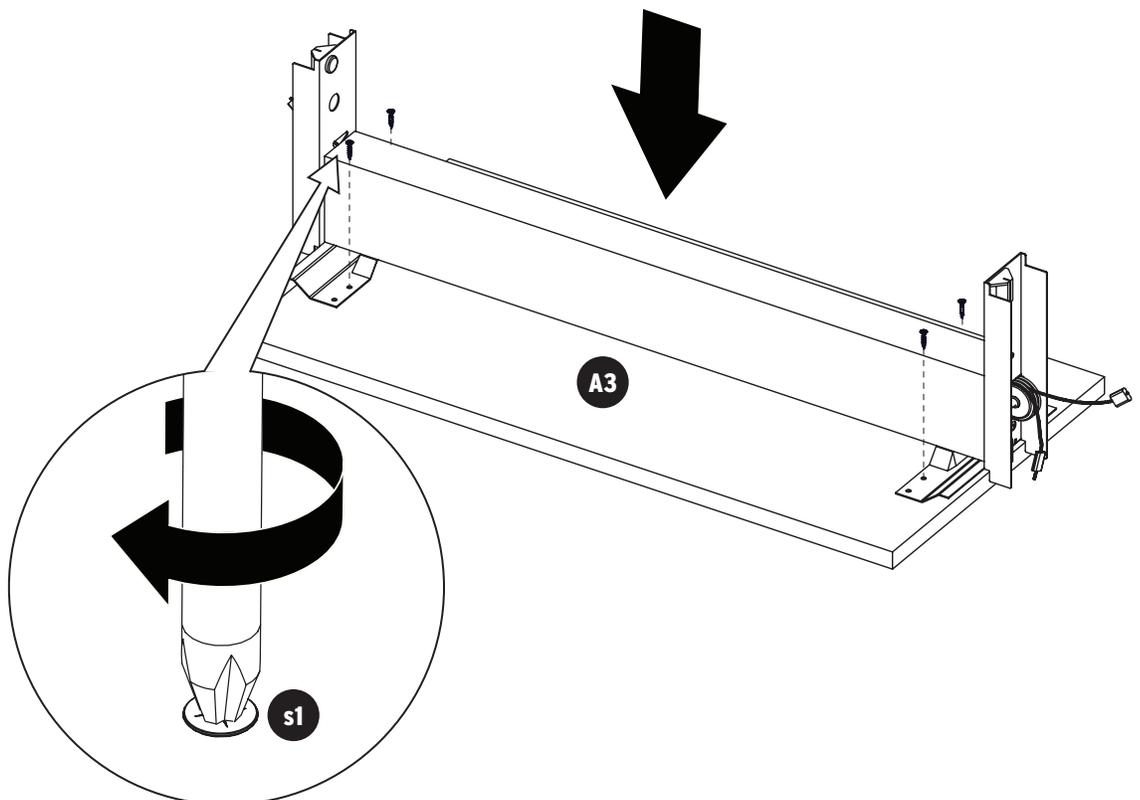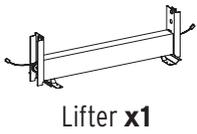


Step 11. Mounting the Lifter Assembly.

1. Position lifter onto side rails using plastic guides; make sure the cable is hooked into the rail tabs on both sides then lower the lift. See illustration below.
2. When lifter is pushed to first lock position remove a small wooden block that will be released from lifter.

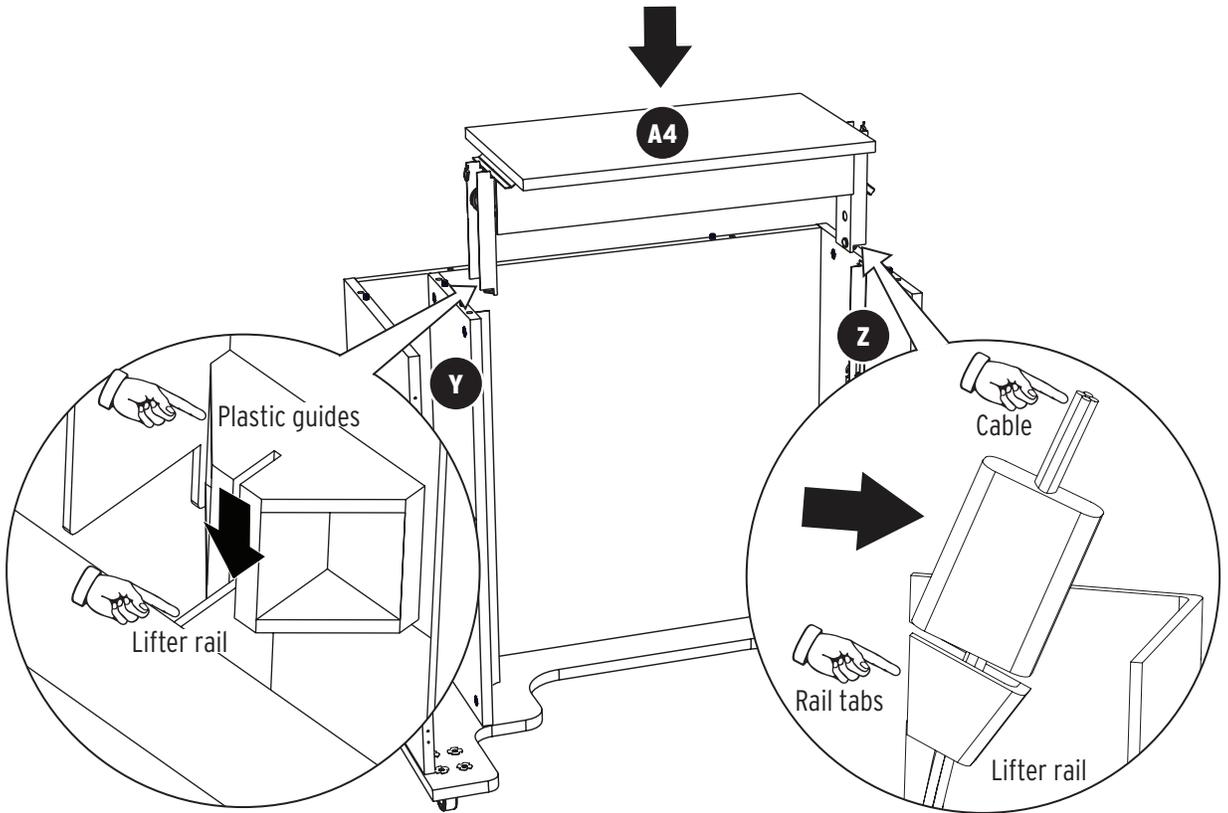



Step 12. Panel A assembly.

1. Insert cam bolts **c1** on panel **A** into cams on panels **X**, **Z**, **D** and **Y** lowering top **A** onto unit and tighten in a clockwise direction as illustrated. Apply cam covers **c2** over tightened cams.

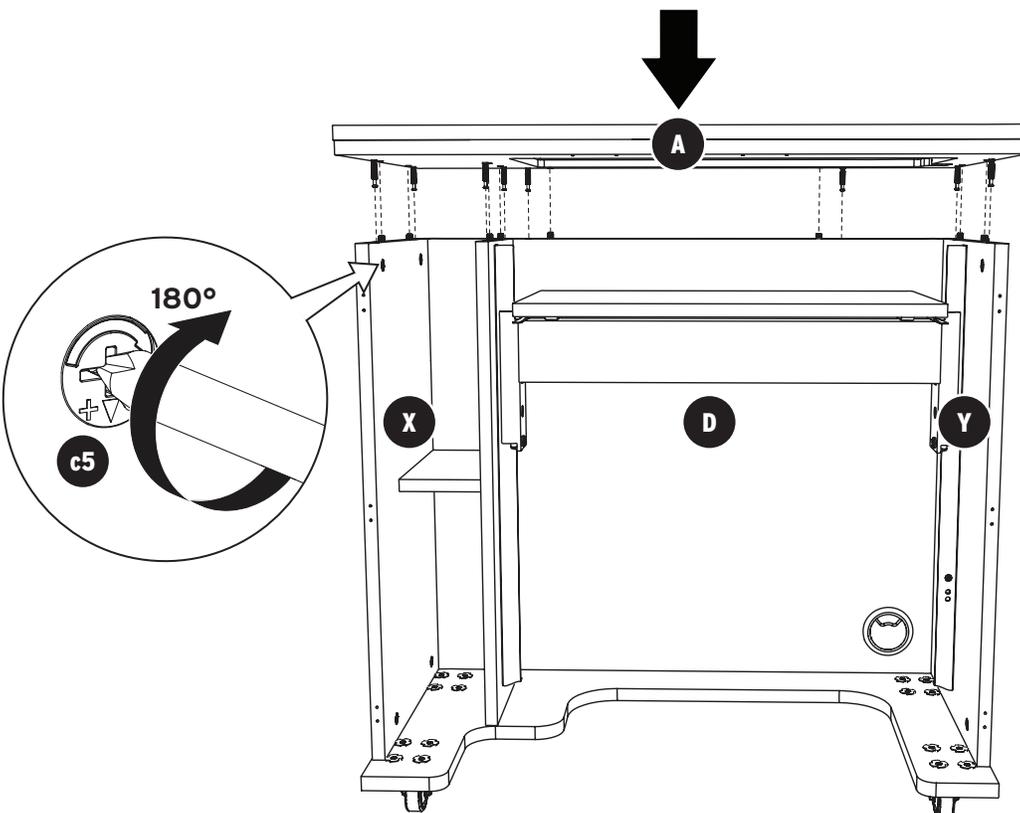


c25/8" Cam Cover **x16****Step 13. Door Bin Panels Lx2, L1x4 and L2x2 assembly.**

 1. Insert cam bolts **c3** on panel **L** and **L1** into cams on panels **L2** and tighten in a clockwise direction as illustrated below.
2. Apply cam covers **c2** over tightened cams.

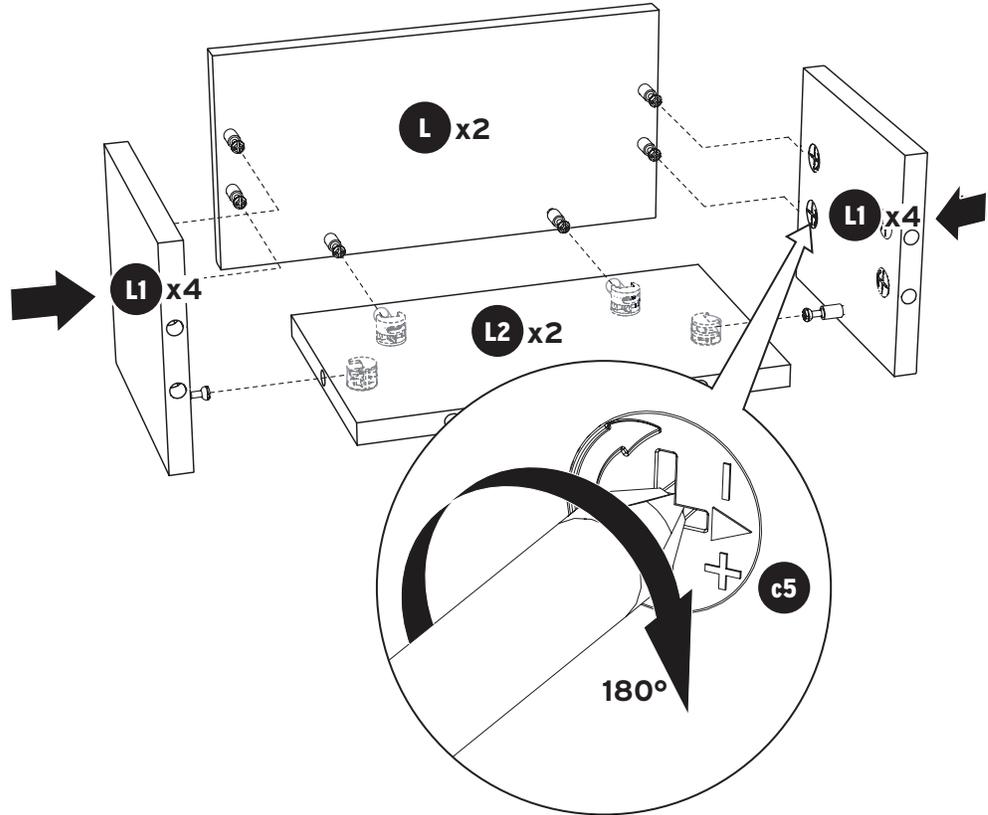**h2**Flush Hinge **x6****s2**3x14 Screw **x12****c2**5/8" Cam Cover **x6**Handle **x2****b2**4x20 Fix Bolt **x4****Step 14. Panels V1, V2, O1 and O2 assembly.**

1. Insert cam bolts **c1** on panel **V1** and **V2** into cams on panels **O1** and **O2** and tighten in a clockwise direction as illustrated below. Apply cam covers **c2** over tightened cams.
2. Fix Hinge **h2** to panels **O1** and **O2** with screws **s2** as illustrated below. Apply cam covers **c2** over tightened cams.
3. Fix handles **h** to panels **V1** and **V2** using **b2** screws.

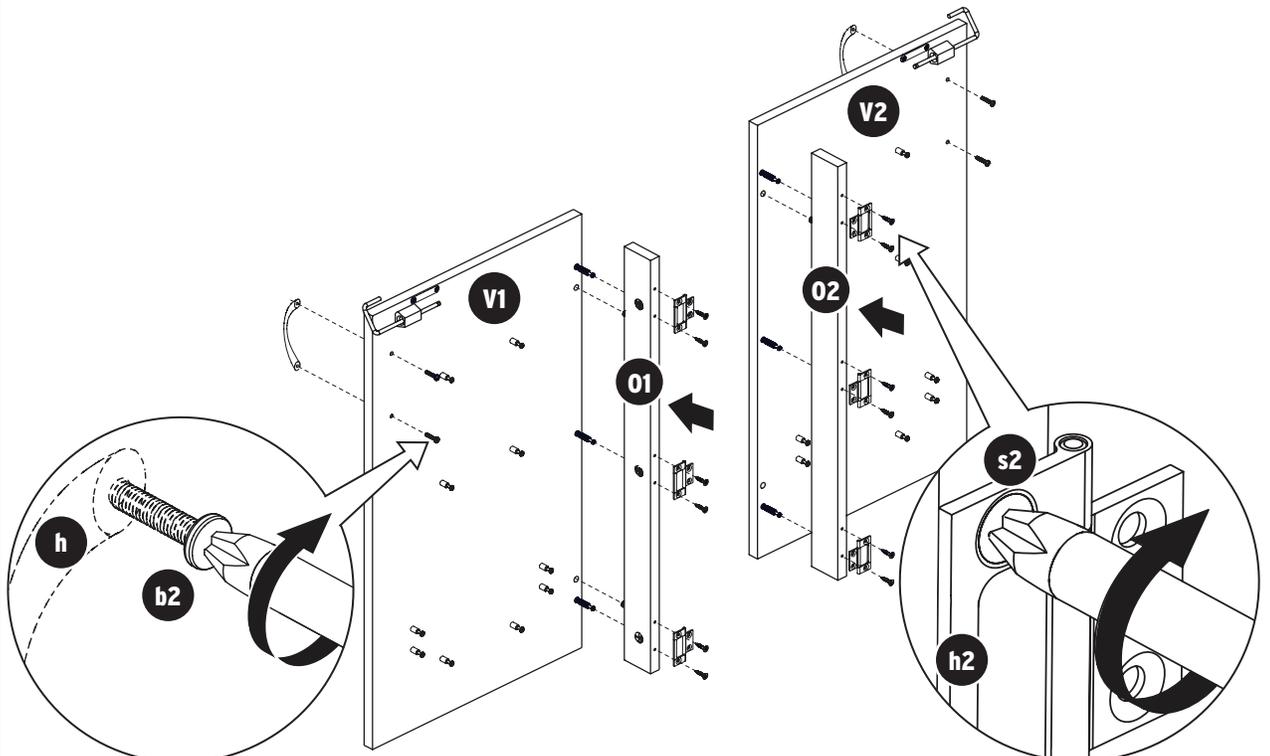


c2



5/8" Cam Cover **x20**

Step 15. Panel F1 and L assembly.

Insert cam bolts **c1** on panel **V1** and **V2** into cams on panels **F1**, **L1** and **L2** and tighten in a clockwise direction as illustrated below. Apply cam covers **c2** over tightened cams.

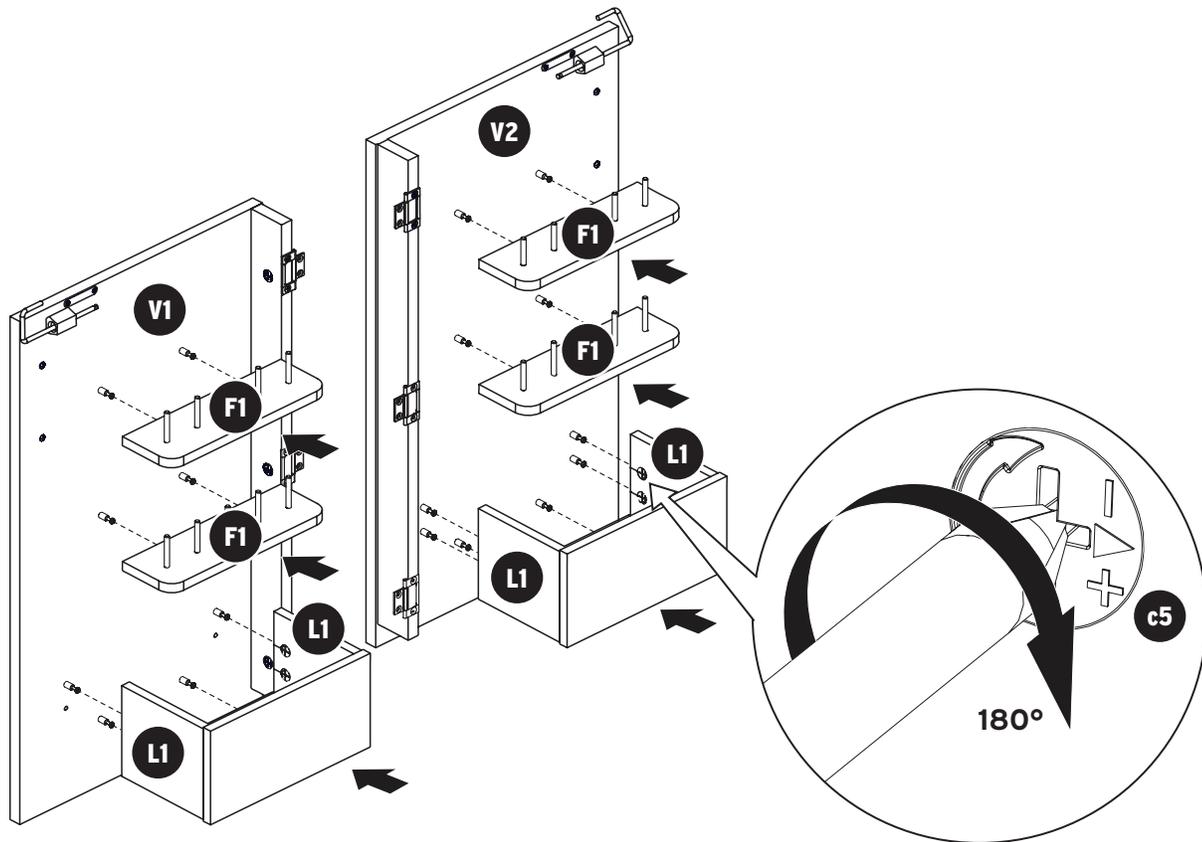


s2



3x14 Screw **x12**

Step 16. Panel V1 and V2 assembly.

1. Fix Hinge **h2** to panels **X** and **Z** with screws **s2** as illustrated below.

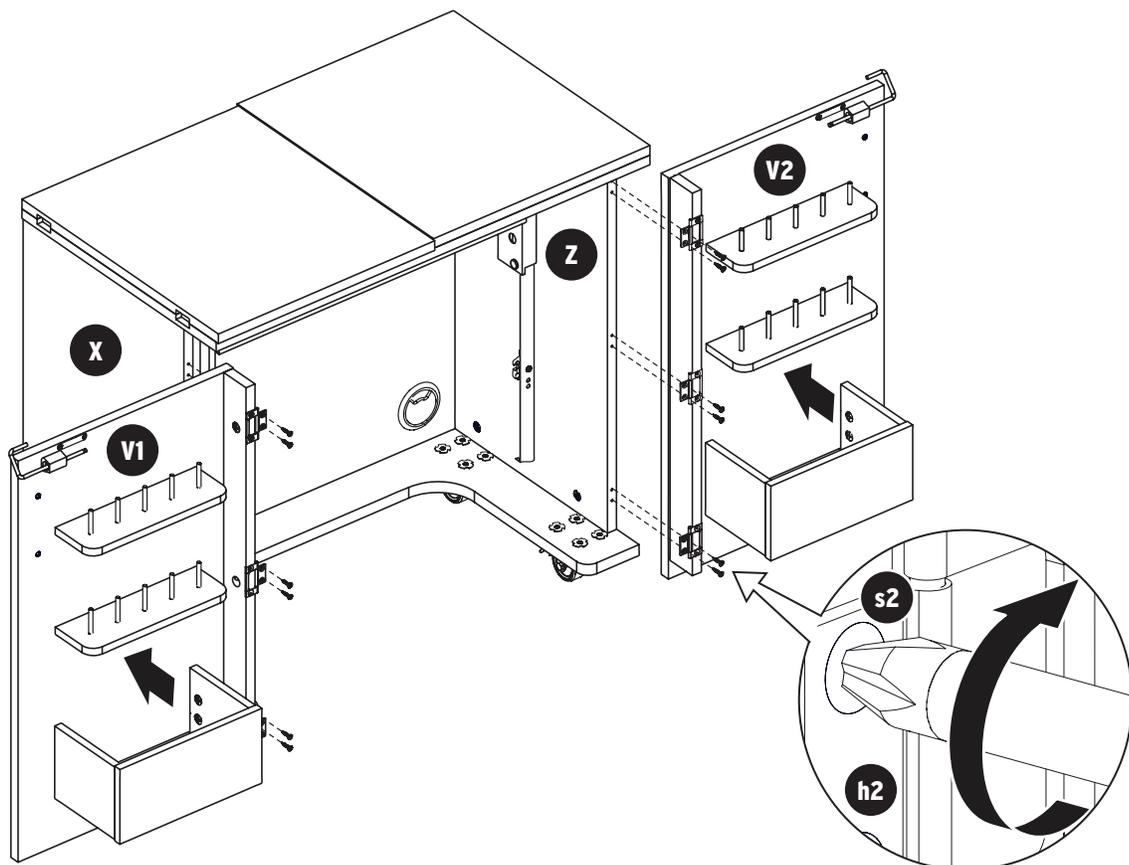



KANGAROO™
sewing furniture

LIMITED LIFETIME WARRANTY

Kangaroo™ Sewing Furniture Limited Lifetime Warranty

WHAT THIS WARRANTY COVERS: Kangaroo Sewing Furniture provides the original residential owner with a Limited Lifetime Warranty (warranty) protecting all major components of the furniture from manufacturing defects. Electrical and mechanical components of furniture are warranted for 5 years.

HOW TO GET SERVICE: Simply contact Arrow at 1-800-533-7347 or CS@ArrowCabinets.com. When you request warranty service, you must also present proof of purchase documentation, which includes the date of purchase (detailed receipt), and photos of the product. Arrow will replace any defective part (at its sole option), excluding labor. Replacement parts will be warranted for only the remaining period of the original Warranty.

Replacement parts will be shipped freight prepaid on any initial warranty claim during first year of Warranty only. Warranty applies only to defects confirmed by Arrow Companies, LLC and will be replaced or repaired at Arrow's option. In the event parts are no longer available for a warranty claim, customer may receive brand new cabinet at a price equal to 60% off the MSRP of a current comparable model.

WHAT'S NOT COVERED: There is no warranty coverage for defects or conditions that result from the failure to follow product assembly instructions, information or warnings, misuse or abuse, intentional damage, fire, flood, alteration or modification of the product, or use of the product in a manner inconsistent with its intended use, nor any condition resulting from incorrect or inadequate maintenance, cleaning, or care, or neglect, cuts or scratches. Caster damage as a result of moving furniture fully loaded or with locked casters. Damage resulting from electrical surge or lightning. Use in commercial or education environments. Kangaroo Sewing Furniture is designed for residential use only.

ARROW SHALL HAVE NO LIABILITY for ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND and all such damages are EXCLUDED FROM THIS WARRANTY, such as loss of use, disassembly, transportation, labor or damage to property on or near the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The Warranty cannot be transferred to subsequent owners or users of the product, and it shall be immediately void in the event the product is resold, transferred, leased or rented to any third party or person other than the original purchaser.

ADDITIONAL LIMITATIONS:

THERE ARE NO OTHER WARRANTIES APPLICABLE TO THIS PRODUCT. Under the laws of certain states, there may be no implied warranties from Arrow and all implied warranties, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE are disclaimed where allowed by law. TO THE EXTENT ANY IMPLIED WARRANTIES ARE APPLICABLE, ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY or the minimum period allowed by law, whichever is shorter. Some states do not allow limitations on how long an implied Warranty lasts, so the above limitation may not apply to you. This limited warranty gives you specific legal rights. This limited warranty does not, in any way, affect the rights given to you by law.

REGISTER YOUR PRODUCT: Original purchaser should register the purchase online at www.ArrowCabinets.com/warranty.

SEW IN COMFORT. SEW LONGER.™




KANGAROOTM
sewing furniture

Accessories to Complete Your Sewing Experience

Custom Insert


Enhance your sewing experience with a custom-made insert for your Arrow or Kangaroo cabinet. Inserts are designed to reduce the gap between the machine and cabinet opening. This provides an ergonomic work surface for the free arm of the sewing machine, allowing for straighter stitches, less fatigue and an overall better experience using your machine and cabinet.

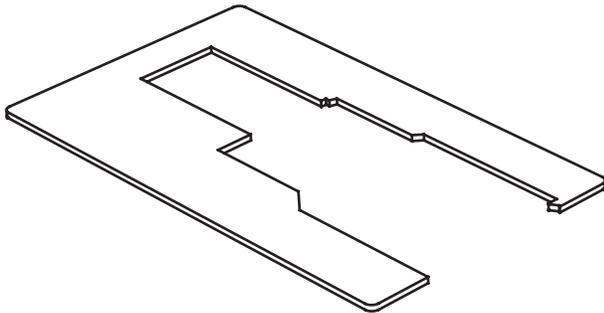

Insert

Arrow Sewing Chairs

Our adjustable height sewing chair is a perfect accessory for any craft and sewing room. The chair's height is adjustable with easy to use controls and the cushions provide perfect lumbar support and comfort for those long sewing hours. Chair features five casters on a star base for greater movement at your sewing cabinet or crafting surface. Lift the seat cushion to reveal a hidden storage compartment for your small notions or patterns.

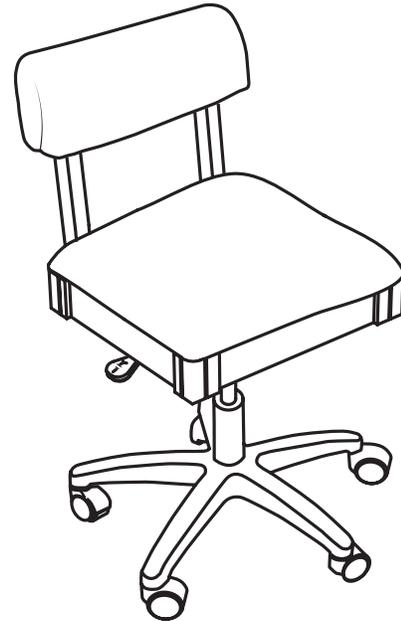

Hydraulic Sewing Chair

PO Box 410 Elkhorn, WI 53121
1-800-533-7347 Ext. 1
CS@ArrowCabinets.com
www.ArrowCabinets.com

06-20

SEW IN COMFORT. SEW LONGER.TM