

# ASSEMBLY INSTRUCTIONS JOEY II

ITEM NO.: K7805 Teak

K7811 White



Read the instructions carefully before starting. Please open and inspect the contents of boxes to see that all parts are included. You will need a Phillips head and a flat head screwdriver. A power screwdriver or cordless drill is preferable. Ensure that the Phillips head fits neatly and fully engages the screw to avoid damage to the screws. Make sure that you tighten all screws securely and tap wooden dowels all the way in.

#### Use and Care


Your cabinet normally requires a minimum amount of maintenance; however, the following points are worth noting:

**Cleaning** - To remove marks and enhance the surface, wipe with general purpose cleaner.


Caution - Do not use ammonia-based cleaning agents. Do not use harsh chemicals or abrasive cleansers. The surface can be wiped with a damp cloth but should be dried quickly.

**Electrical and Hydraulic Lifts** - Require annual lubrication.


## Understanding How the Cam Fastener Works

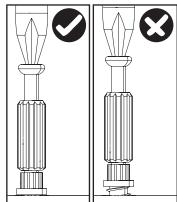


Screw cam bolts flush as illustrated.

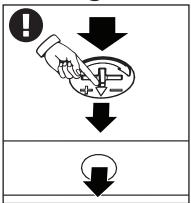

surface. The arrow direction must be in the direction of the hole!

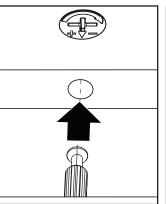


hole in edge of panel.

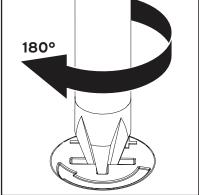

Press cam Into hole until flush with Insert bolt through pre-drilled Turn clockwise to lock cam with bolt.

# Parts List


ITEM	DESCRIPTION	QTY.	PACK.	ITEM	DESCRIPTION	QTY.	PACK.
Α	Top Panel	1	1 of 1	L2	Small Right Drawer Side	2	1 of 1
G	Bottom panel	1	1 of 1	L3	Small Drawer Back	2	1 of 1
D	Back panel	1	1 of 1	L4	Drawer Bottom	3	1 of 1
X	Left side panel	1	1 of 1	K	Large Drawer Front	1	1 of 1
Z	Right side panel	1	1 of 1	<b>K1</b>	Large Left Drawer Side	1	1 of 1
L	Small Drawer Front	1	1 of 1	K2	Large Right Drawer Side	1	1 of 1
LL	Small Locking Drawer Front	1	1 of 1	К3	Large Drawer Back	1	1 of 1
L1	Small Left Drawer Side	2	1 of 1				

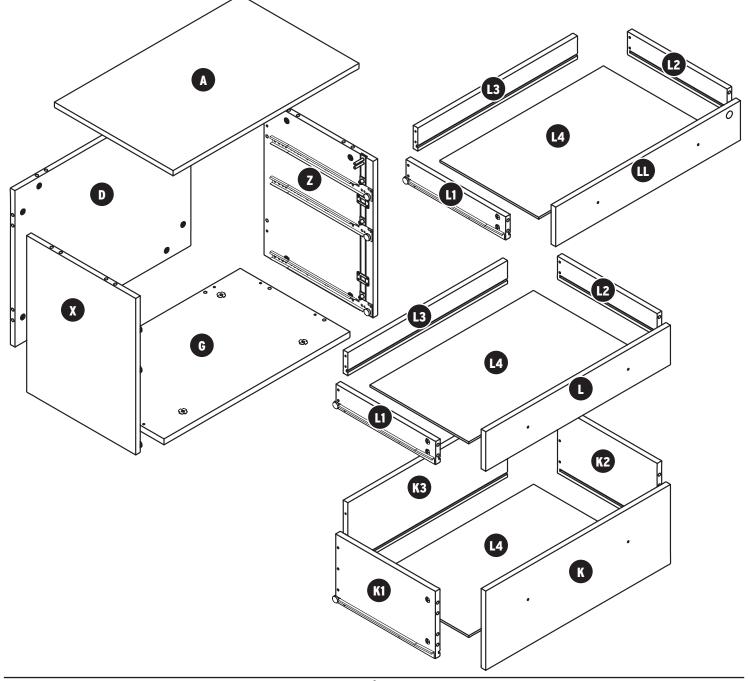


# Parts List

ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
c1	6x35 Cam Bolt	28	s3	3.5x35 Screw	14
d1	8x30 Dowel Pin	20	h1	Knob	6
c2	⁵∕8" Cam Cover	28	b2	4x20 Fix Bolt	6
t3	Extension Caster	4	s1	3.5x14 Screw	2
r4	12mm Spanner	1	b4	Caster Washer	4
			L	Lock, Key x2	1

If you are missing the plastic washers for use with casters **t3**, Please call Arrow Customer Service at 1-800-533-7347 ext. 1 and we will send them. Don't install the casters without washers.

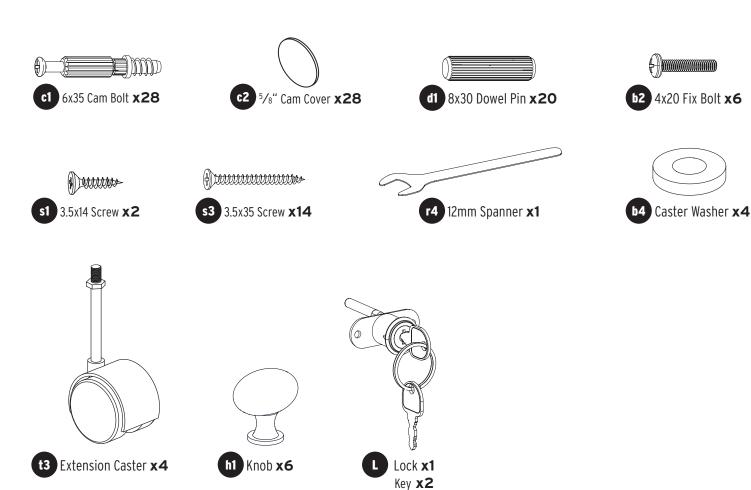

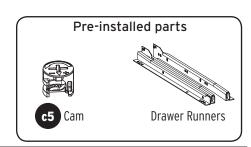



Step 1. Preparation Panels G, X, Z, A, L, LL, K, K1, K2 and D.


- 1. Insert cams bolts **c1** into panels **A**, **G**, **L**, **LL**, **K**, **X**, and **Z** as illustrated below.
- 2. Insert dowel pins **d1** to panels **X**, **Z**, **K1**, **K2** and **D** as illustrated below.





3.5x14 Screw **x2** 




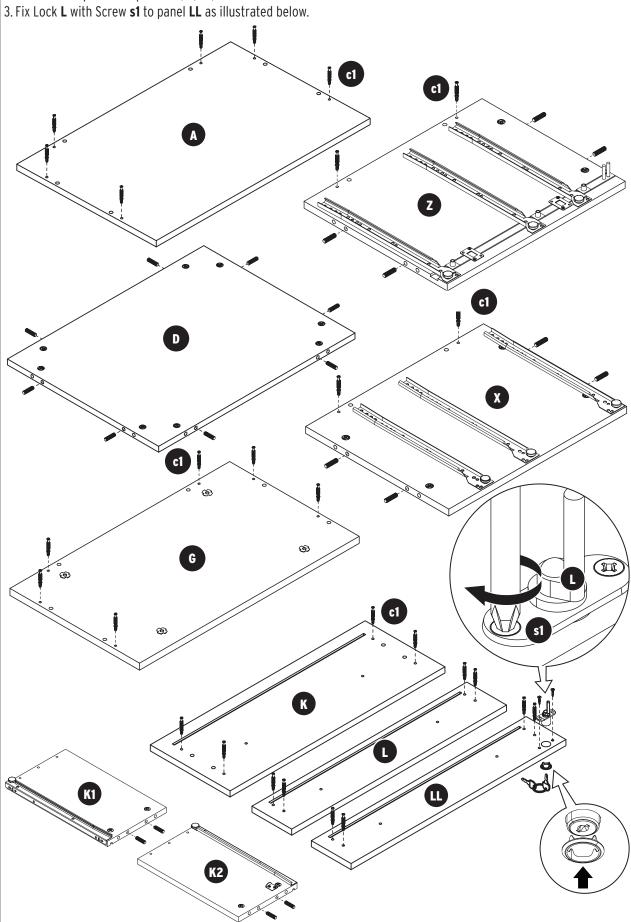



Step 2. Panels D, X, and Z assembly.


- 1. Insert cam bolts **c1** on panels **X** and **Z** into cams on panels **D** and tighten in a clockwise direction as illustrated below. Apply cam covers **c2** over tightened cams.
- 2. Install Top Panel A.
- 3. Turn partially assembled cabinet over.

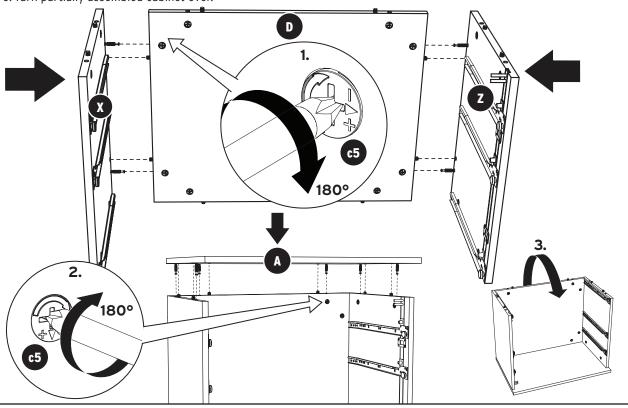



### Step 3. Panel A and G assembly.

- 1.On panels **Z** and **X** uninstall the runners next to panel **G**, to expose the cams as illustrated below. Make sure to mark the runners right and left so you put them back on correct panel.
- 2. Insert cam bolts **c1** on panel **G** into cams on panels **X**, **Z** and **D** and tighten in a clockwise direction as illustrated below. Apply cam covers **c2** over tightened cams.
- 3. Reinstall the runner next to panel **G**.
- 4. Fix Caster t3 to panels G as illustrated below.

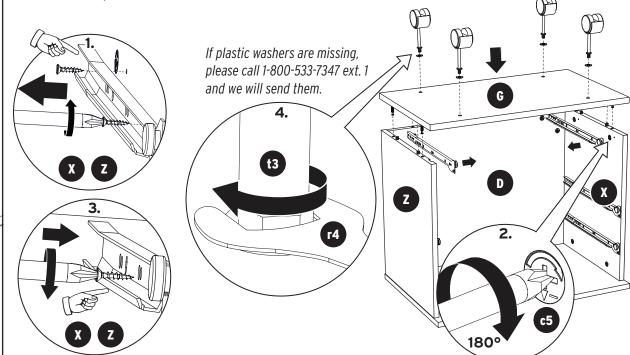





Caster Washer x4



12mm Spanner **x1** 




5/8" Cam Cover **x12** 



3.5x35 Screw **x8** 

#### Step 4. Drawer assembly.

- 1. Insert cam bolts **c1** on **L, LL** into **L1** and **L2** and tighten in a clockwise direction. Apply cam covers **c2** over tightened cams.
- 2. Slide bottom **L4** into **L**, **LL**, **L1**, **L2** and **L3** grooves as illustrated.
- 3. Connect drawer panels **L1**, **L2** and **L3** with screws **s3** as illustrated below.

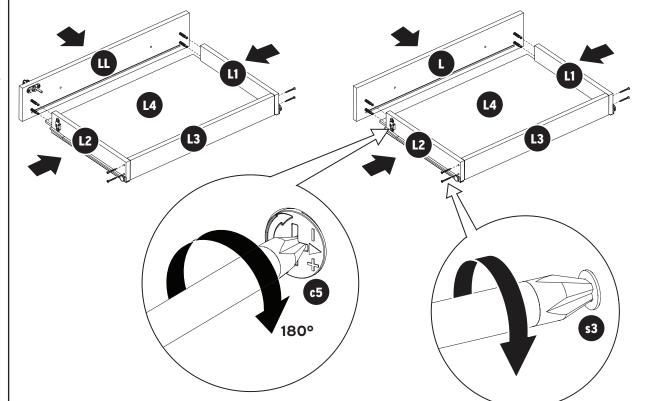



5/8" Cam Cover **x8** 






5/8" Cam Cover **x4** 

#### Step 5. Drawer assembly.

- 1. Insert cam bolts **c1** on **K** into **K1** and **K2** and tighten in a clockwise direction. Apply cam covers **c2** over tightened cams.
- 2. Slide bottom **L4** into **K**, **K1**, **K2** and **K3** grooves as illustrated.
- 3. Connect drawer panels **K1**, **K2** and **K3** with screws **s3** as illustrated below.

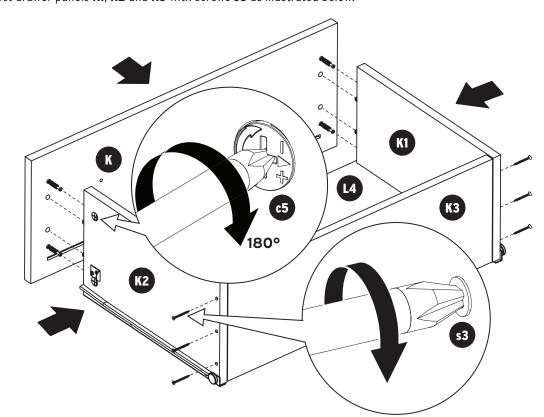




### Step 6. Drawer assembly.


1.Before putting drawers into the cabinet, attach the Knobs **h1** to drawer fronts **L**, **LL** and **K** with fix bolts **b2** and tighten with a screwdriver.



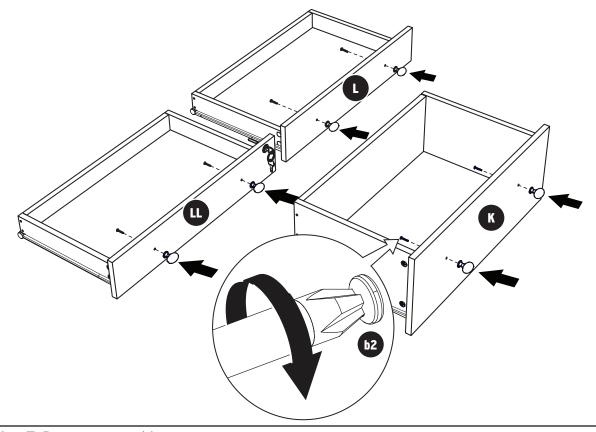

### Step 7. Drawer assembly.

1.Slide runner on drawer into runners in cabinet as illustrated below, make sure the drawer with lock is the top drawer in cabinet.

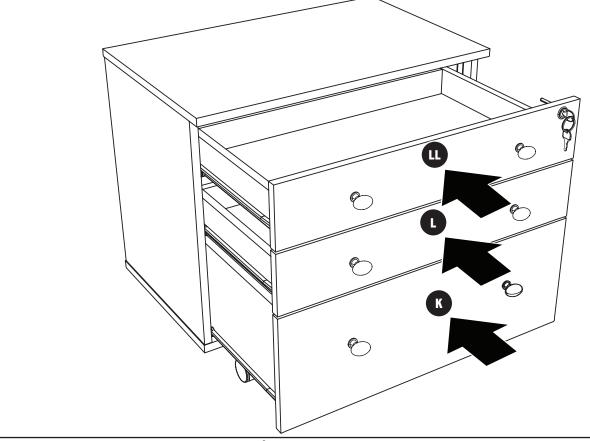

## LIMITED LIFETIME WARRANTY

Kangaroo™ Sewing Furniture Limited Lifetime Warranty

WHAT THIS WARRANTY COVERS: Arrow Companies, LLC (Arrow) provides limited warranty coverage to the original purchaser of this product against defects in materials or workmanship of Arrow furniture components for a period of ten years from the date of purchase. As used in this Warranty, "defect" means imperfections in components which substantially impair the utility of the product. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**HOW TO GET SERVICE:** Simply contact Arrow at 1-800-533-7347 or CS@ArrowCabinets.com. When you request warranty service, you must also present proof of purchase documentation, which includes the date of purchase (detailed receipt), and photos of the product. Arrow will replace any defective part (at its sole option), excluding labor. Replacement parts will be warranted for only the remaining period of the original Warranty.

Replacement parts will be shipped freight prepaid on any initial warranty claim during first year of Warranty only. Warranty applies only to defects confirmed by Arrow Companies, LLC and will be replaced or repaired at Arrow's option. In the event parts are no longer available for a warranty claim, customer may receive brand new cabinet at a price equal to 60% off the MSRP of a current comparable model.

WHAT'S NOT COVERED: There is no warranty coverage for defects or conditions that result from the failure to follow product assembly instructions, information or warnings, misuse or abuse, intentional damage, fire, flood, alteration or modification of the product, or use of the product in a manner inconsistent with its intended use, nor any condition resulting from incorrect or inadequate maintenance, cleaning, or care, or neglect, cuts or scratches. Caster damage as a result of moving furniture fully loaded or with locked casters. Damage resulting from electrical surge or lightning. Use in commercial or education environments. Kangaroo Sewing Furniture is designed for residential use only.

ARROW SHALL HAVE NO LIABILITY for ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND and all such damages are EXCLUDED FROM THIS WARRANTY, such as loss of use, disassembly, transportation, labor or damage to property on or near the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The Warranty cannot be transferred to subsequent owners or users of the product, and it shall be immediately void in the event the product is resold, transferred, leased or rented to any third party or person other than the original purchaser.

#### **ADDITIONAL LIMITATIONS:**

THERE ARE NO OTHER WARRANTIES APPLICABLE TO THIS PRODUCT. Under the laws of certain states, there may be no implied warranties from Arrow and all implied warranties, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE are disclaimed where allowed by law. TO THE EXTENT ANY IMPLIED WARRANTIES ARE APPLICABLE, ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY or the minimum period allowed by law, whichever is shorter. Some states do not allow limitations on how long an implied Warranty lasts, so the above limitation may not apply to you. This limited warranty gives you specific legal rights. This limited warranty does not, in any way, affect the rights given to you by law.

**REGISTER YOUR PRODUCT:** Original purchaser should register the purchase online at www.ArrowCabinets.com/warranty.


## Accessories to Complete Your Sewing Experience

#### **Custom Insert**

Enhance your sewing experience with a custommade insert for your Arrow or Kangaroo cabinet. Inserts are designed to reduce the gap between the machine and cabinet opening. This provides an ergonomic work surface for the free arm of the sewing machine, allowing for straighter stitches, less fatigue and an overall better experience using your machine and cabinet.

# **Arrow Sewing Chairs**

Our adjustable height sewing chair is a perfect accessory for any craft and sewing room. The chair's height is adjustable with easy to use controls and the cushions provide perfect lumbar support and comfort for those long sewing hours. Chair features five casters on a star base for greater movement at your sewing cabinet or crafting surface. Lift the seat cushion to reveal a hidden storage compartment for your small notions or patterns.

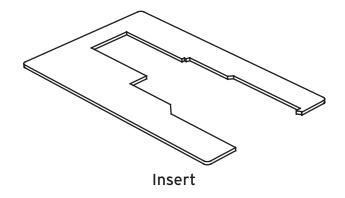



Hydraulic Sewing Chair

P.O. Box 307 Delavan, WI 53115 1-800-533-7347 Ext. 1 CS@ArrowCabinets.com www.ArrowCabinets.com