

Fashion Sewing Cabinets of America

1453 West 105 North, Orem, UT 84057

Toll Free: 800-658-8795 Fax: 801-756-5758

www.FashionSewingCabinets.com

109

Electric Lift

Please check all parts for defect before discarding any packing material.

Tools Needed: Parts: Phillips Screwdriver Lift

Cordless Drill with Clutch (preferred)


Lift Wings Switch Plate Switch Cord


Hardware Supplied:


Power Adapter Power Cord

20x Truss Head Screws 4x Small Cord Adapters 2x "L" Brackets

- 1. Start by testing the **Lift.** Plug in the power cord and press on the switch to verify movement in both directions.
- 2. Place the **Lift Wings** on the **Lift** as shown in figure 1 and fasten them using the **Nuts** provided. Unplug the **Lift**.
- 3. With the cabinet laying on it's top, be sure to orient the **Lift** as shown in figure 2. Place the **Lift** inside the cabinet. There are two holes on the bottom side of the table top. Line these holes up with the holes on the **Lift**. Insert a screw in each hole. Make sure the screws are tight but DO NOT STRIP.
- 4. With the preferred side of the lift deck facing down, slide the lift deck under the **Lift** and center it in the cabinet opening.
- 5. Plug in the power cord.
- 6. Tapping the switch move the **Lift** down until the wings just touch the lift deck.
- 7. With the lift deck centered in the opening attach the lift deck to the lift wings using Truss Head Screws in the six holes (three on each wing).
- 8. With help carefully turn the cabinet right side up.
- 9. Move the bottom of the **Lift** around until the lift deck lines up with the table top. Left to right as well as back to front should be considered.
- 10. When the lift deck is lined up insert a screw through one of the side holes in the bottom of the **Lift** and into the shelf of the cabinet (*If you use the center hole beware that if the Lift gets stuck at the bottom for any reason, it will be difficult to remove).*
- 11. Check to see if you are still aligned. If not, loosen the screw and repeat step 9.
- 12. Insert a screw in the other hole.
- 13. To secure the cords start by fastening the switch and place the **Small Cord Adapters** around the switch cord and fasten them down using the Truss Head Screws in the pre-drilled holes as shown in figure 3.

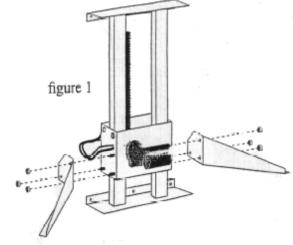

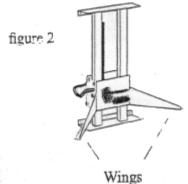

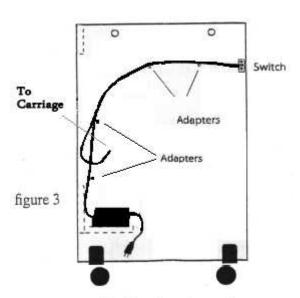

(Inside view of panel)