

creative™ 4.0 Quilt



Sewing Supplies

- PFAFF® 1 1/8 yd (1.0 m) White Satin
- 3/4 yd (70 cm) Light Pink Satin
- 1/8 yd (15 cm) Yellow Satin
- 1/8 yd (15 cm) Taupe Satin
- 1/4 yd (30 cm) Bright Pink Satin
- 1 1/4 yds x 54" (115 x 140 cm) Burgundy Satin
- 50" x 50" (125 x 125 cm) Backing
- 50" x 50" (125 x 125 cm) Batting
- Tear away stabilizer
- Rayon embroidery thread
- Metallic embroidery thread
- Bobbin thread
- Sewing thread
- Invisible thread
- 1/4" Steam-A-Seam 2 fusible web
- Water soluble marker
- Olfa 45 mm Deluxe Rotary Cutter
- Omnigrid Ruler 6" x 24"
- Cutting mat
- Quilting needle
- Pins
- Safety Pin

PFAFF® Accessories

- creative™ 4.0 sewing and embroidery machine
- PFAFF® creative™ All Fabric Hoop II #820 889-096
- creative™ 120 Square Hoop (120 x 120 mm) #412 96 82-02
- Embroidery/Sensomatic Free-motion Foot #820671-096
- Bi-level Topstitch Foot (IDT™ compatible) #820676-096
- ¼ inch Quilting Foot (IDT™ compatible) #820211-096
- Clear Stitch-in-Ditch Foot (IDT™ compatible) #820882-096
- Sewing Star Foot (IDT™ compatible) #820654-096

You will find these and many other accessories in the PFAFF® Accessory Catalogue, on www.pfaff.com, and for purchase at your nearest Authorized PFAFF® Dealer.

1/4" (6 mm) seam allowance included in all measurements.

Cutting Instructions:

White Satin:

- 1 – 12" x 12" (30 x 30 cm) for embroidered block
- 4 – 10" x 10" (25 x 25 cm) for embroidered blocks
- 2 – 13 ½" x 13 ½" (35 x 35 cm) cut in half on the diagonal

- 1 – 14" x 14" (36 x 36 cm) cut in quarters on the diagonal

Light Pink Satin:

- 4 – 12" x 12" (30 x 30 cm) for embroidered blocks

Yellow Satin:

- 1 – 4" x 10 ½" (10 x 27 cm)
- 1 – 4" x 8" (10 x 20.5 cm)

Taupe Satin:

1 – 4" x 13" (10 x 33 cm)

1 – 4" x 10 ½" (10 x 27 cm)

Bright Pink Satin:

1 – 8" x 14" (20.5 x 36 cm)

1 – 10 ½" x 14" (27 x 36 cm)

Burgundy Satin:

1 – 10 ½" x 14" (27 x 36 cm)

1 – 13" x 14" (33 x 36 cm)

4 – 4 ½" x 54" (11.5 x 137 cm) Borders

4 – 2 ½" x 54" (6.5 x 137 cm) Binding

Backing:

1 – 47" x 47" (120 x 120 cm)

Batting:

1 – 47" x 47" (120 x 120 cm)

Embroidery:


1. Set machine to Embroider. Snap on Embroidery Foot 6A.
2. Hoop the 12" x 12" (30 x 30 cm) white satin with stabilizer in the creative™ All Fabric Hoop II.
3. Insert an embroidery needle in your machine.
4. Thread your machine with embroidery thread in the top and bobbin thread in the bottom.
5. Embroider design #63
6. After the embroidery is completed remove the stabilizer and trim the block down to measure 8" x 8" (20.5 x 20.5 cm) with the design centered.
7. Hoop the 12" x 12" (30 x 30 cm) light pink satin with stabilizer in the creative™ All Fabric Hoop II.
8. Embroider design # 64. Do not add appliqué fabric in the center; skip that step in the design. Repeat with the remaining 3 squares.

9. After the embroidery is completed remove the stabilizer and trim the block down to measure 8" x 8" (20.5 x 20.5 cm) with the design centered.
10. Hoop the 10" x 10" (25 x 25 cm) white satin with stabilizer in the creative 120 Square Hoop.
11. Embroider design #72. Repeat with the remaining 3 squares.
12. After the embroidery is completed remove the stabilizer and trim the block down to measure 5" x 5" (12.5 x 12.5 cm) with the design centered.
13. Press under a ¼" (6 mm) on all four sides of the blocks and fuse in place using the ¼" Seam-A-Seam 2 fusible web.


Decorative Sewing:

Yellow Satin:


1. On the 4" x 8" (10 x 20.5 cm) rectangle draw a line with a water soluble marker ½" (12 mm) from the edge.

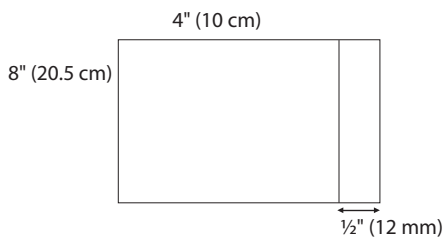


2. Snap on the 2A Fancy stitch foot. Thread your machine with rayon thread on top and bobbin thread in the bottom. Place tear away stabilizer under the fabric and stitch 3 rows of decorative stitches to the left of the drawn line as illustrated. We used stitch # 3.3.28 and 3.3.24
3. Remove the stabilizer and trim the strip down to measure 3" x 8" (7.5 x 20.5 cm).

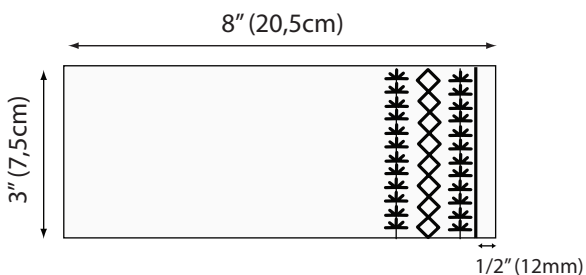

- On the 4" x 10 1/2" (10 x 27 cm) rectangle draw a line with a water soluble marker 3" (7.5 cm) from the edge.

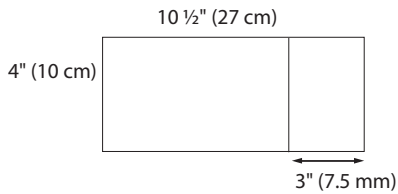


- Place tear away stabilizer under the fabric and stitch 3 rows of decorative stitches as illustrated.
- Remove the stabilizer and trim the strip down to measure 3" x 10 1/2" (7.5 x 27 cm).

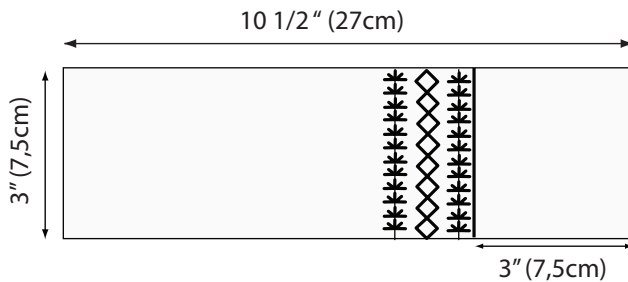


Taupe Satin:


- On the 4" x 10 1/2" (10 x 27 cm) rectangle draw a line with a water soluble marker 3" (7.5 cm) from the edge.

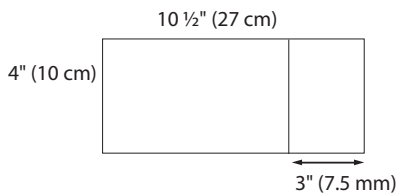


- Place tear away stabilizer under the fabric and stitch 3 rows of decorative stitches as illustrated. We used stitch 3.3.11 and 3.3.20
- Remove the stabilizer and trim the strip down to measure 3" x 10 1/2" (7.5 x 27 cm).

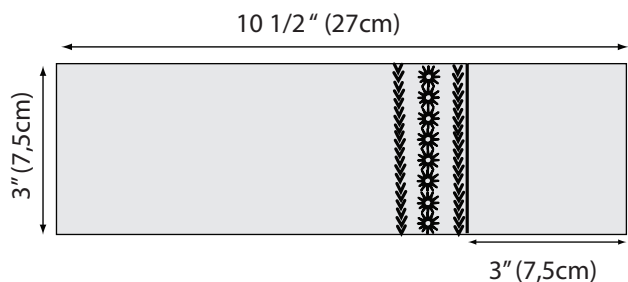

- On the 4" x 13" (10 x 33 cm) rectangle draw a line with a water soluble marker 3" (7.5 cm) from the edge.

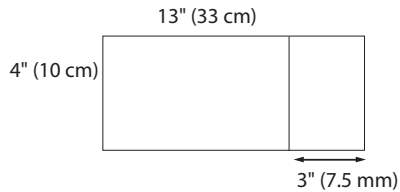


- Place tear away stabilizer under the fabric and stitch 3 rows of decorative stitches as illustrated.
- Remove the stabilizer and trim the strip down to measure 3" x 13" (7.5 x 33 cm).

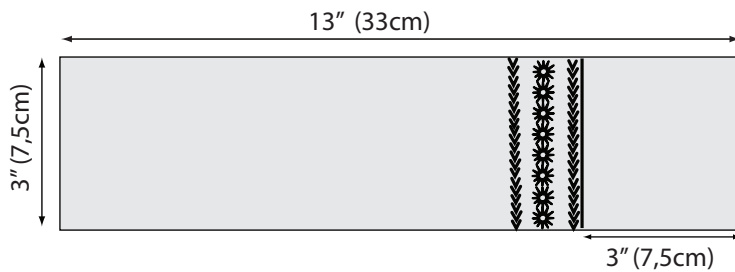


Bright Pink Satin:

- On the 8" x 14" (20.5 x 36 cm) rectangle draw a line with a water soluble marker 1/2" (12 mm) from the edge.

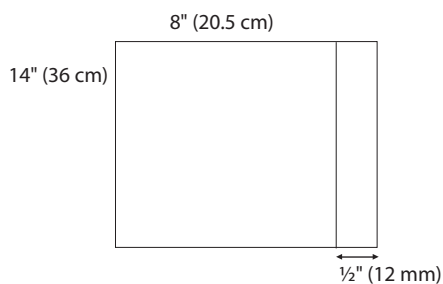


- Place tear away stabilizer under the fabric and stitch 3 rows of decorative stitches as illustrated.
We used stitch 3.3.16 and 3.3.22


3. Remove the stabilizer and cut 4 strips measuring 3" x 8" (7.5 x 20.5 cm).

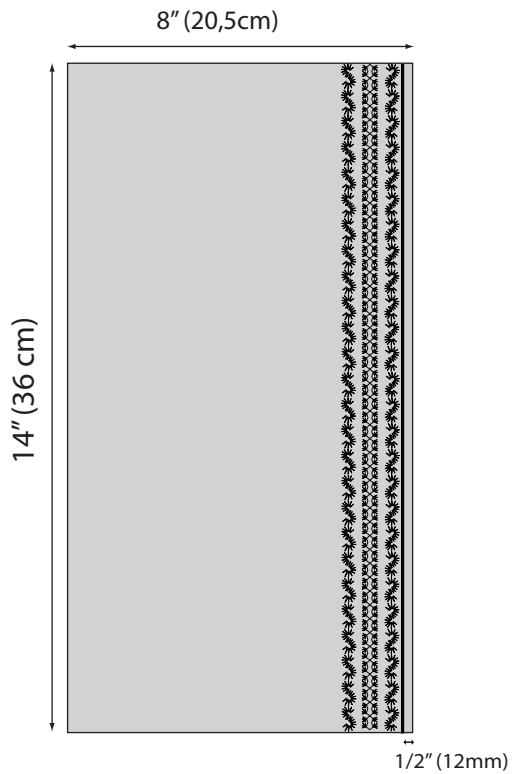

4. On the 10 1/2" x 14" (27 x 36 cm) rectangle draw a line with a water soluble marker 3" (7.5 cm) from the edge as illustrated.

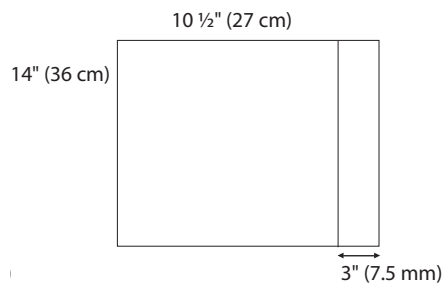


5. Place tear away stabilizer under the fabric and stitch 3 rows of decorative stitches as illustrated.
6. Remove the stabilizer and cut 4 strips measuring 3" x 10 1/2" (7.5 x 27 cm).

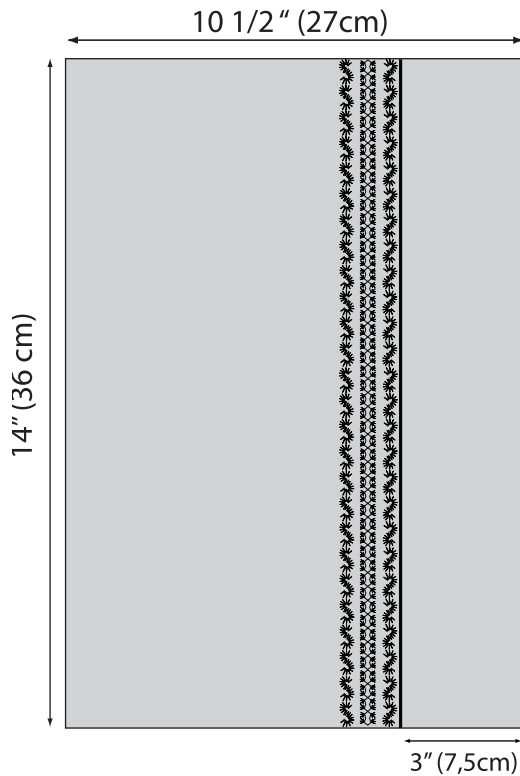


Burgundy Satin:

1. On the 10 1/2" x 14" (27 x 36 cm) rectangle draw a line with a water soluble marker 3" (7.5 cm) from the edge.

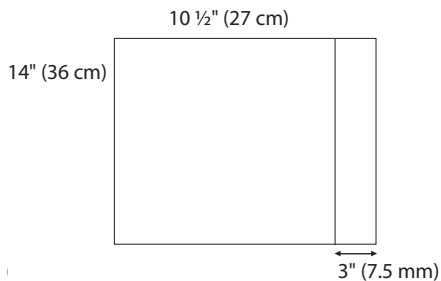


2. Place tear away stabilizer under the fabric and stitch 3 rows of decorative stitches as illustrated.
We used stitch 3.3.18 and 3.3.23

3. Remove the stabilizer and cut 4 strips measuring 3" x 10 ½" (7.5 x 27 cm).

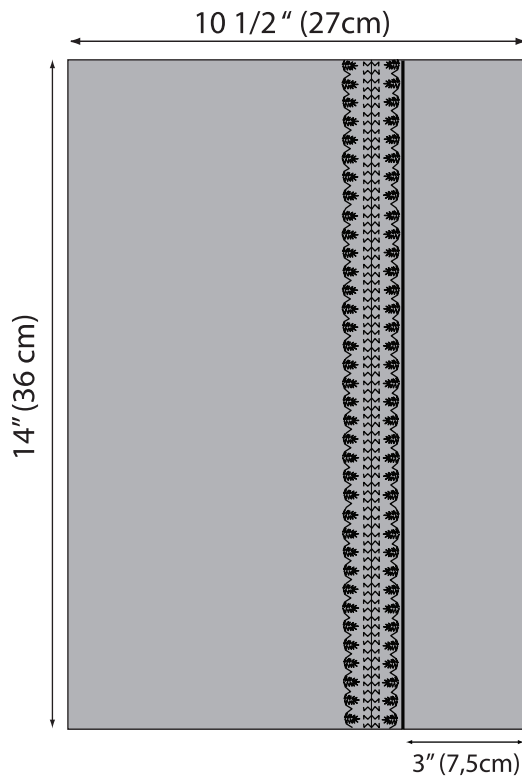


4. On the 13" x 14" (33 x 36 cm) rectangle draw a line with a water soluble marker 3" (7.5 cm) from the edge.

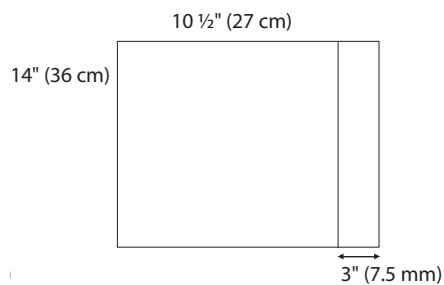

5. Place tear away stabilizer under the fabric and stitch 3 rows of decorative stitches as illustrated.


6. Remove the stabilizer and cut 4 strips measuring 3" x 13" (7.5 x 33 cm).

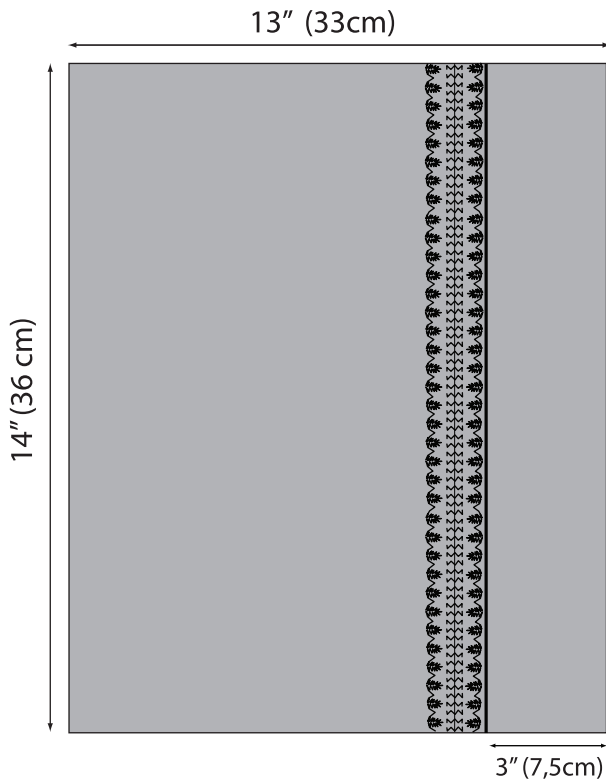


Assembly Instructions:

Center Block


1. Snap on the ¼" foot engage IDT™ system and thread your machine with sewing thread on the top and in the bobbin.
2. Place the embroidered white satin block right sides together with the 3" x 8" (7.5 x 20.5 cm) yellow satin strip and stitch using a ¼" (6 mm) seam allowance. Press towards the strip.

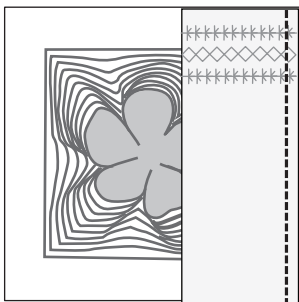



3. Place the embroidered block with the yellow strip at the top, right sides together, with the 3" x 10 ½" (7.5 x 27 cm) taupe strip and stitch. Press towards the strip just added.

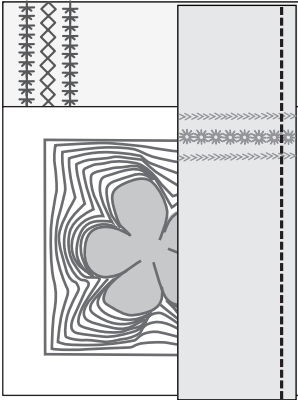

4. With the taupe strip at the top, place the 3" x 10 ½" (7.5 x 27 cm) yellow strip, right sides together and stitch. Press towards the strip just added.

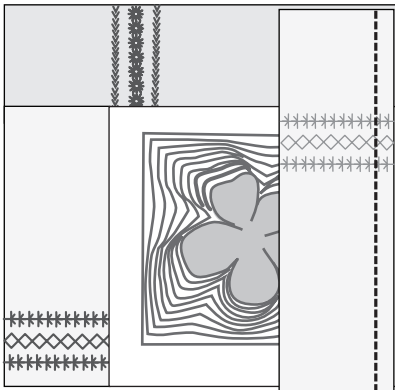


5. With the yellow strip at the top, place the 3" x 13" (7.5 x 33 cm) taupe strip, right sides together and stitch. Press towards the strip just added.

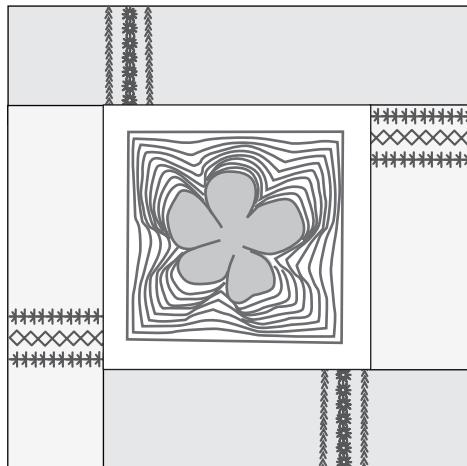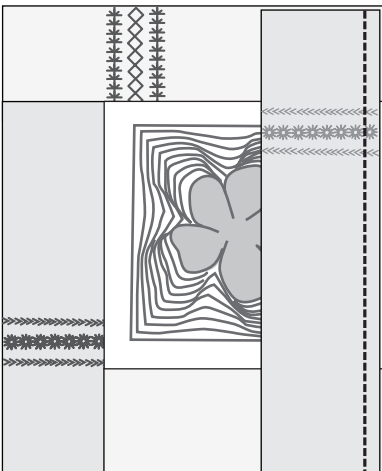


Burgundy/Bright Pink Blocks:

1. Place the embroidered light pink satin block, right sides together with the 3" x 8" (7.5 x 20.5 cm) bright pink satin strip and stitch using a ¼" (6 mm) seam allowance. Press towards the strip.
2. Place the embroidered block with the bright pink strip at the top, right sides together, with the 3" x 10 ½" (7.5 x 27 cm) burgundy strip and stitch. Press towards the strip just added.
3. With the burgundy strip at the top, place the 3" x 10 ½" (7.5 x 27 cm) bright pink strip, right sides together and stitch. Press towards the strip just added.
4. With the bright pink strip at the top, place the 3" x 13" (7.5 x 33 cm) burgundy strip, right sides together and stitch. Press towards the strip just added.

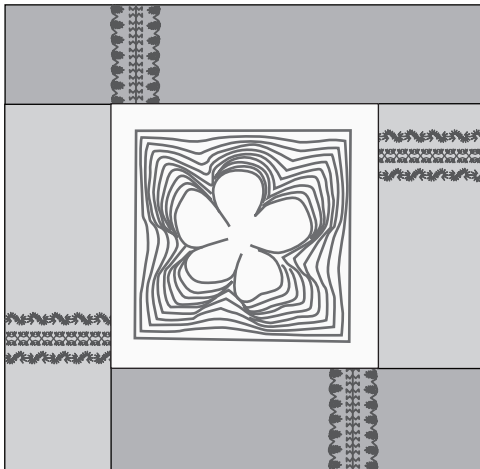


Quilt Assembly:

1. Lay out the quilt as shown and stitch the rows diagonally together.
Note: The triangles have been cut larger than needed; trim them down after this piecing is completed.

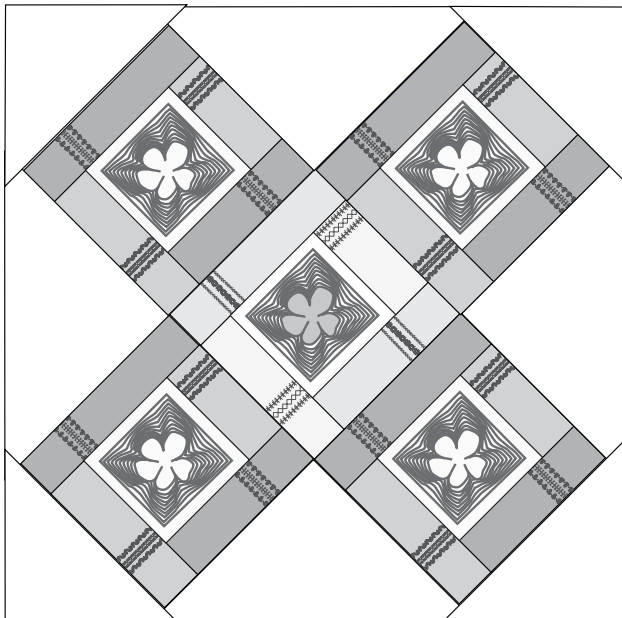

Borders:


1. Measure across the quilt and cut two border strips to that measurement. Mark the center of the top and bottom of the quilt with a pin.
2. Mark the center of the two border strips. Pin the border strips to the top and bottom of the quilt with right sides together and matching center markings.
3. Sew the border strips to the quilt using a $\frac{1}{4}$ " (6 mm) seam allowance. Press towards the border.
4. Measure across the quilt with the borders attached and cut the two remaining border strips to that measurement. Mark the center of the sides of the quilt with a pin.
5. Mark the center of the two side border strips. Pin the border strips to the sides of the quilt with right sides together and matching center markings.
6. Sew the border strips to the quilt using a $\frac{1}{4}$ " (6 mm) seam allowance. Press towards the border.

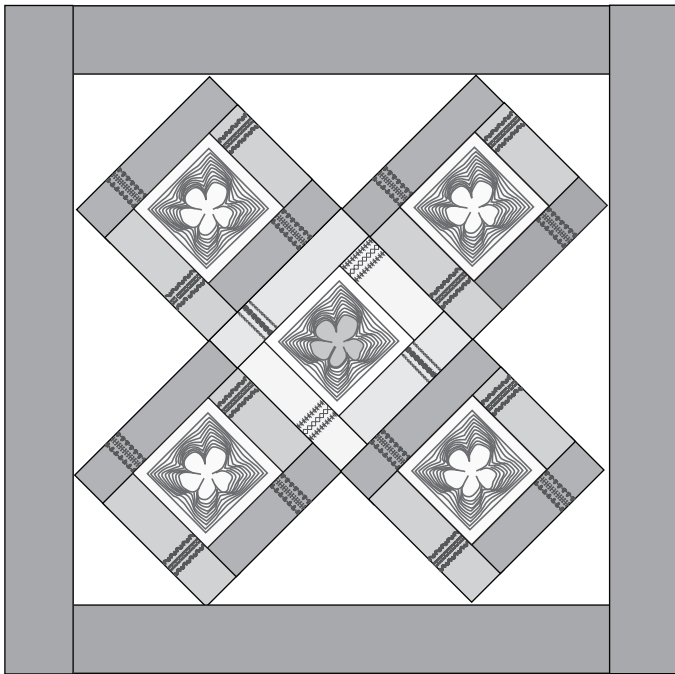


Quilting:

1. Place the backing fabric on a flat surface, right side down. Center the batting and the quilt top right side up on top of the backing fabric. Secure with safety pins approximately every 4" (10 cm) all over the quilt. Start from the center and work your way out.


2. Snap on the Clear Stitch-in-Ditch Foot and stitch between the rows and around each of the blocks.
3. With a water soluble marker, mark quilting lines a ¼" (6 mm) apart on each of the triangle blocks as illustrated.

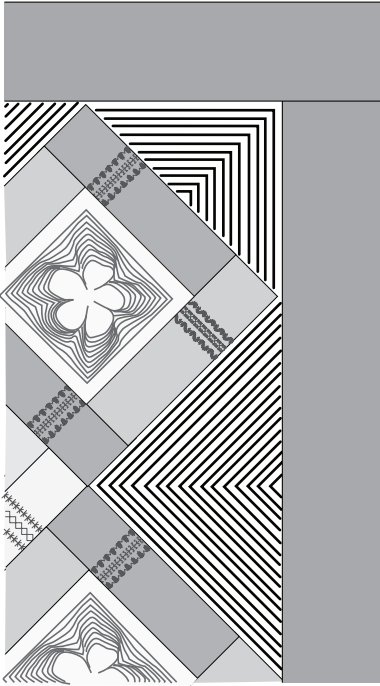

4. Snap on the 0 Foot and engage the IDT™ and stitch with white rayon embroidery thread.
5. Snap on the Sewing Star Foot. Place the embroidered appliqué blocks on the large triangles as illustrated and appliqué in place using the blanket stitch and invisible thread.

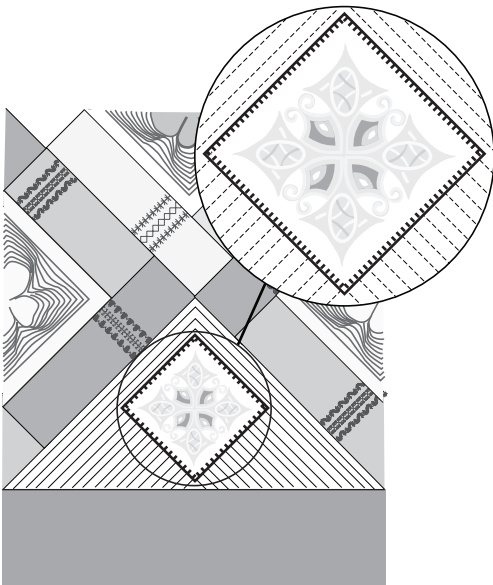

6. Snap on the Embroidery/Sensormatic Free-motion Foot. For instructions on how to set up your machine for Sensormatic free-motion please consult your Owner's Manual.
7. Stipple quilt around the large embroidered blocks.

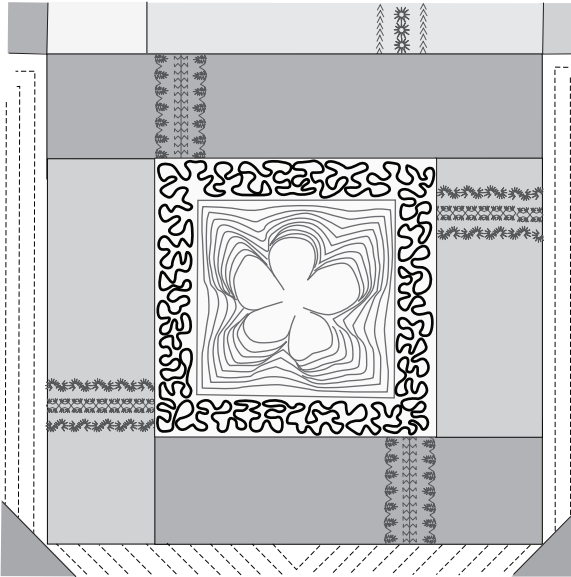

Binding:

1. Join the 2 ½" (6.5 cm) wide binding strips together with mitered corners to make one long strip for binding.
2. Trim the excess fabric to a ¼" (6 mm) seam allowance and press open. Fold strip in half lengthwise with wrong sides together and press.
3. Starting on wrong side of the quilt, sew the raw edge of binding to the raw edge of quilt with a ¼" (6 mm) seam allowance. Sew around all sides mitering each corner. To miter corners of quilt binding sew to within ¼" (6 mm) of corner. Remove from machine. Fold fabric up and back down at corner forming 45 degree angle. Start sewing the next seam ¼" from folded corner and sew to next corner stopping ¼" from corner.
4. Repeat for all corners.
5. Turn the binding to the front of your quilt and pin. Tuck in the extra fabric at the corners. Straight stitch in place from the right side using the Bi-level Top Stitch Foot.