

# FULL BODY ASSEMBLY INSTRUCTIONS


## PARTS:

1x Base

1x Foot Pedal

1x Waterfall Arm

1x Spring

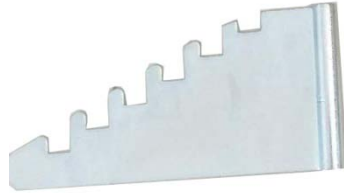

1x Topper

1x Pendant

1x Allen Wrench

1x Full Body Dress Form



1x Inner Pole

Top of Inner Pole

Bottom of Inner



1x Outer Pole

Waterfall Arm goes here

Top of Outer Pole

Bottom of Outer Pole




**Step 1:** Place Base on floor and insert foot pedal in designated area of the base.




**Step 2:** Insert the Inner Pole (Bottom downward) into the hole of the base until it makes contact with the foot pedal. Use the provided "Allen Wrench" to tighten the small bolt on the side of the base once done.

**Test:** Step on foot pedal, you should feel some resistance. (The Pole should not move)

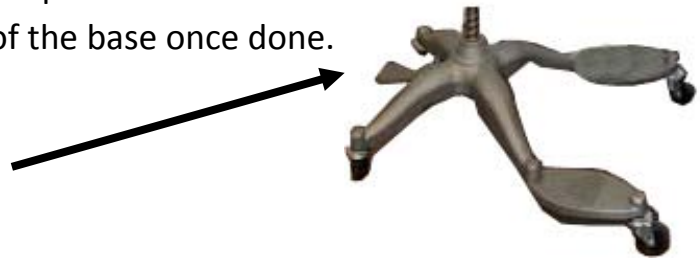

**Step 3:** Insert the spring over the Inner Pole until it is sitting on the base.

**Step 4:** Hold down the foot pedal while you use one hand to manually align the "slits" on the top of the inner pole. As you continue to hold down the foot pedal use your other hand to place the outer pole over the inner pole once aligned.

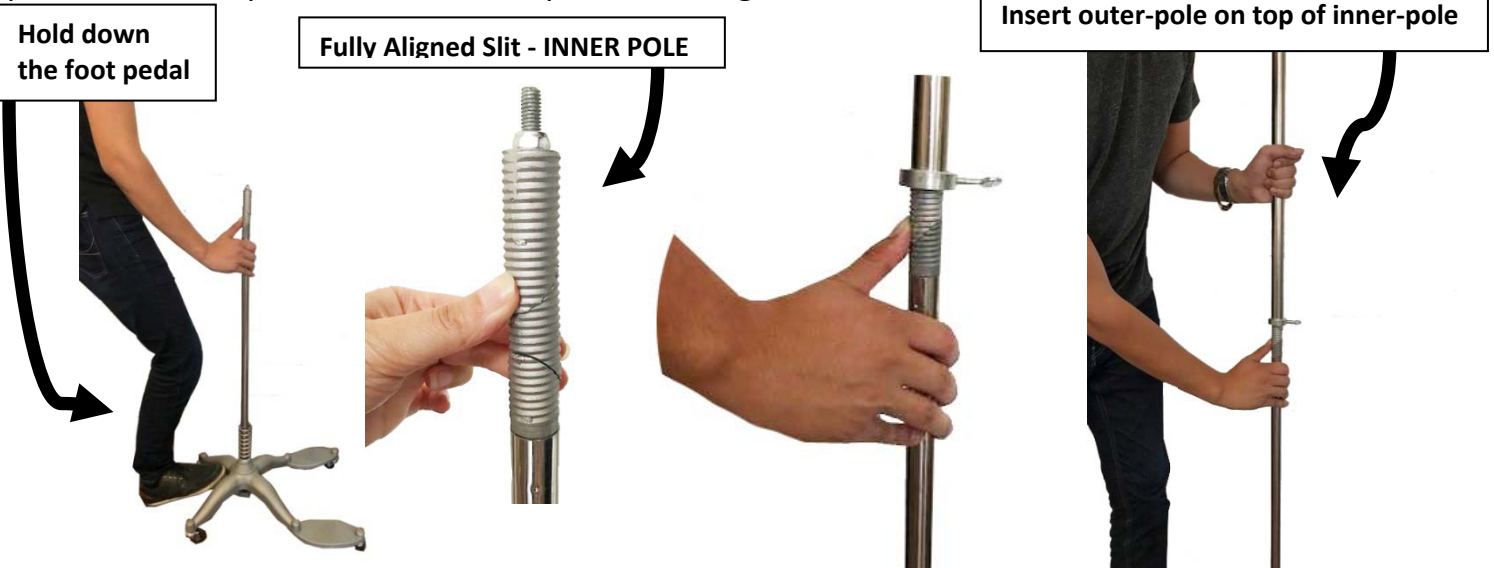

**Step 5:** Insert waterfall piece in rear outer pole slot.



**Step 7:** Hand tighten pendant into the dress form neck along with topper.

**Step 8:** Hang your dress form on the stretcher and tighten to hold form in place and your done!

**Questions? Need Help? Call us!  
1-888-818-1991 - Toll Free**