


Use this template **only if** these holes are not already pre-drilled. Otherwise, loosen any screws already installed to slip the rack in place.

Fashion Sewing Cabinets of America

Model 8300 - Brother/Babylock Module Rack Drill Template

Print on 8.5"x11" Letter size paper. When printing from a PDF change the printer properties to turn off scaling.

Mark and drill eight $\frac{3}{32}$ " holes $\frac{1}{2}$ " deep as shown. Use the $\frac{5}{8}$ " Phillips screws to attach the U-Straps around the module rod to the cabinet.

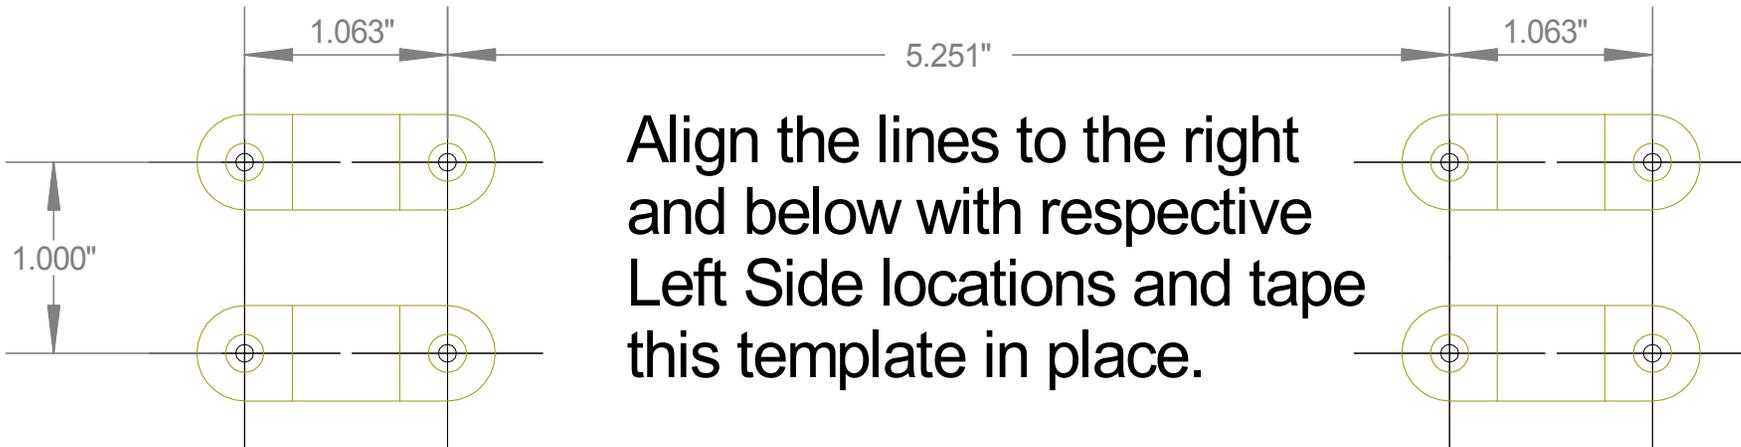

Align the lines to the right and below with respective Left Side locations and tape this template in place.

Left Side Front

Left Side Bottom

