


hems — designer hem

A fine hem finish often found on designer clothing suitable for fine fabrics.

1. To create a fine designer hem first, press under a $\frac{3}{8}$ " hem. (#1)





2. Using the edge joining foot, place the folded edge against the blade of the foot. Move the needle position to the far left and sew the edge. (#2)

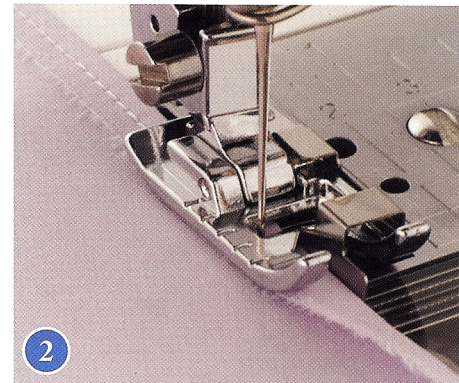

3. Carefully trim the raw edge close to the stitching. (#3)



4. Press the edge to the wrong side and position the fabric under the edge joining foot with the folded edge next to the metal blade. Sew the hem in place. You will see two rows of stitching on the wrong side when completed. (#4)

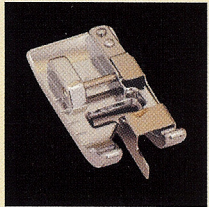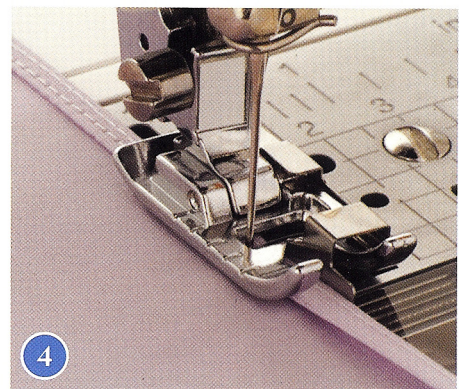

Edge Joining Foot

Stitch: Straight

Width: Pre-set

Length: Pre-set

Tension: Pre-set

Fabric, needles, notions required:

Fine fabrics such as batiste, silk, light-weight linen, cotton shirting or sheers; universal needle, size 70/10; rayon or heirloom embroidery thread for needle and bobbin