Projects > Baby Day Gown

The secret to this delightful little gown is that once the tie at the neck is pulled to make a bow at the back it gathers in the armholes and a simple gown is formed.


Materials and Supplies

- Brother Sewing/Embroidery Machine
- 12" x 26" Lightweight Fabric (Batiste or Swiss Nelona)
- Single fold bias binding or self-binding made out of a contrasting fabric (pink or blue)
- Contrasting fabric for armhole binding (5" x 6" of tiny gingham check)
- Brother Design Card: Linen & Lace Card No. 23
- Brother Binding Foot
- #80 fine needle
- Tear-away stabilizer or Sulky Soft 'N Sheer



Instructions

- 1. Lay the fabric out on the pattern and cut out the gown and the pocket.
- **2.** Embroider the pocket using the memory card. Remember to apply stabilizer to the back of the pocket before you embroider.
- **3.** Using the binding foot apply the binding to the edges of the pocket.
- **4.** Using the binding foot apply the binding to the side and lower edge of the gown and then across the top edge.
- **5.** Using a longer stitch attach the pocket to the gown.
- **6.** Mark the shape of the armhole on the right side of the fabric. Cut a piece of contrasting fabric in a rectangular shape that extends at least 1" beyond the shape of the armhole.
- **7.** Pin the right side of the contrasting fabric against the wrong side of the gown. Following the armhole shape that was drawn on the gown, join with a straight stitch.
- **8.** Slit the armhole and pull the contrasting facing to the right side.

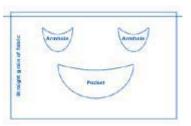



Projects > Baby Day Gown

- **9.** Trim the seam and clip the curves. Following the shape of the armhole trim to 3/4", turn under 1/8" and press. Stitch down the self binding.
- **10.** Press under 1/8" on the neckline with the wrong sides facing each other. Press again along the fold line at the neckline to form a panel for the drawstring.
- **11.**Sew the seam close to the lower edge. Sew another seam very close to the neckline.
- **12.**With right sides together sew a narrow drawstring 30" in length. Pull the drawstring through the panel at the neckline made when the binding was applied.

