



2500SZ

INDUSTRIAL SEWING MACHINE

MOTOR MANUAL


menu

parts breakdown illustration

- A. Arm bed components.....1
- B. upper shaft.vertical shaft.taje-up
 machanism..... 1
- C. swaying needle.Lower shaft.
 Rotating shuttle shaft machanism...3
- D. sewing line adjusted machanism... 3
- E. lower Feed lifting mechanism..... 5
- F. Feed lifting mechanism..... 5
- G. top Feed machanism components...7
- H. Multi points sewing mechanism.....7
- I. Lubrication mechanism.....9
- J. Accessories.....9

operation instruction

- one、 item of all components.....11
- two、 sewing machine specification.....12
- three、 installation.....12
 - 1. oil disk.....12
 - 2. knee-control component..... 12
 - 3. rubber cushions.....13
 - 4. Triangle Shock Pad.....13
 - 5. ear Shock Pad.....13
 - 6. knee lifter complying bar.....13
 - 7. The machine head.....13
 - 8. Pillow of the head.....13
 - 9. U type belt cover.....13
 - 10. C type belt cover..... 13
 - 11. Triangle belt cover 13
 - 12. D type belt cover.....13
- Four、 adjust sewing machine14
 - 1. Installing the needle..... 14
 - 2. removing the cap and adjust the tension.....14
 - 3. Winding the lower thread..... 14
 - 4. Threading the upper thread and adjust..... 15
 - 5.adjusting presser foot pressure..... 15
 - 6. adjusting the stitch length..... 15
 - 7. adjusting the height of feed dog and Tilt..... 15

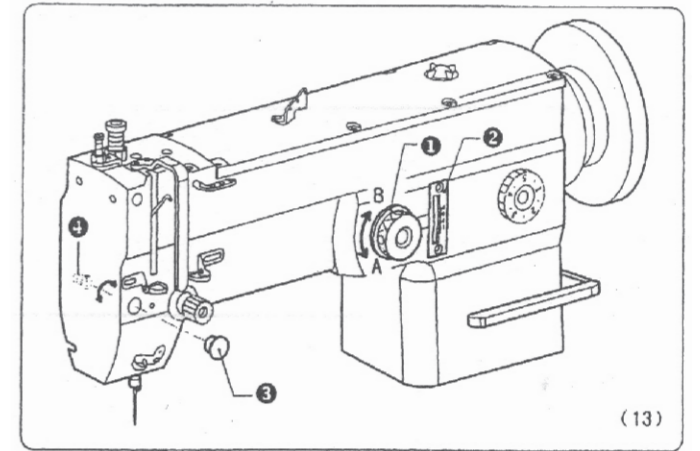

See figure (13)

8. Stitch width adjustments

<1> Coarse

Sewing dashboard ② shows the value of sewing (mm), turn the hand wheel, can adjust the stitch width roughly, A direction decreases, B direction of the sewing increases.

<2> fine tuning

Open the rubber ③, Use a screwdriver to rotate the eccentric Shaw④, Adjust the stitch width on the left-right slightly.

Five, Trouble causes and solutions

NO	Fault Status	View Matters	cause of issue	Approach
1	broken needle	Direction of the needle、 height	The needle in the wrong direction	To the upper right direction
		Direction of the needle、 height	Looper	Change needle
		Feed dog stroke	Needle bar does not run with the feed stroke	Adjust the feed dog stroke
		The needle bar lift amount	Needle and hook bad trip	Adjust the feed dog stroke
		Needle bar height	Needle and hook bad trip	Adjust the feed dog stroke
		Needle and bobbin main distance	Needle and hook bad trip	Adjust the feed dog stroke
2	broken thread	Threading method	Threading Error	The correct way threading
		Sewing needle	Needle tip has been bent or broken	Change needle
		Direction of the needle、 height	Bad position on the needle	The needle in the right direction
		Upper thread tension	Upper thread tension is too strong	Adjusting the thread tension
		The bottom line tension	The thread tension is too strong	Adjust the bottom line tension
		The thread spring exercise	Too much exercise	Adjusting spring exercise
3	bad line	The thread tension spring	Pick-up spring tension too weak	Adjust the spring tension of the thread
		Thread tension	Bottom, upper thread tension is bad	Adjust the bottom thread tension
		The thread tension spring	Bad the thread tension spring	Adjust the thread tension spring
		Presser	Presser foot too high	Adjust the presser foot height
4	Stitch disorder	The pressure of presser foot	The pressure of presser foot is too small	Adjust the presser foot pressure
		Feed dog height	Feed dog height is too low	Adjust the feed dog height
		The pressure of presser foot	The pressure of presser foot is too small	Adjust the pressure of presser foot
		Bobbin	Bobbin scratches	Polished smooth or replace
5	Sewing material fold	V-belt tension	Belt tension is too small	Adjust the belt tension
		Upper thread tension	Upper thread tension is too strong	Adjusting the thread tension
		The bottom line tension	The thread tension is too strong	Adjust the bottom line tension
		The thread tension spring	Bad the thread tension spring	Adjust the thread tension spring
		Vaulting box spring exercise	Too much exercise	Adjusting spring exercise
6	The bottom line tangled	The pressure of presser foot	The pressure of presser foot is too small	Adjust the pressure of presser foot
		Bobbin	Pull the bottom line, reverse the bobbin	Reverse the bobbin
		Bobbin	Bobbin is not turning smoothly	Replace the bobbin
		Bobbin winding amount	Excessive amount of winding	Limit of no more than 80%

4. Threading the upper thread and adjust


See figure (9)

< 1 > Threading the upper thread

Pull the thread out and through the place as the picture.

< 2 > adjusting the thread surface

Turn the thread-running plate(2),X direction is more tension,Y direction is less tension.

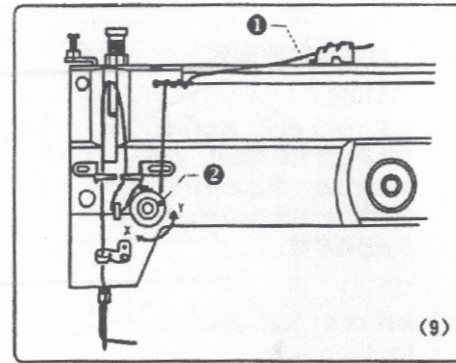

5. adjusting presser foot pressure


See figure (10)

< 1 > adjusting out presser foot pressure

Turn the screw 1, A direction presser foot more pressure ,B direction presser foot less pressure, must fix the screw 2 after well adjusted.

< 2 > adjusting inside presser foot pressure


Turn the screw 3, C direction presser foot more pressure , D direction presser foot less pressure, must fix the screw 4 after well adjusted.

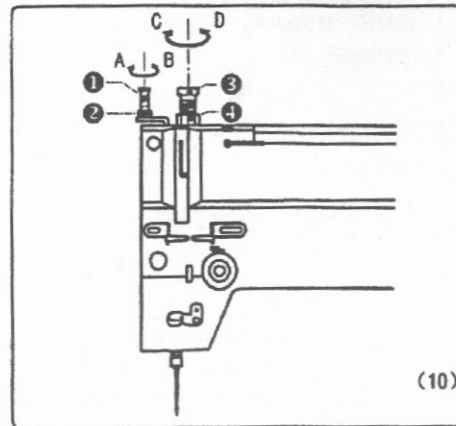

6. adjusting the stitch length

See figure (11)

The feed regulating dial is show stitch length (mm), can turn left or right to match your request.

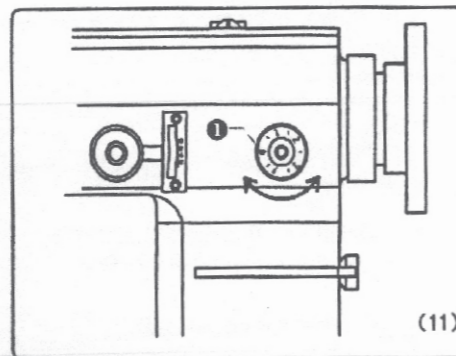

See figure (12):

7. adjusting the height of feed dog and Tilt

< 1 > adjusting the height of feed dog




Loosen the screw of 1 , raise or lower the tooth crank to adjust the height of the feed dog.Turn the pulley until the feed dog rises to the highest position.

So the feed dog will rise to about 1.0-1.2mm above the needle plate is the best.


< 2 > adjusting the tilt of feed dog

Loosen the screw of 5 , turn the shaft 6 to adjust the tilt of the feed dog.


After adjusted, the height of the feed dog also changed, so need to readjust the height of the feed dog.

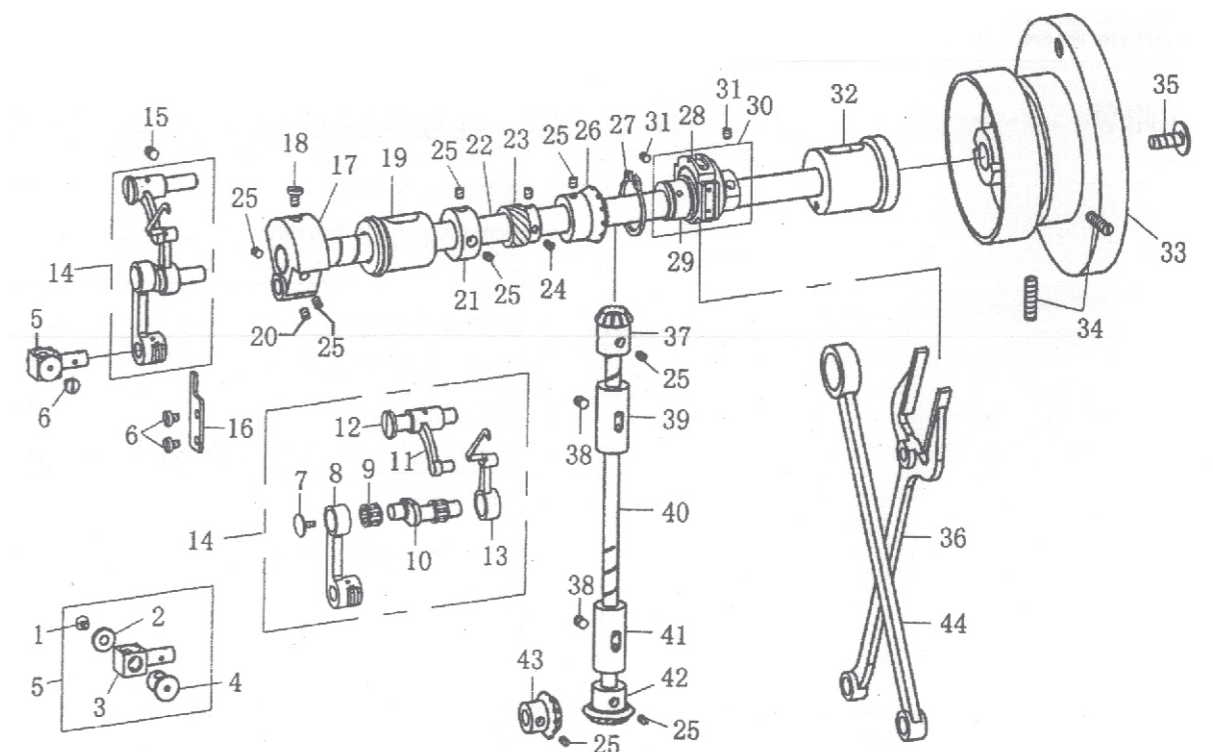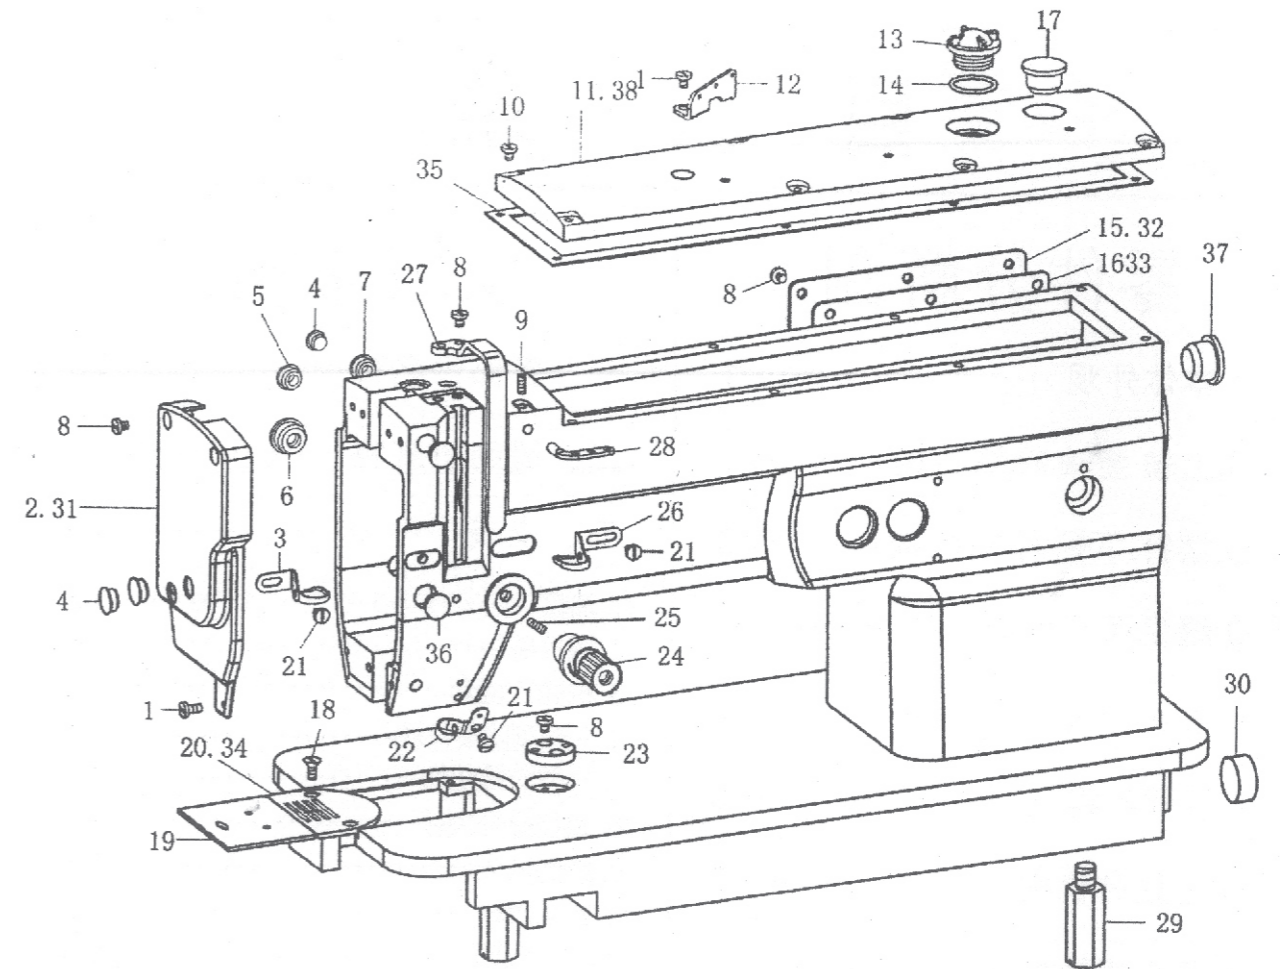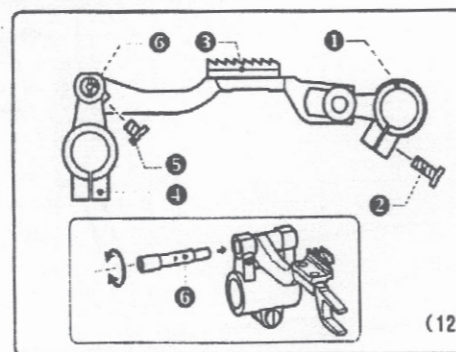

1. Installing the needle
<1530>
See figure(6-1), Turn the machine pulley to move the needle bar to its highest position.
Loosen the screw 2, hold the needles 1 with their groove facing inward, insert them all the way into the needle bars. And retighten the screws 2.

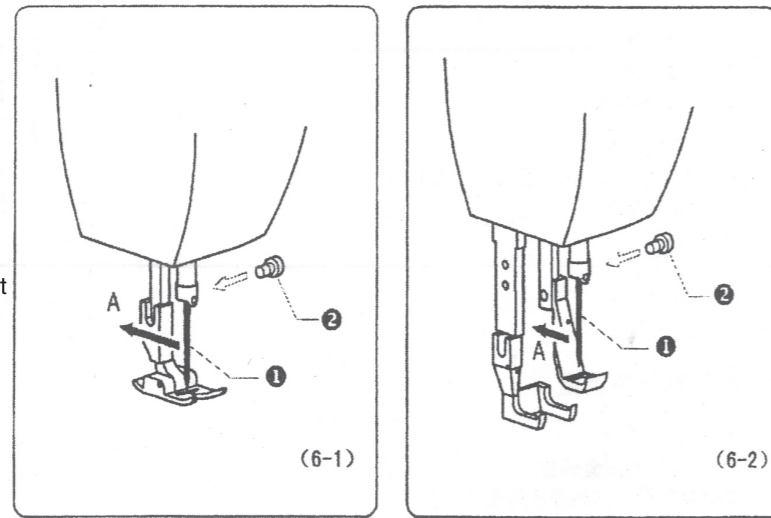


<2530>
See figure(6-2), Turn the machine pulley to move the needle bar to its highest position.
Loosen the screw 2, hold the needles 1 with their groove facing inward, insert them all the way into the needle bars. And retighten the screws 2.

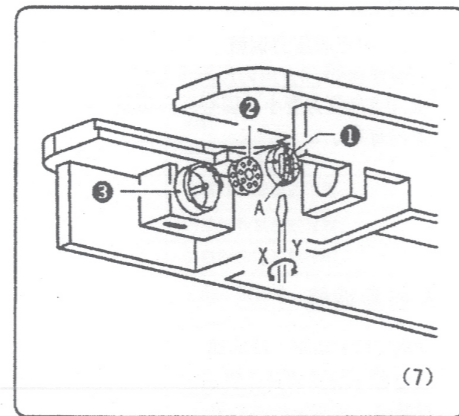

2. removing the cap and adjust the tension.
See figure(7)

<1> Removing the cap
Pull the puller of the cap and take out the cap, insert the bobbin into the cap. Insert the cap into the rotary hook.

<2> adjust the tension of the bottom thread
See figure, use screwdriver turn screw A, X direction less tension, Y direction more tension.

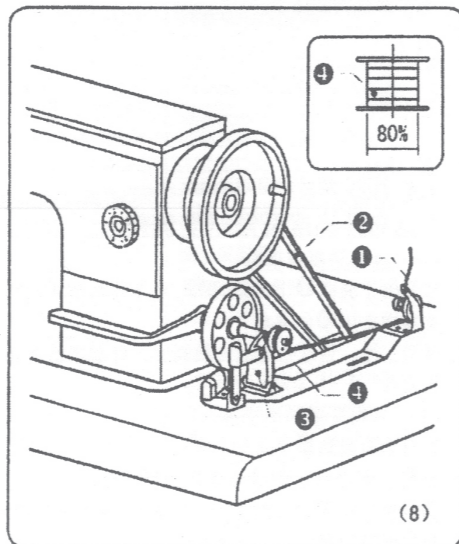


3 Winding the lower thread

After connected the lower thread 1 as pic see figure 8, push the spanner of the thread winding 3, make it attached to the belt and run with it.
The thread of the bobbin full with 80% is the best.

See figure 3
3. rubber cushions
Insert the two rubber cushions 1 into the notches in the work table, and then secure them with the two nails 2.

4. Triangle Shock Pad
insert the two Triangle Shock Pad into the two side of the oil pan, and then secure them with the two nails 4.


5. ear Shock Pad
insert the two ear Shock Pad into the two side of the oil pan, and then secure them with the two nails 6.

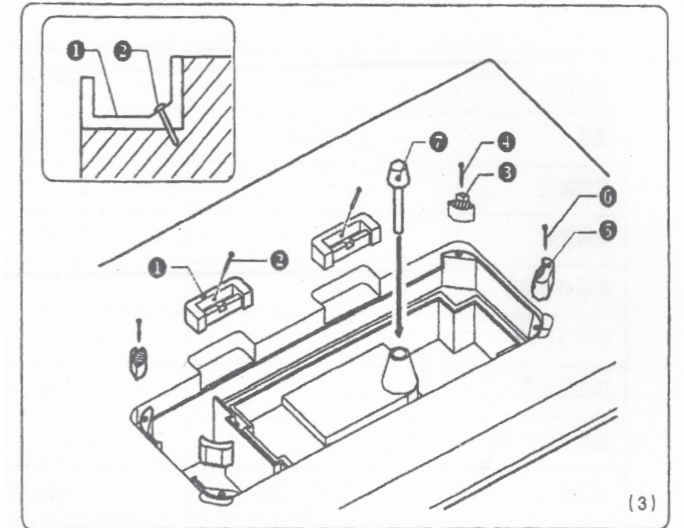

6. knee lifter complying bar
Insert the knee lifter complying bar 7.


7. The machine head
Insert the hinge 1 onto the machine head, and then onto the rubber cushion 2.

8. Pillow of the head
Tap the pillow 3 into the table hole.

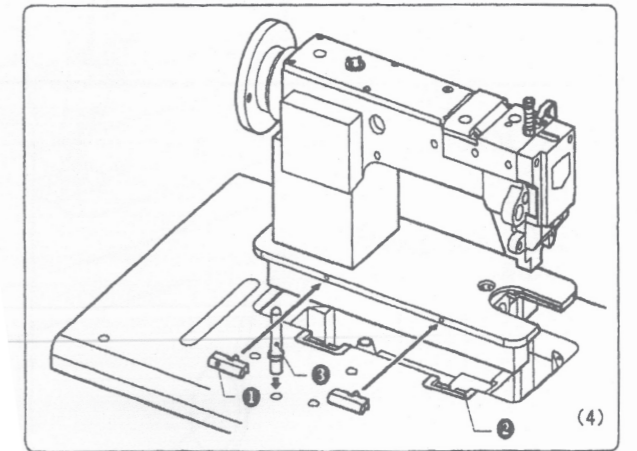

9. U type belt cover
Use the screw 2 to fix the U type belt cover 1 to the machine head.

10. C type belt cover
Use the screw 4 to fix the C 3 type belt cover to the machine head.
Use the screw 5 to tighten the C type and U type belt cover.

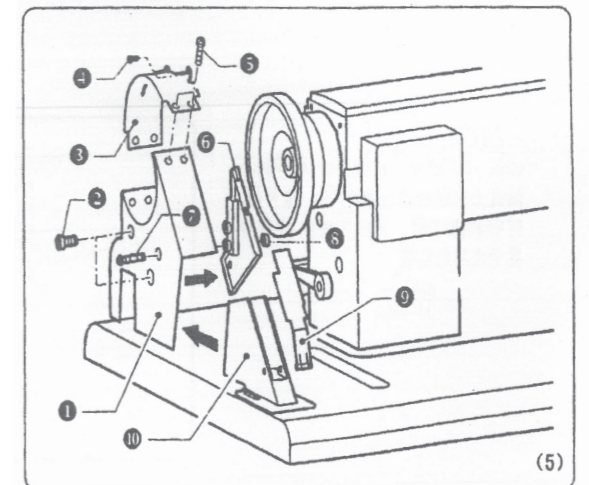

11. Triangle belt cover
Tighten the U type belt cover and Triangle belt cover by screw 7 and nut 8.

12. D type belt cover
Insert the D type belt cover into the D type belt.



A. Arm bed components

(Memo:#01 for 1530 #02 for 2530)

Memo	Ref No.	Part NO.	item	Amt	Req	Memo	Ref No.	Part NO.	item	Ref No.
	01	Y43-D8X6	screw 11/64-40X5	3		1	20	1530A-20	sliding plate complete	1
01	02	1530A-2	fale plate	1			21	Y35-D7X7	screw 9/64-40X7	3
	03	1530A-3	threadcam DY2-29	1			22	#28	threadcam	1
	04	P11.8X5	rubber plug (D=11)	4			23	1530A-23	holder DY2-22	1
	05	p10.8x4	rubber plug (D=10)	3			24	1530A-24	Cramping group DY2-901	1
	06	P15.8X6	rubber plug (D=14.5)	1			25	Y59-D0X7	scew 15/64-28X7	3
	07	P8.8X5	rubber plug (D=8)	1			26	1530A-26	threadcam	1
	08	Y43-D7X7	screw 11/64-40X7	8			27	1530A-27	stitch-sfaff shield	1
	09	Y43-D0X6	screw 11/64-40X6	8			28	#19	three-eye finger	1
	10	Y43-D7X9	screw 11/64-40X9	8			29	1530A-29	bed leg	3
	11	1530A-11	upper corer	1			30	P24X7	rubber plug (D=23.5)	1
	12	1530A-12	threadcam 33A-35	1	02	31	2530A-31	fale plate	1	
	13	1530A-13	oil screen complete	1	02	32	2530A-32	side plate	1	
	14	OR-18	O-type ring	1	02	33	2530A-33	washer	1	
01	15	1530A-15	side plate	1	02	34	2530A-34	needle plate	1	
01	16	1530A-16	Washer	1		35	P13	rubber plug (D=12)	1	
	17	P18.5	rubber plug	1		36	P8	rubber plug (D=7)	1	
	18	#263	scew 11/64-40X7	2		37	P20X4	rubber plug	1	
	19	1530A-19	sliding plate	1	02	38	2350A-38	upper cover	1	

B. 1530, 2530 upper shaft, vertial shaft, taje-up machanism. (Memo:#01 for 1530 #02 for 2530)

Memo	Ref No.	Part NO.	item	Amt	Req	Memo	Ref No.	Part NO.	item	Ref No.
	01	1530B-1	scew 11/64-40X3.5	1			23	1530B-23	needle sewing drive gear(upper)	1
	02	1530B-2	washer	1			24	Y43-SD0X4	screw 11/64-40X4	2
	03	1530B-3	needle crank	1			25	Y63-SD0X6	screw 1/4-40X6	10
	04	1530B-4	needle crank	1			26	#116	bevel gear	1
	05	1530B-5	needle crank complete	(1			27	S26	C thrust collar	1
	06	Y43-D8X6	screw 11/64-40X6	3			28	#129	Feed "Y" connecting asm	1
	07	1530B-7	screw	1			29	1530B-29	eccentric cam DY4-904B	1
	08	1530B-8	needle bar crank	1			30	1530B-30	eccentric cam complete DY4-904	(1
	09	08X12X08	needle bearing	2			31	Y59-D0X7	screw 15/64-28X7	1
	10	1530B-10	thread take-up crank	1			32	#133	main shaft thrust collar (right)	1
	11	1530B-11	take-up thread con	1			33	1530B-33	hand wheel 33B-69	1
	12	1530B-12	shaft	1			34	Y59-D0X15	screw 15/64-28X15	2
	13	1530B-13	take-up thread	1			35	#136	screw 11/32-28X13	1
	14	1530B-14	take-up thread complete	(1			36	1530B-36	feed holder	1
	15	Y59-D0X15	screw 15/64-28X15	1			37	#117	vertial shaft upper gear	1
	16	1530B-16	rail	1			38	Y59-D0X11	screw 15/64-28X11	2
	17	1530B-17	needle bar crank	1			39	#119	vertial shaft thrust collar	1
	18	#105	screw 9/32-28X10	1			40	1530B-40	vertial shaft	1
	19	#103	front bushing	1			41	#120A	vertial shaft thrust collar D=17.5	1
	20	Y63-D0X5	screw 1/4-40X5	1			42	#124	vertial shaft lower gear	1
	21	#102	upper shaft retainer	1			43	#125	lower shaft right gear	1
	22	1530B-22	arm shaft	1			44	1530B-44	toothed connecting bar 33B-74	1

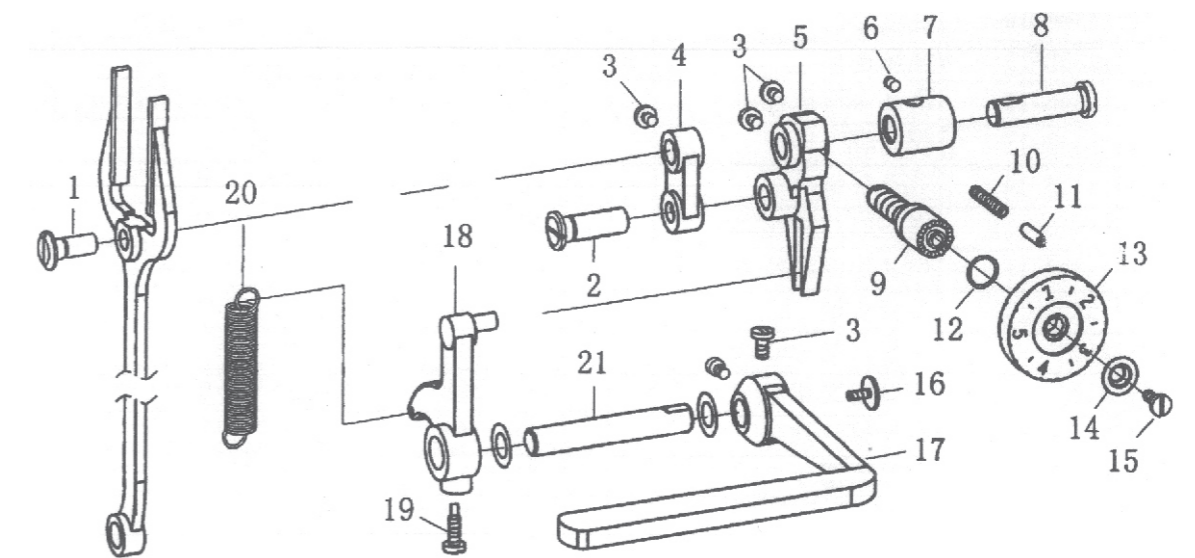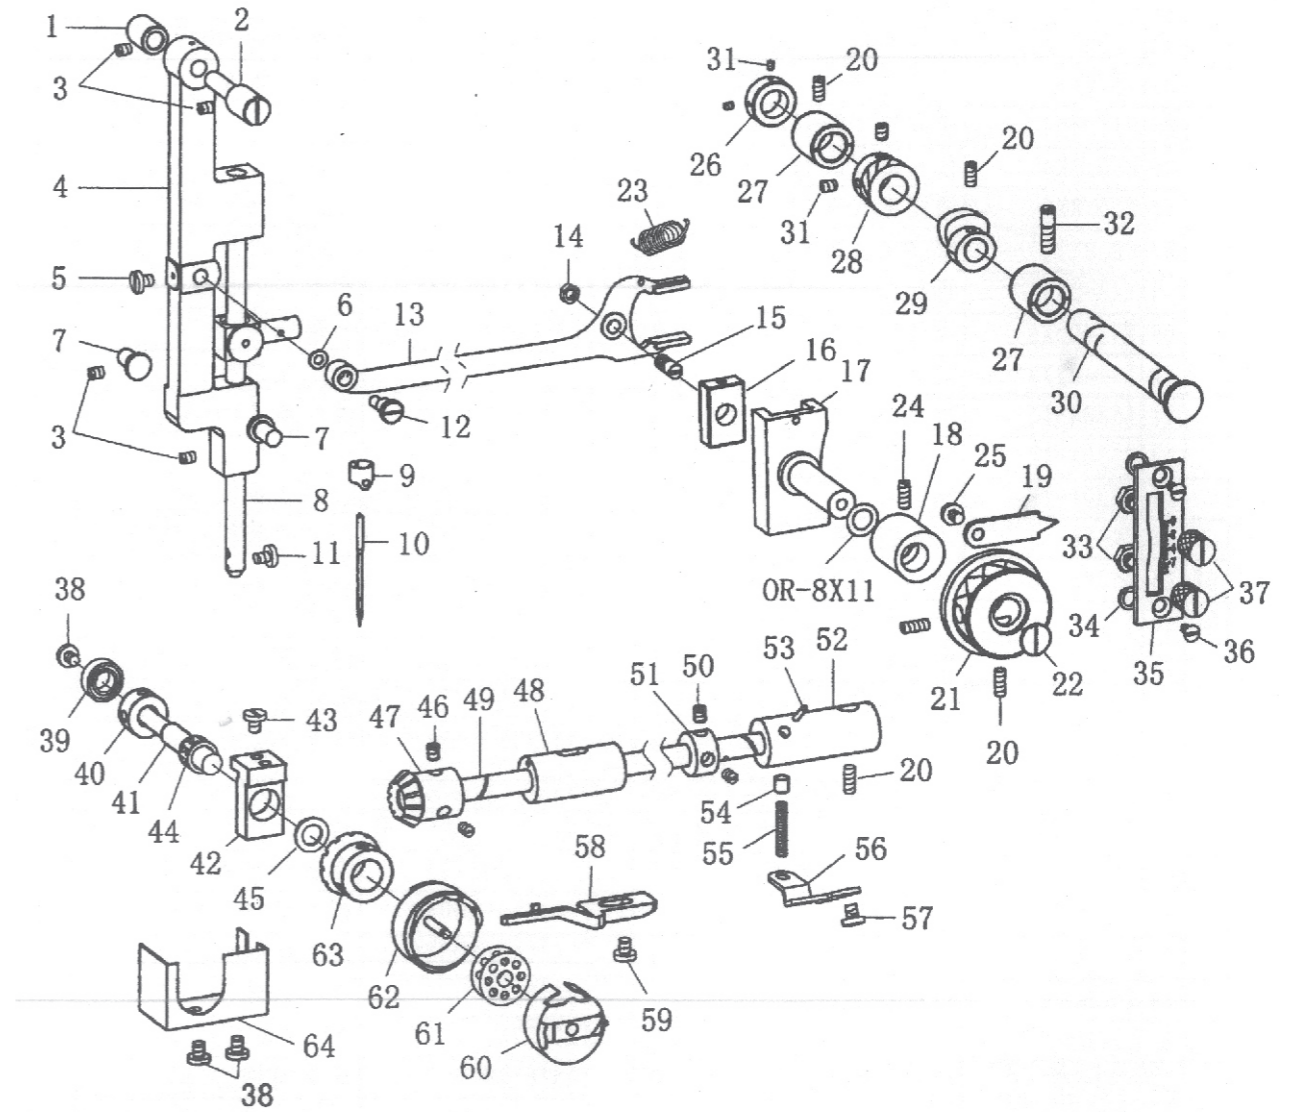


two、 sewing machine specification


model item	1530	2530
sewing speed	2000spm	2000spm
stitch width	2点 2 points	2点 2 points
needle	Dpx5	Dpx17
take-up thread stroke	73	73
needle bar stroke	34	34
presser walking distance	-	3-7mm
presser foot lift	7mm	7mm
hook	horizontal hook(large)	horizontal hook(large)
application	light-middle	middle-heavy

installation


1. oil disk
(see figure 1)
Fix the oil disk to the table.

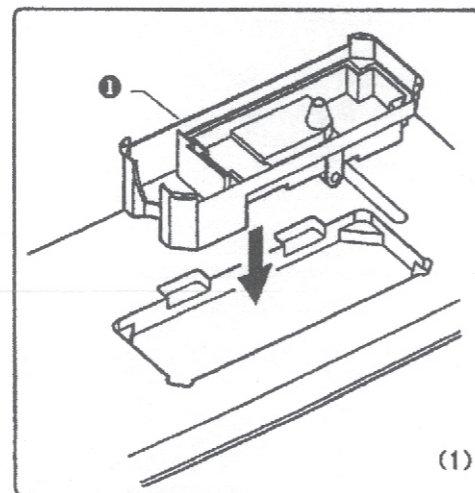

2. knee-control component
See figure 2
Place the knee lifter assembly onto the knee lifter bar on the oil pan. Loosen the screw (3) and (4), and adjust the knee lifter assembly (1) to the suitable position.

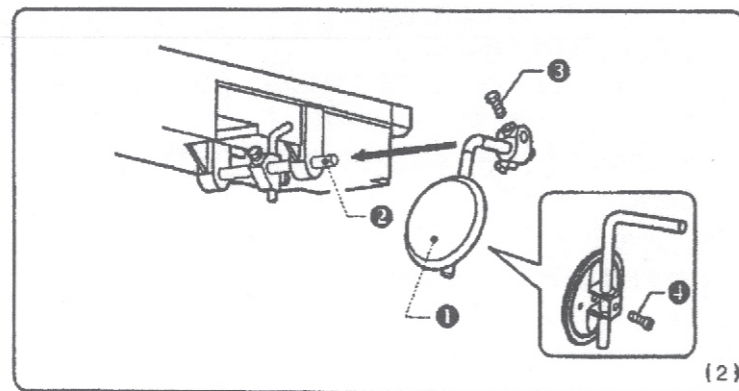

arm bed components

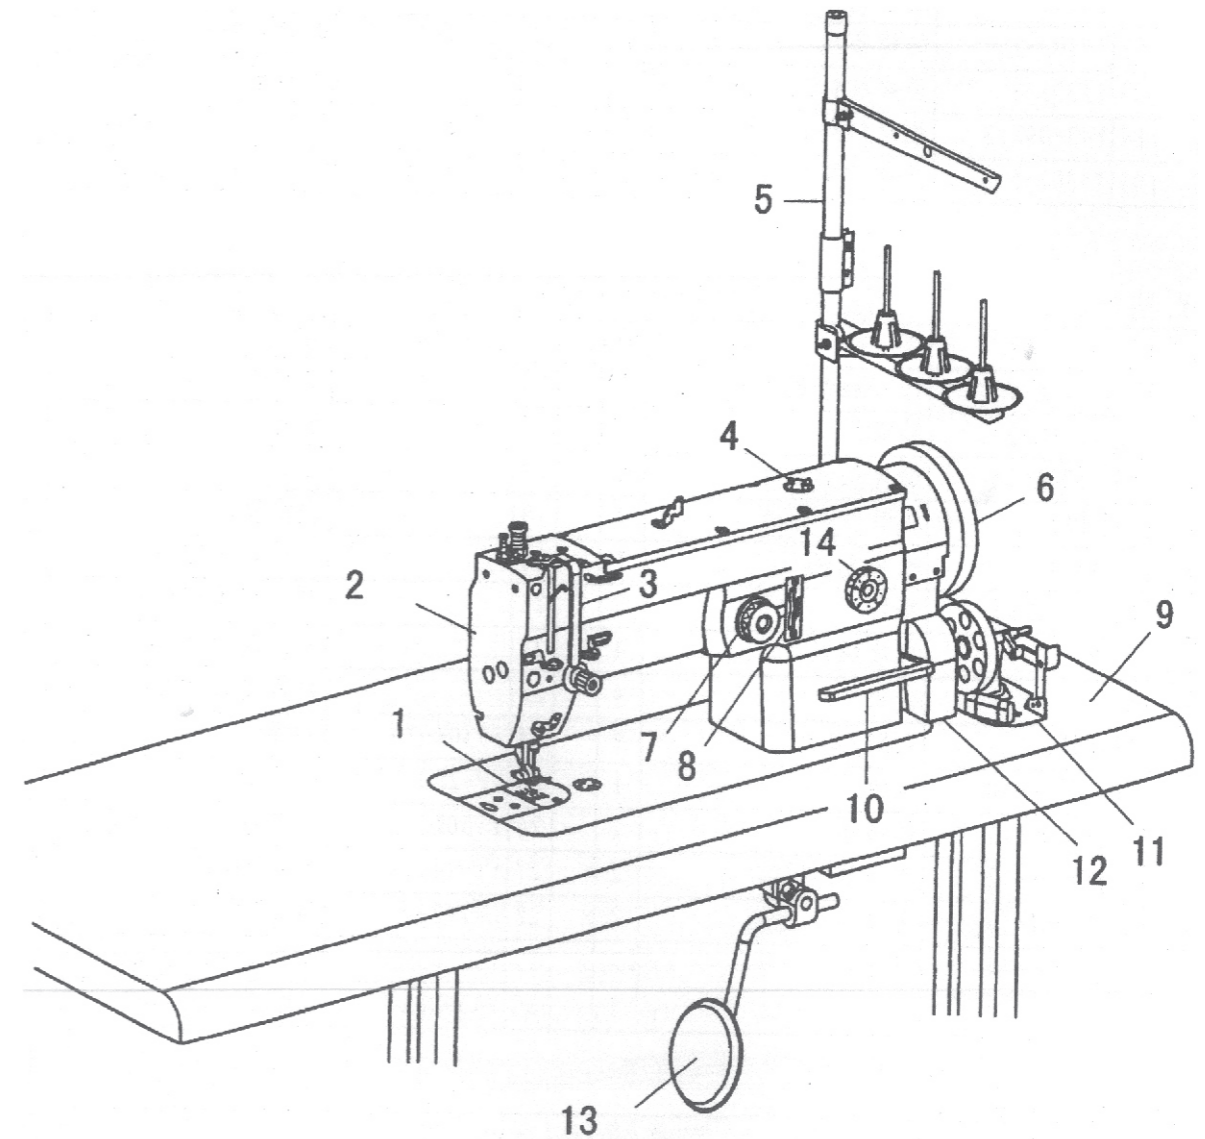

- | | | |
|---------------------------|---------------------------|------------------------|
| 1. needle plate | 2. panel | 6. stitch-scaff shield |
| 4. oil screen complete | 5. thread stand | 6. upper wheel |
| 7. stitch wide hand wheel | 8. stitch wide show plate | 9. table |
| 10. spanner | 11. thread-winding | 12. hand wheel cover |
| 13. knee lifter complete | 14. dial number | |

C. 1530. 2530 swaying needle.Lower shaft.Rotating shuttle shaft machanism (Memo:#01 for 1530 #02 for 2530)

Memo	Ref No.	Part NO.	item	Amt Req	Memo	Ref No.	Part NO.	item	Ref No.
	01	1530C-1	shaft of swaying rack screw	1		33	1530C-33	Nut 11/64-40X3	2
	02	1530C-2	shaft of swaying rack	1		34	1530C-34	washer DY8-201	2
	03	LW-M4X4	screw M4-0.75X4	6		35	1530C-35	sewing width showing plate	1
	04	1530C-4	swaying rack of needle bar	1		36	1530C-36	screw 11/64-40X10	2
	05	Y43-D8X6	screw 11/64-40X6	1		37	1530C-37	screw 11/64-40	2
	06	W5X10X1	washer W5X10X1	1		38	Y35-D6X6	screw 9/64-40X6	3
	07	1530C-7	swaying rack bush	2		39	696ZZ	shaft696	1
	08	1530C-8	needle bar	1		40	1530C-40	retainer of rotating shuttle shaft	1
	09	91C-38	thread finger	1		41	1530C-41	rotating shuttle shaft	1
	10	DPX5	needle bar	1		42	1530C-42	locating plate rotating shuttle	1
	11	Y3144-D4X4.5	screw 1/8-44X4.5	1		43	LT-M4X10	screw M4-0.7X10	2
	12	1530C-12	eccentric pin	1		44	08X12X08	needle bearing	1
	13	1530C-13	fork (lower)	1		45	W8X16X1	washer W8	(1
	14	Y71-LM11X4	Nut 9/32-28X4	1		46	Y63-SD0X6	screw 1/4-40X6	2
	15	1530C-15	shaft of fork (lower)	1		47	1530C-47	lower shaft gear	1
	16	1530C-16	sliding block	1		48	#119	left sleeve of lower shaft D=17	1
	17	1530C-17	sliding block support	1		49	1530C-49	hook driving shaft	1
	18	1530C-18	sleeve DY8-155	1		50	Y59-D0X5	screw 15/64-28X5	2
	19	1530C-19	stitch width pointer	1		51	#122	lower shaft retainer	1
	20	Y59-D0X7	screw 15/64-28X7	4		52	1530C-52	hook driving shaft thrust collar(right)	1
	21	1530C-21	stitch width knob	1		53	1530C-53	oil tube	1
	22	Y4728-D14X8	screw 3/16-28X8	1		54	1530C-54	screw 15/64-28X5	1
	23	1530C-23	spring	1		55	#160	spring	1
	24	Y59-D0X11	screw 15/64-28X11	1		56	1530C-56	frame	1
	25	#263	screw 11/64-40X7	1		57	Y59-D8X10	screw 15/64-28X10	1
	26	1530C-26	retainer of swaying needle shaft	1		58	1530C-58	rotating book position finger	1
	27	1530C-27	sleeve of swaying needle	2		59	Y43-D9X9	screw 11/64-40X9	1
	28	1530C-28	swaying needle gear (lower)	1		60	1530C-60	bobbin	1
	29	1530C-29	eccentric cam	1		61	1530C-61	bobbin case	1
	30	1530C-30	swaying needle shaft	1		62	1530C-62	hook	1
	31	Y43-SD0X4	screw 11/64-40X4	4		63	1530C-63	gear	1
	32	1530C-32	screw 15/64-28	4		64	1530C-64	butter box	1

D. 1530. 2530 sewing line adjusted machanism (Memo:#01 for 1530 #02 for 2530)

Memo	Ref No.	Part NO.	item	Amt Req	Memo	Ref No.	Part NO.	item	Ref No.
	01	1530D-1	shaft	1		12	OR-14	O ring	1
	02	#152	feed regulaotor screw	1		13	1530D-13	dial number	1
	03	Y59-D8X10	screw 15/64-28X10	5		14	1530D-14	washer	1
	04	1530D-4	stitch adjustment rod	1		15	Y4728-D8X15	screw 3/16-28X15	5
	05	1530D-5	feed regulator	1		16	Y4728-D14X8	screw 3/16-28X8	5
	06	Y59-D0X11	screw 15/64-28X11	1		17	#167	bartacking lever	1
	07	#158S	feed regulator bush	1		18	#906	bartacking srnk	1
	08	#159	feed regulator hinge pin	1		19	#171	screw 15/64-28X10	1
	09	1530D-9	feed regulator screw	1		20	#172	spring	1
	10	#160	spring for stopper pin	1		21	#169	bartaking lever shaft	1
	11	#162	stpper pin	1					1

I. Lubrication mechanism (Memo:#01 for 1530 #02 for 2530)

Memo	Ref No.	Part NO.	item	Amt Req	Memo	Ref No.	Part NO.	item	Ref No.
	01	1530J-1	oil pump body	1		06	1530J-6	Y43-D8X6	1
	02	1530J-2	screw 11/32-28 G-52	1		07	1530J-7	oil pipe for arm shaft	1
	03	1530J-3	screw 11/32-28 G53	1		08	1530J-8	oil returning pipe	1
	04	Y43-D8X13	screw 11/64-40X13	3		09	1530J-9	flet pouch for return oil filter	1
	05	1530J-5	spring for oil pipe	1		10	1530J-10	spring for oil felt	1


J. Accessories (Memo:#01 for 1530 #02 for 2530)

Memo	Ref No.	Part NO.	item	Amt Req	Memo	Ref No.	Part NO.	item	Ref No.
	01	1530K-1	oil reseroir complete	1		16		screwdriver(M)	1
	02	1530K-2	knee lift complete	1		17		screwdriver(S)	1
	03	1530K-3	knee lifter prop bar	1		18		oiler	1
	04	DPX5	needle	4		19		threadwinding component	1
	05	#811	machine head pole	1		20		spander 12X14	1
	06	1530C-61	bobbin	3		21		spander 10X12	1
	07	M5. 5X25	screw	4		22		Allen wrench 5mm	1
	08		nail	4		23		Allen wrench 2mm	1
	09	W6X12	washer W6X12	4		24	1530K-20	oie cam	1
	10	1530K-10	magnet	1		25	FP-2L	thread stand	1
	11	1530K-11	machine hinge plateasm	2		26	1530K-22	belt coverasm	1
	12	1530K-12	washer (big)	2		27	YT-M4X18	screw M4X18	1
	13	1530K-13	washer (middle)	2		28	LM7X3-M4	Nut M4	1
	14	1530K-14	washer(small)	2		29	Y59-D8X10	screw 15/64-28X10	2
	15		screwdriver(L)	1		30	Y43-D8X6	screw 11/64-40X6	6


1530K-1:Oil reservoir Memo:#01 for 1530 #02 for 2530

Memo	Ref No.	Part NO.	item	Amt Req	Memo	Ref No.	Part NO.	item	Ref No.
	1	1530K-1-1	oil reseroir	1		9	E-9	E9 type	1
	2	LT-M6X12	screw M6X12	2		10	1530K-1-10	washer	1
	3	1530K-1-3	hinge pin	1		11	1530K-1-11	washer 8X15	1
	4	1530K-1-4	spring	1		12	1530K-1-12	screw SM5/16-28	1
	5	1530K-1-5	frame	1		13	1530K-1-13	oil pam	1
	6	Y59-LM10X4	Nut 15/64-28X4	2		14	YT-M5X12	screw M5X12	2
	7	Y59-D0X25	screw 15/64-28X25	2		15	LM8X3-M5	Nut M5X3	2
	8	#171	15/64-28X15 side 9	1		16	W5X10	washer W5X10	2


E.

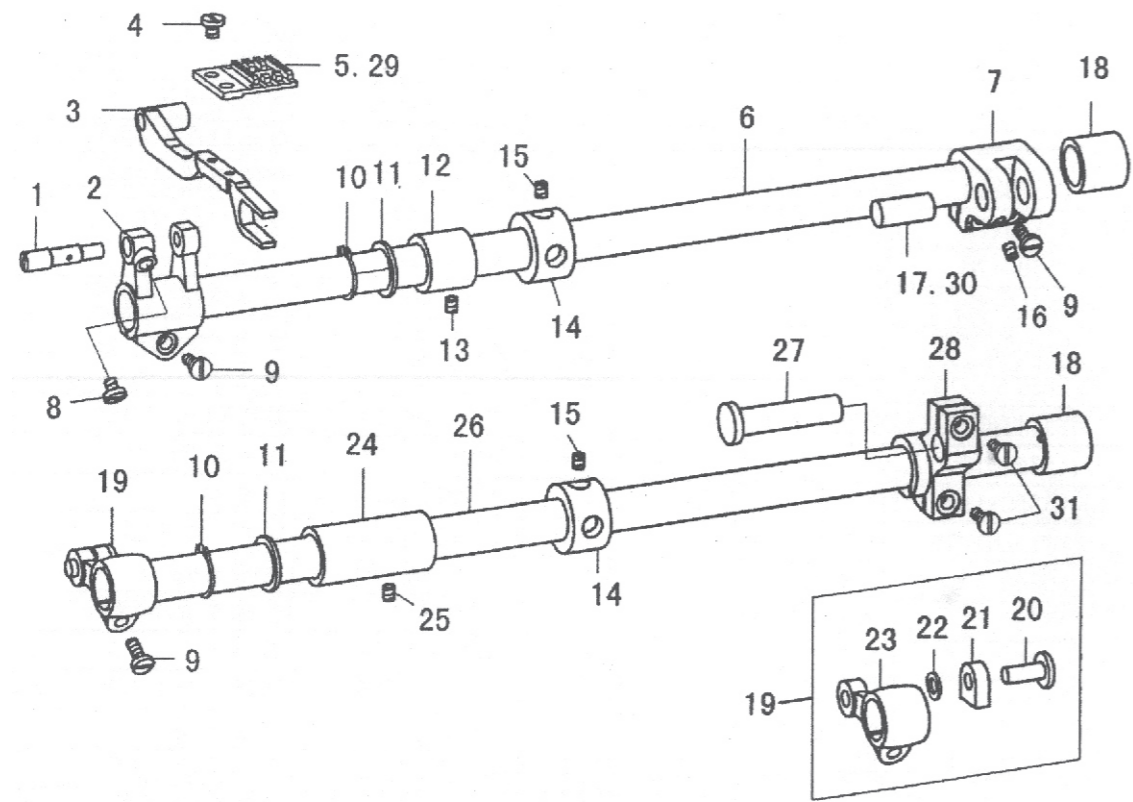


I.

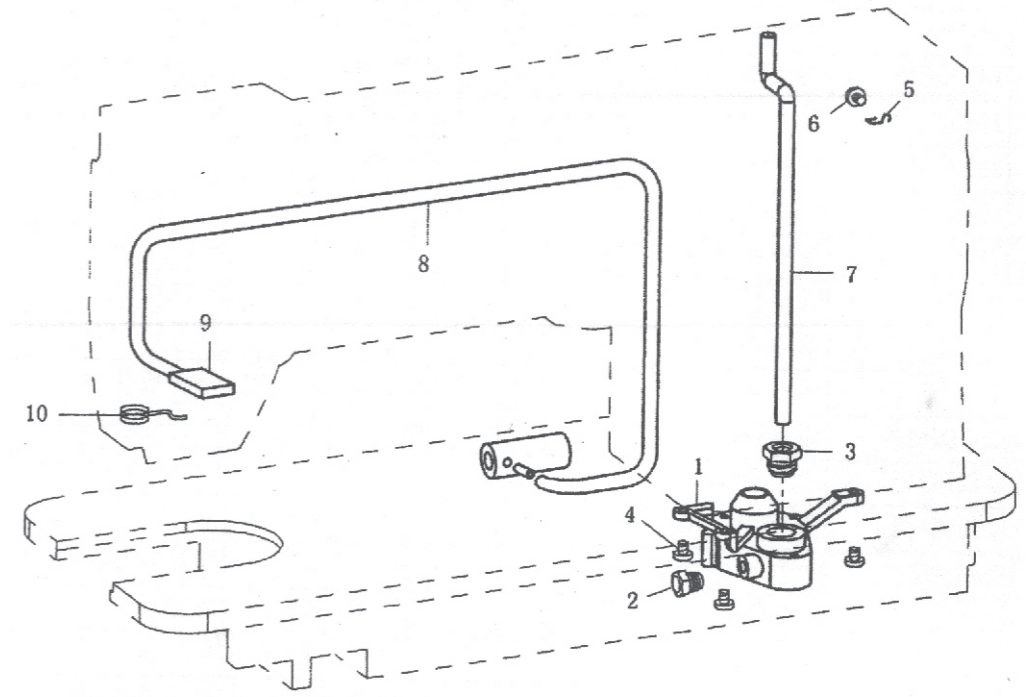

F.

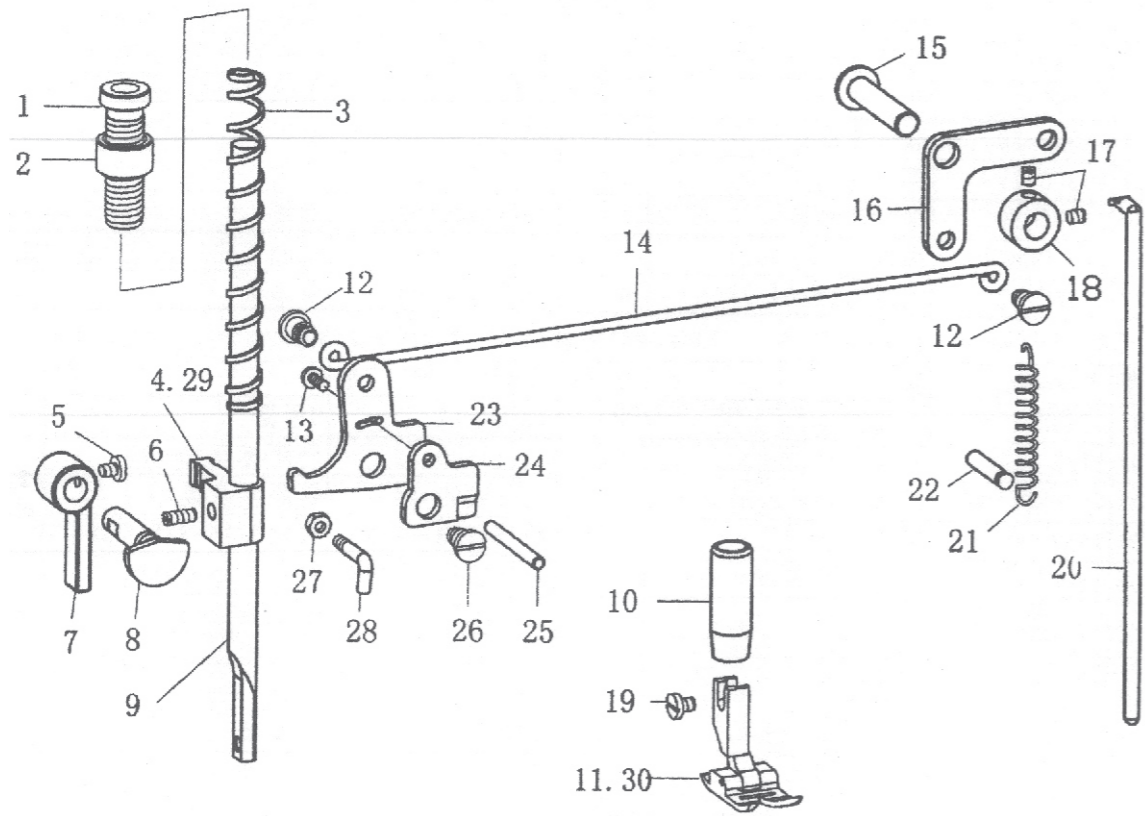

J.

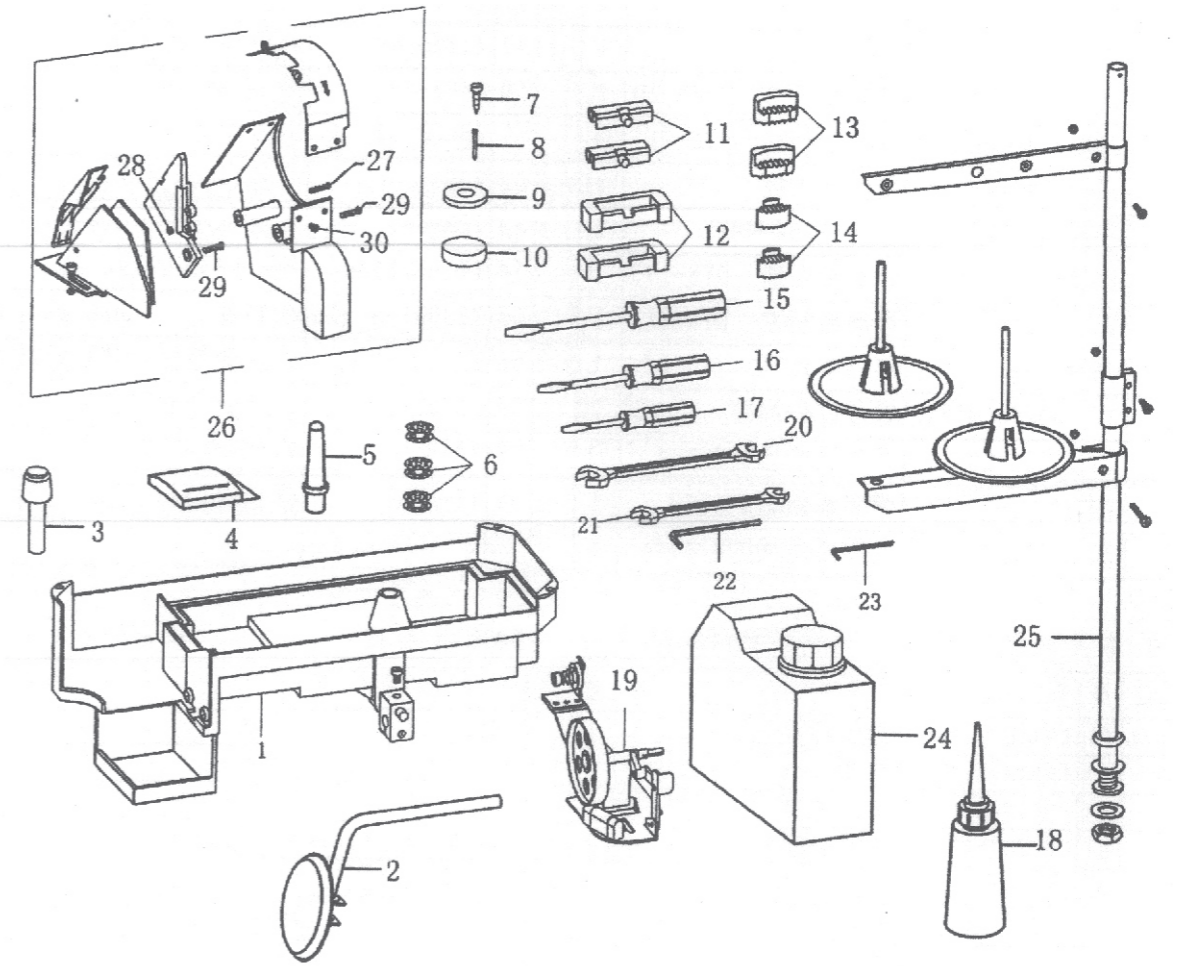

G. 2530 top Feed mechanism components (Memo:#01 for 1530 #02 for 2530)

Memo	Ref No.	Part NO.	item	Amt Req	Memo	Ref No.	Part NO.	item	Ref No.
	1	LW-M6X5	screw M6X5	2		31	E-4	E-4 type	1
	2	Y43-D0X6	screw 11/64-40X6	4		32	2530G-32	shin	1
	3	2530G-3	bushing GY8-155	2		33	Y59-D0X7	screw 15/64-28X7	2
	4	2530G-4	presser foot lift shaft	1		34	2530G-34	screw 1/4-40X16 37E-34	2
	5	LT-M6X20	screw M6X20	2		35	2530G-35	Pin DY8-208	1
	6	2530G-6	link adjusting crank	1		36	640E-63	fork lever 37E-36	1
	7	W6X12	washer W6	2		37	Y4728-D12X7	3/16-28X7 810-165	1
	8	2530G-8	link complete	1		38	Y59-LM9X3	Nut 15/64-28X3	1
	9	8X12X8	needle bearing	6		39	2530G-39	presser plate	1
	10	2530G-10	screw M6	1		40	2530G-40	link of walking foot	1
	11	24X28X13	needle bearing	1		41	Y35-D6X6	Nut 9/64-X6	2
	12	2530G-12	eccontic cam	1		42	2530G-42	holder for walking foot bar	1
	13	Y63-SD0X6	screw 1/4-40X6	2		43	Y35-D7X7	screw 9/64-40X7	1
	14	KM10X6-M6	Nut M6	1		44	2530G-44	walking foot	1
	15	S-24	S-24 type	1		45	2530G-45	walking foot lever	1
	16	2530G-16	Outer plate suspension support	1		46	640E-46	rear bushing	1
	17	2530G-17	block	1		47	Y63-LM10X5	Nut 1/4-40X5	2
	18	2530G-18	screw 3/16-28X7	1		48	2530G-48	pear crank	1
	19	2530G-19	crank	1		49	2530G-49	link of walking foot	1
	20	2530G-20	feed crank connecting rool 37E-20	1		50	640E-43	presser foot sewing shaft L=360	1
	21	2530G-21	screw 1/4-40X6 37E-21	3		51	2530G-51	guide plate	1
	22	2530G-22	set plate	1		52	#263	screw 11/64-40X7	2
	23	Y43-D7X7	screw 11/64-40X7	2		53	2530G-53	screw DY8-151	1
	24	2530G-24	front bushing	1		54	Y71-LM11X4	Nut 9/32-28X4L	1
	25	640E-57	pear crank	1		55	2530G-55	spring DY8-170	1
	26	W6. 5X13	washer W6.5	1		56	2530G-56	guidepin DY8-171	1
	27	Y6324-LM10X5	nut 1/4-24X5	1		57	2530G-57	set plate	1
	28	2530G-28	crank shaft complete	(1		58	#255	screw 9/64-40X7	2
	29	2530G-29	crank shaf	1		59	YT-M6X14	screw M6X14	1
	30	2530G-30	crank pin	1					

H. Multi points sewing mechanism (Memo:#03 for 3 points #04 for 4 points)

Memo	Ref No.	Part NO.	item	Amt Req	Memo	Ref No.	Part NO.	item	Ref No.
	01	1534H-1	wheel lock support	1		08	1534H-8	spring	1
	02	1534H-2	wheel rod	1		09	624ZZ	shaft	1
	03	1534H-3	connecting bar	1		10	91C-9	screw M4	1
	04	LT-M6X12	screw M6X12	2	03	11	1533H-11	3 points sewing eccentricteam	1
	05	1534H-5	Nut 3/16-32 78L2-21-4	2	04	12	1534H-12	4 points sewing eccentricteam	1
	06	Y4732-LM8X4	Nut 3/16-32X4	3		13	1534H-13	active bar 78L2-21-3	1
	07	#188-1	screw 3/16-28	1		14	1534H-14	screw 3/16-32 #267	1


E. 1530. 2530 lower Feed mechanism components (Memo:#01 for 1530 #02 for 2530)

Memo	Ref No.	Part NO.	item	Amt Req	Memo	Ref No.	Part NO.	item	Ref No.
	01	1530E-1	feed holder shaft	1	01	17	#226	shaft	1
	02	1530E-2	feed crank	1		18	1530E-18	feed driving shaft bushing(right)	2
	03	1530E-3	feed holder shaft	1		19	1530E-19	feed crank group	(1
	04	Y3144-D5X6	screw 1/8-44X6	2		20	1530E-20	moving crank group	1
01	05	1530E-5	feed dog	1		21	1530E-21	moving crank	1
	06	1530E-6	material feeding shaft	1		22	W6X10	washer W6	1
	07	#222	feed driving shaft crank (right)	1		23	1530E-23	feed crank group	1
	08	Y43-D7X7	screw 11/64-40X7	1		24	1530E-24	feed lifting shaft bushing(left)	1
	09	Y43-D8X13	screw 11/64-40X13	3		25	Y59-D0X11	screw 15/64-28X11	1
	10	S-15	s type	2		26	1530E-26	toothed shaft	1
	11	W15X20	washer W15	2		27	1530E-27	feed lifting shaft bushing(left)	1
	12	1530E-12	feed rocker shafter(left)	1		28	1530E-28	feed lifting shaft crank (right)	1
	13	Y59-D0X7	screw 15/64-28X7	1	02	29	2530E-29	material feeding shaft	1
	14	#211	thrust collar	2	02	30	2530E-30	shaft	1
	15	Y63-SD0X6	screw 1/4-40X6	4		31	Y4728-D8X15	screw 3/16-28X15	2
	16	Y43-D0X6	screw 11/64-40X6	1					


F. 1530. 2530 Feed lifting mechanism (Memo:#01 for 1530 #02 for 2530)

Memo	Ref No.	Part NO.	item	Amt Req	Memo	Ref No.	Part NO.	item	Ref No.
	01	#184	screw	1		16	1530F16	lever (right)	1
	02	42C-4	nut 10-143	1		17	Y59-D0X5	screw 15/64-28X5	2
	03	#187	spring	1		18	#122	washer	1
01	04	1530F-4	guide for presser bar	1		19	Y35-D7X7	screw 9/64-40X7	1
	05	Y43-D7X7	screw 11/64-40X7	1		20	1530F-20	sconnecting rod L=200	1
	06	Y59-D0X7	screw 15/64-28X7	1		21	1530F-21	spring	1
	07	1530F-7	presser foot lift bar	1		22	1530F-22	Pin	1
	08	1530F-8	presser foot lift	1		23	1530F-23	lever (left)	1
	09	1530F-9	presser bar	1		24	1530F-24	thread releasing cam	1
	10	#202	dushing for presser bar	1		25	1530F-25	thread releasing lever	1
01	11	1530F-11	presser	1		26	1530F-26	SM5/64-28X7.5	
	12	1530F-12	screw 3/16-28X5 341F-25	2		27	Y35-LM6X3	Nut 9/64-40X3	1
	13	Y43-D9X7	screw 11/64-40X7	1		28	1530F-28	thread guide	1
	14	1530F-14	knee lifter drawing bar	1	02	29	2530F-29	Guide for presser bar	1
	15	1530F-15	knee lifter drawing lifter bar	1	02	30	2530F-30	presser foot	1

G. 2530

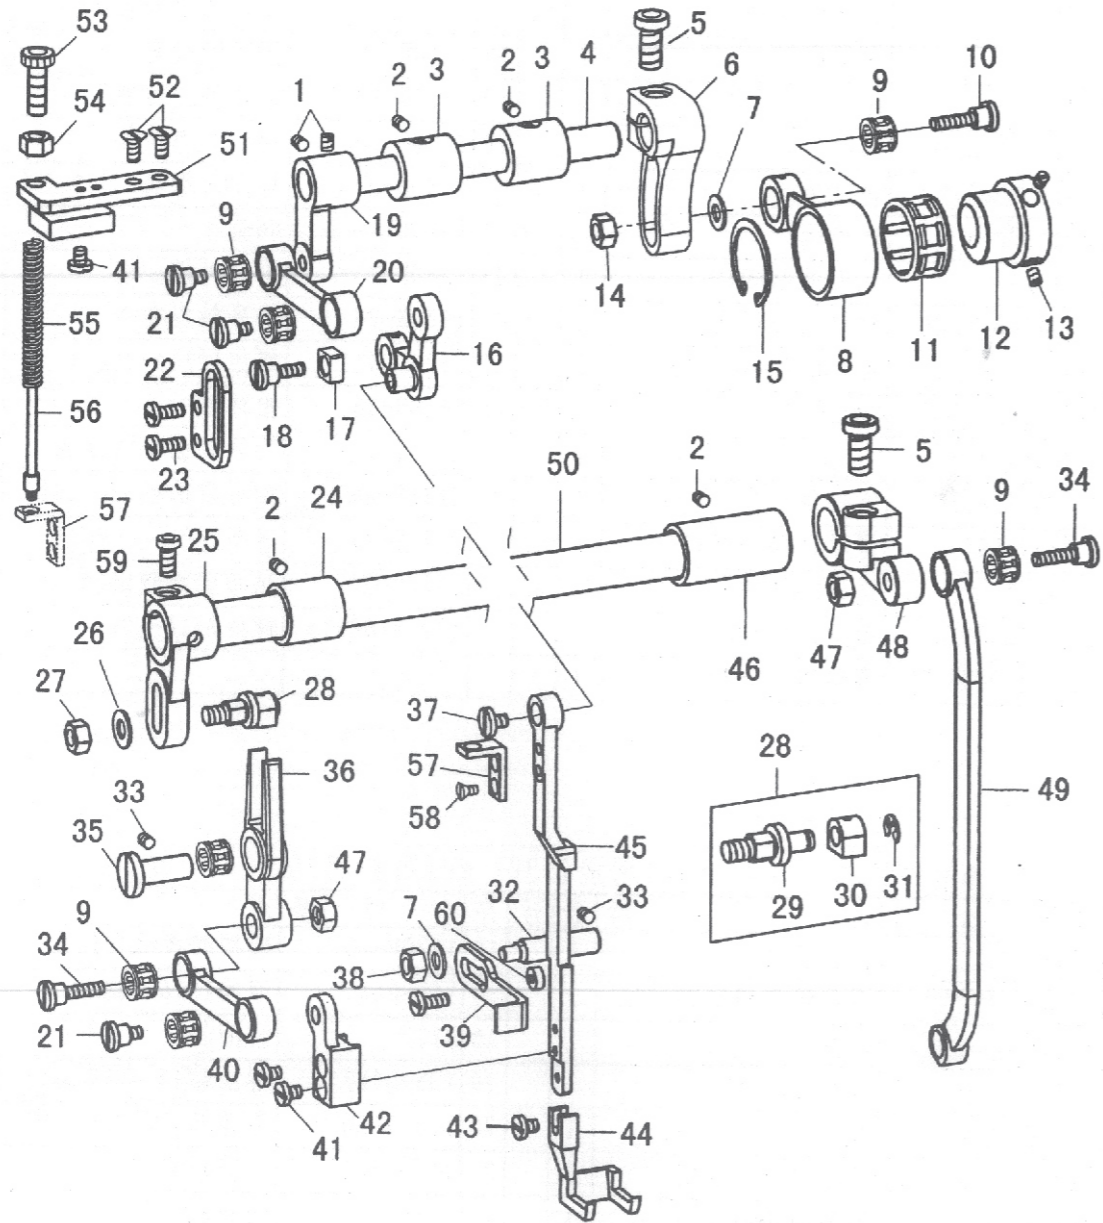

H.

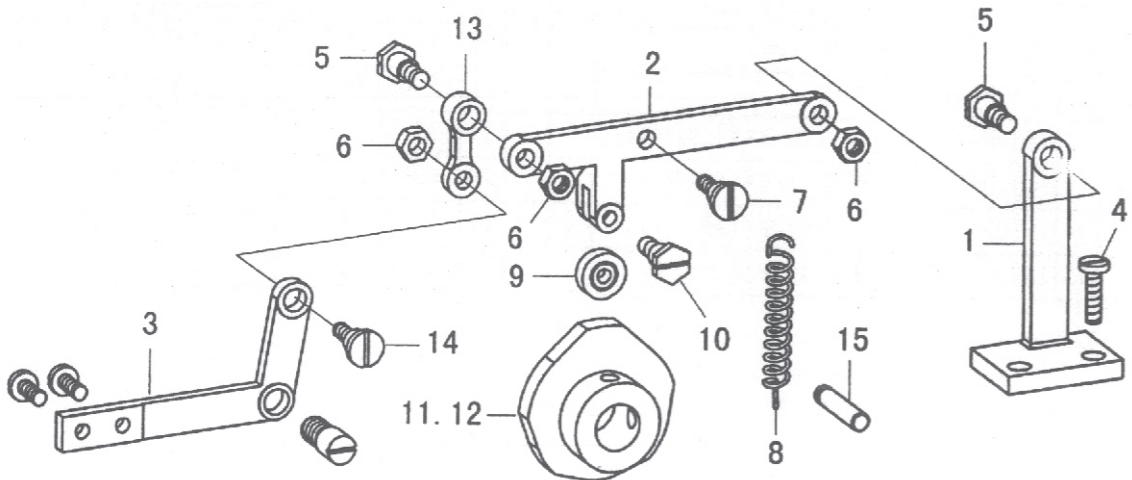

1 800 268 1649
www.reliablecorporation.com